









איזו גלייז™ איזי BH

הוראות התקנה

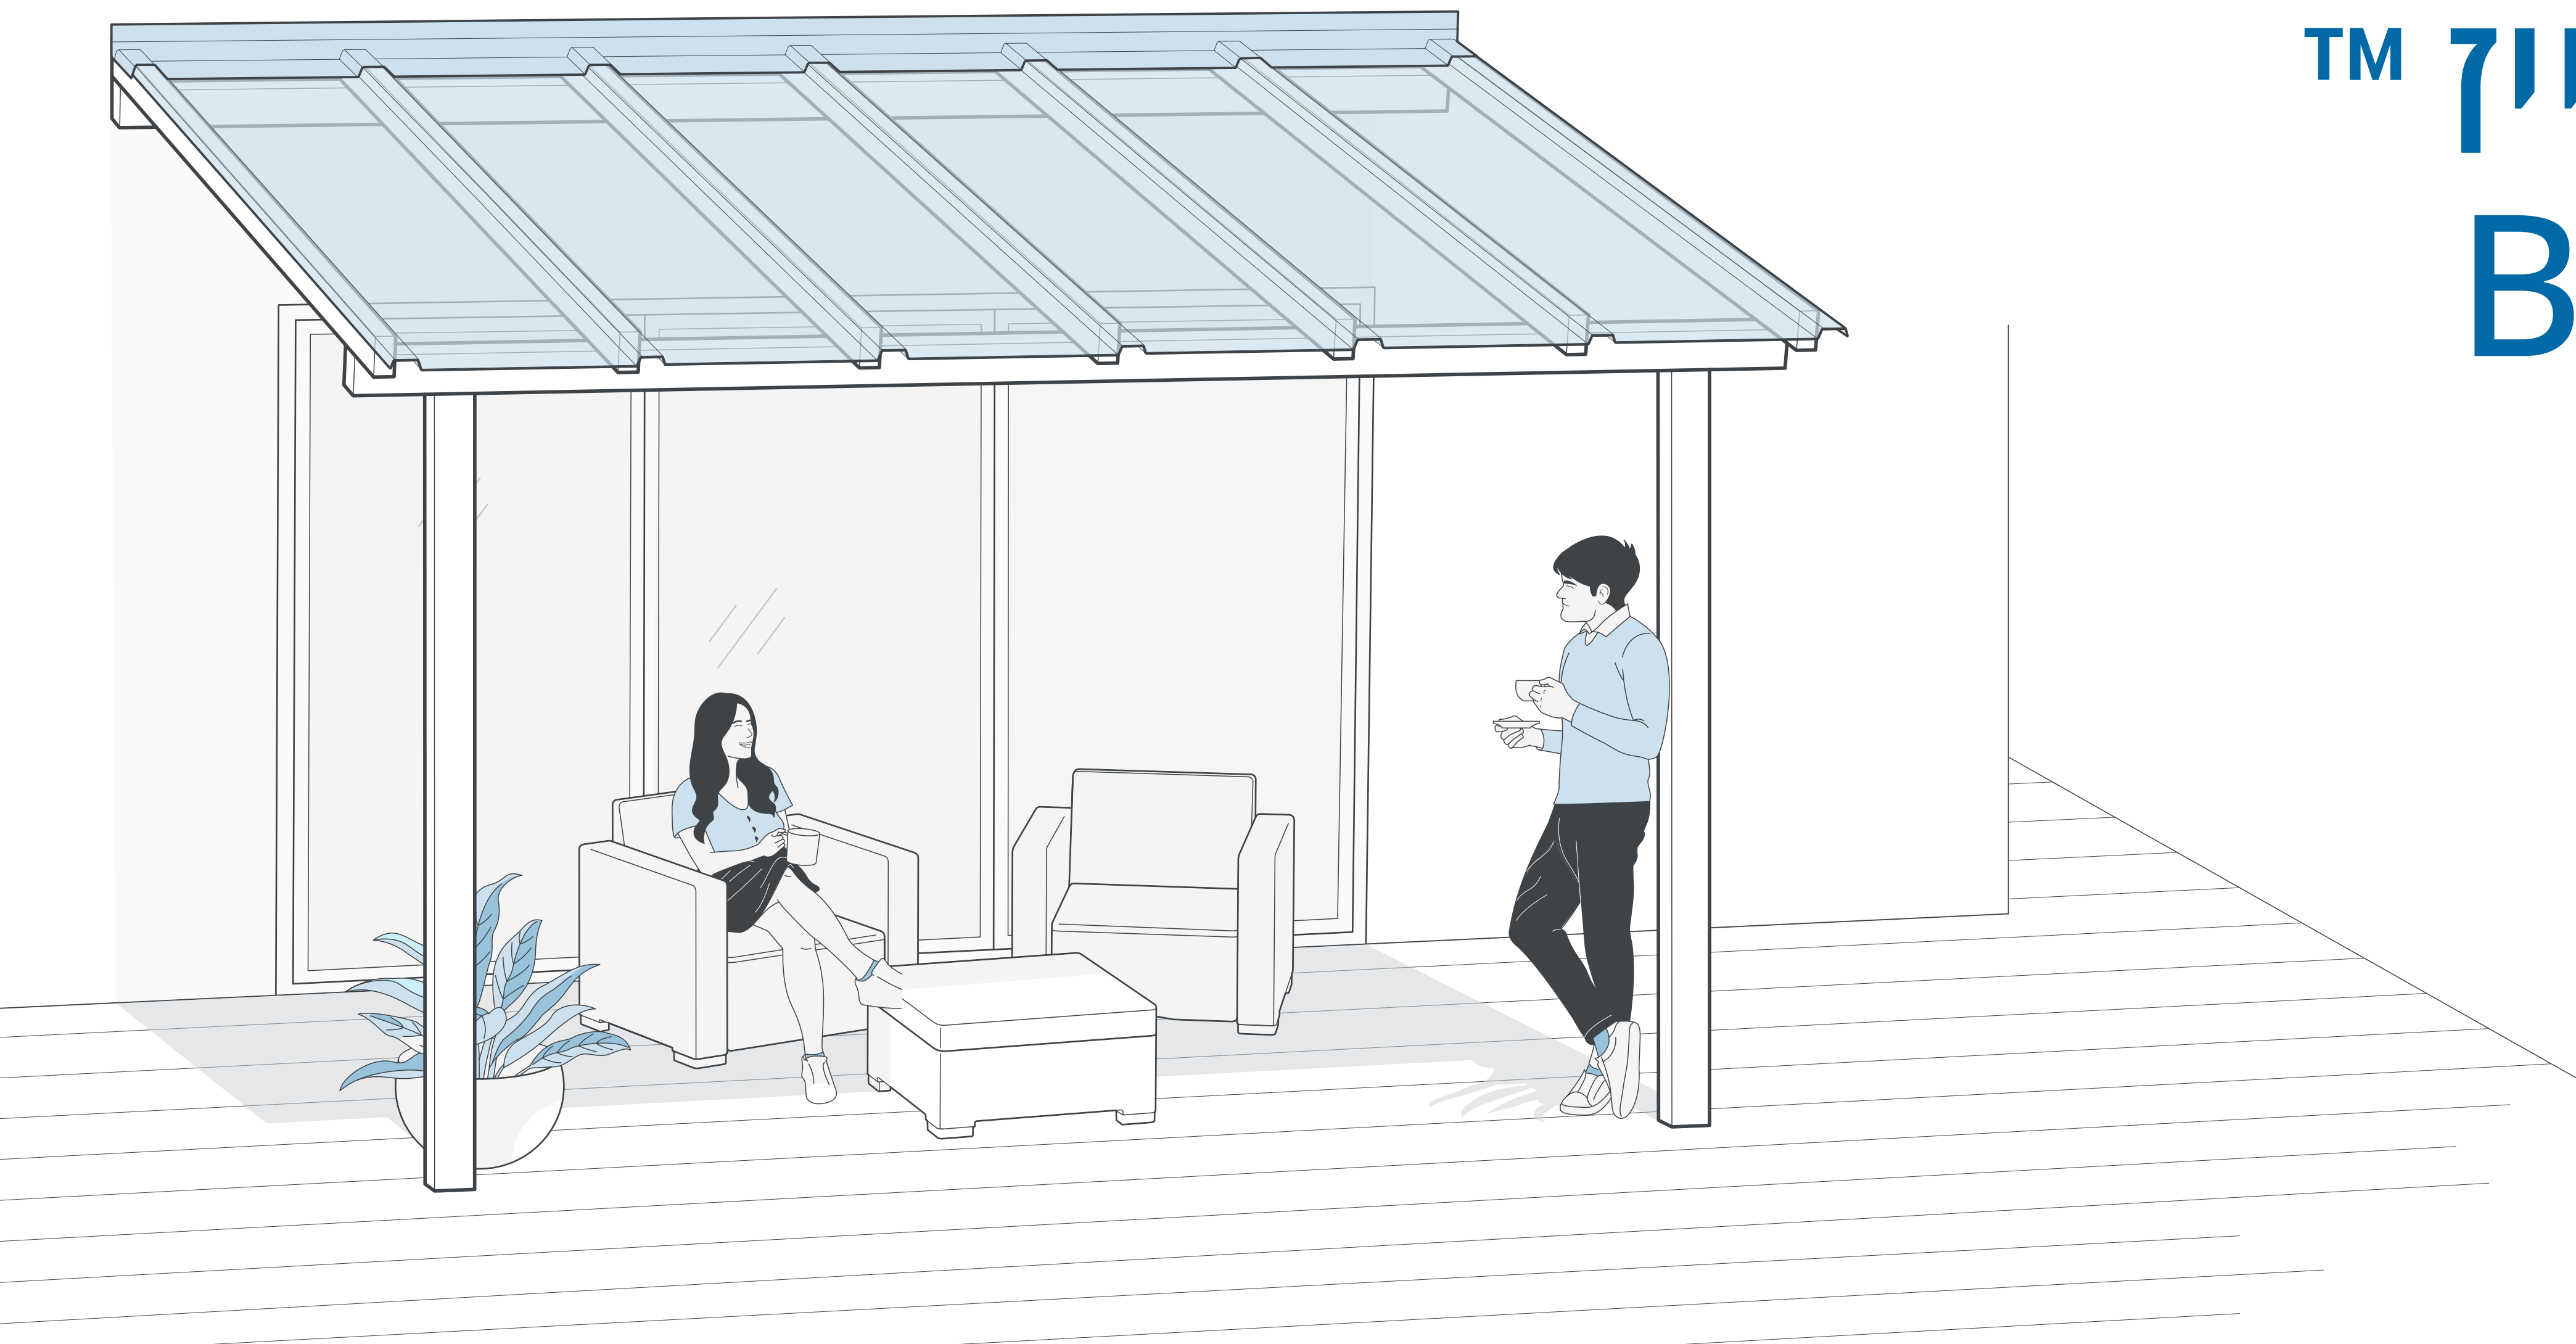








ציוד בטיחות מומלץ

כלי עבודה

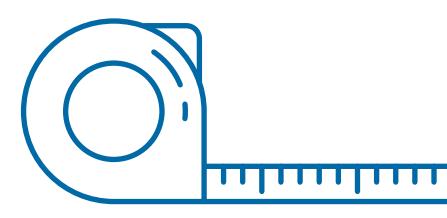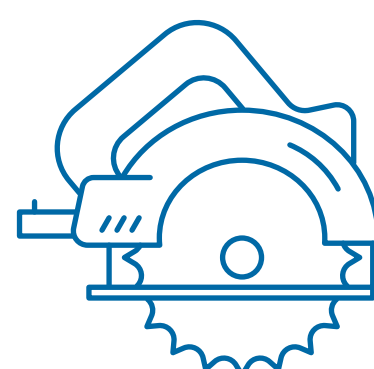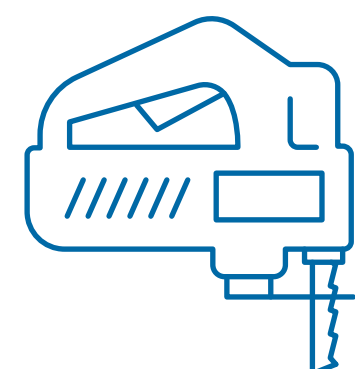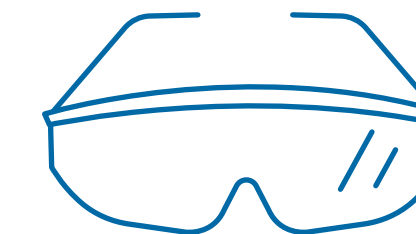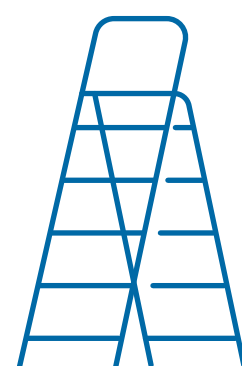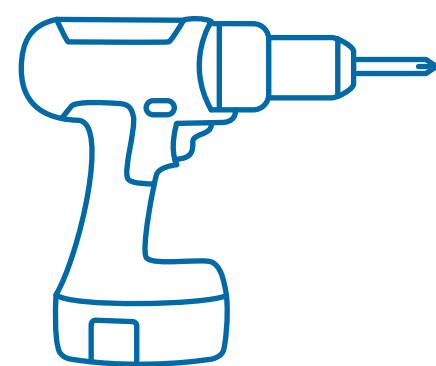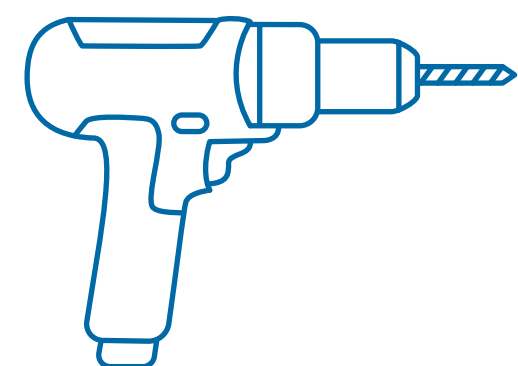


לפני התקנה


אביזרים נדרשים

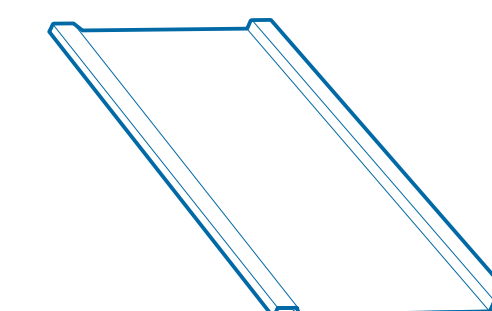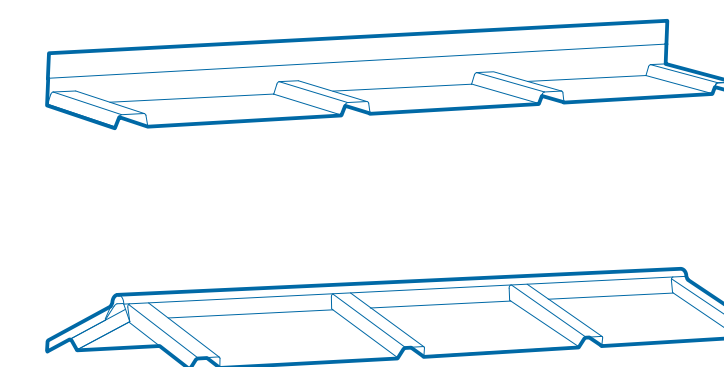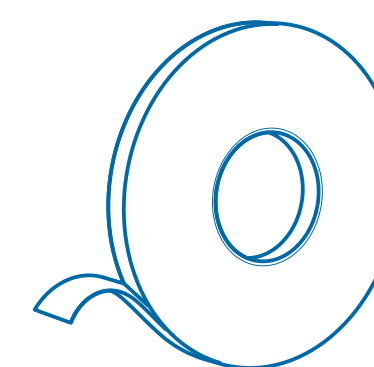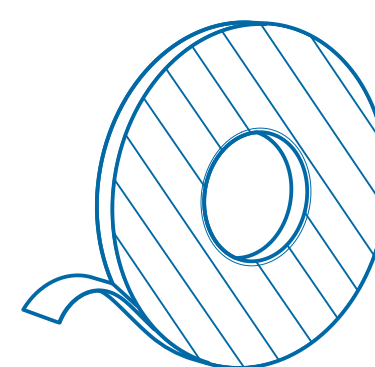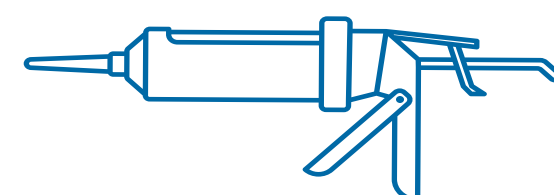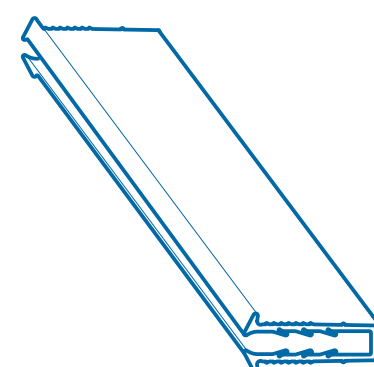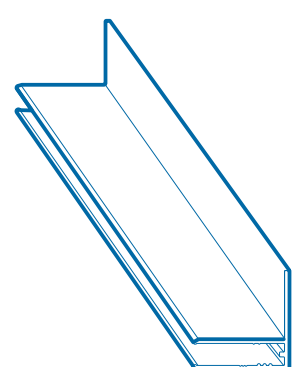

בורג להתקנה במתכת
(50X6.5 מ"מ) 2" X ¼"
עם אטם 25 מ"מ


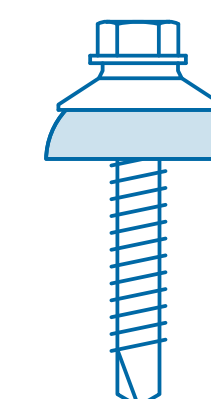


בורג להתקנה בעץ
(50X6.5 מ"מ) 2" X ¼"
עם אטם 25 מ"מ

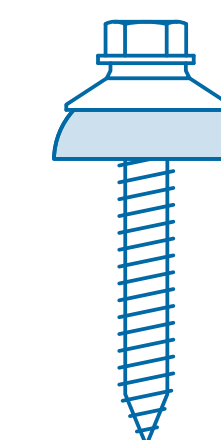



נמכר בנפרד (לא ע"י פלרם)

רדיוס הקשתה מינימאלי

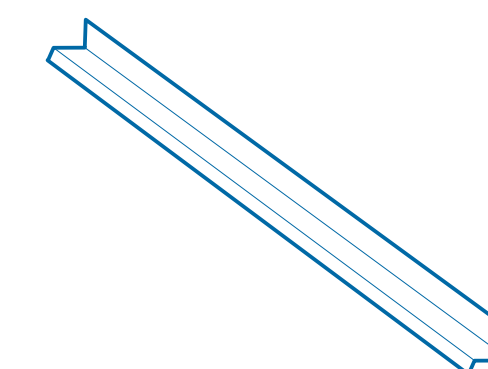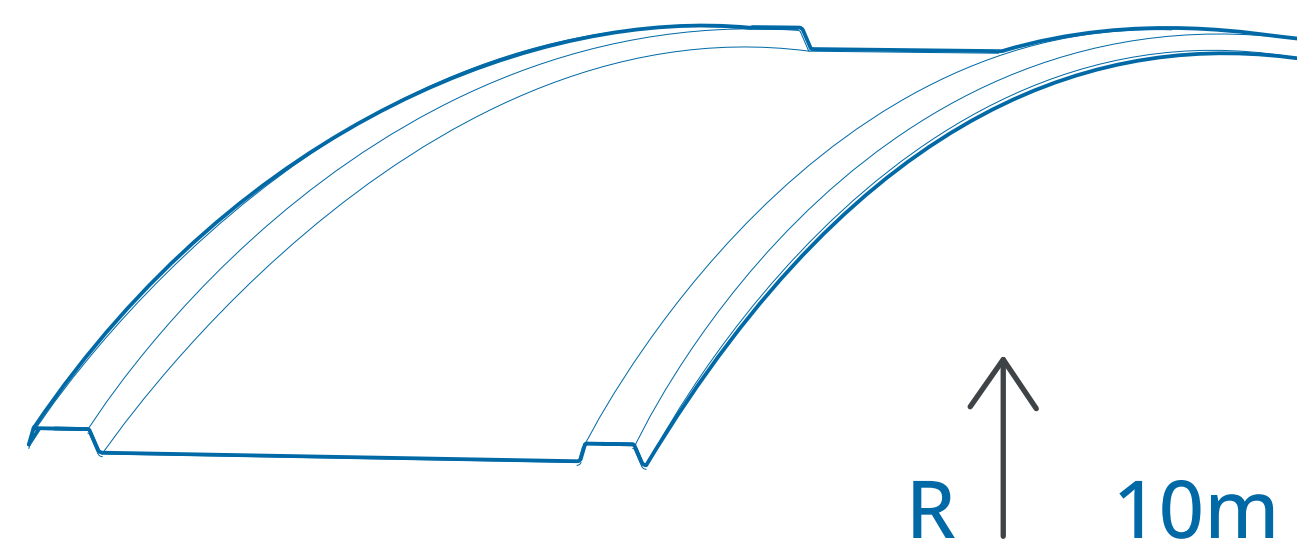


התאמת פרופילים


שיפוע מינימאלי

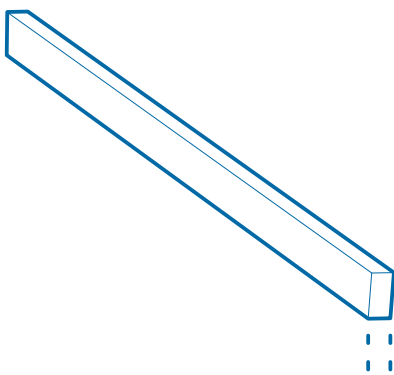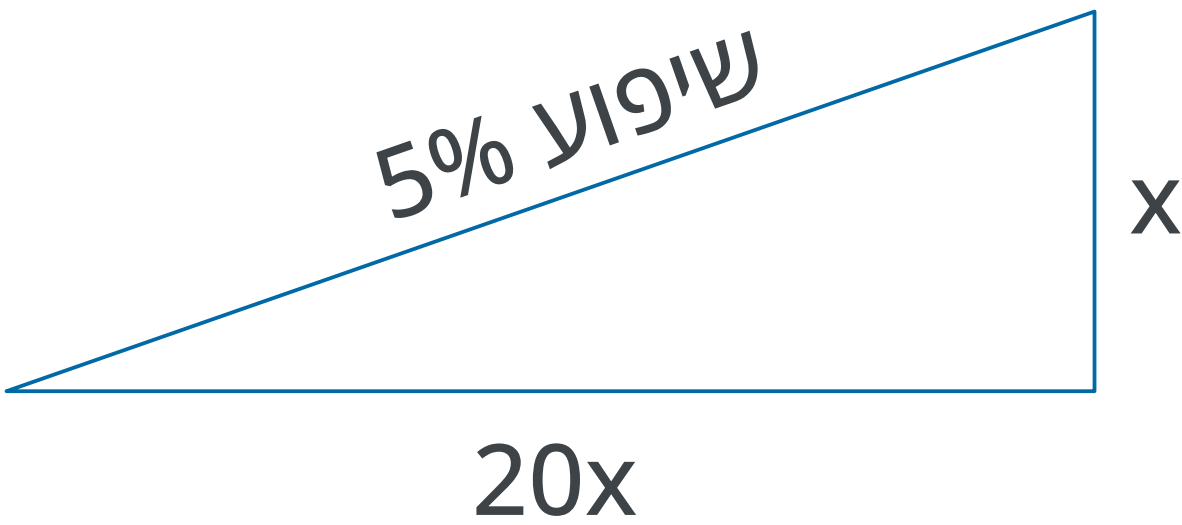

40 - 50 מ"מ

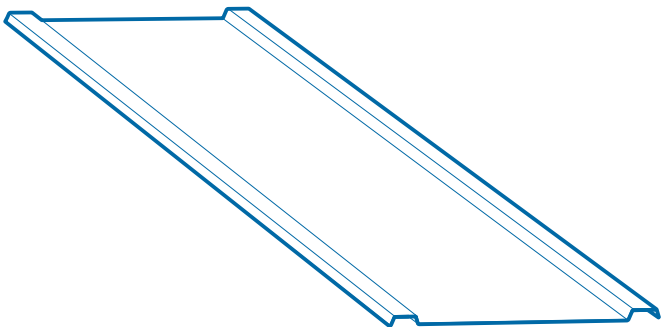

איזוגלייז 50

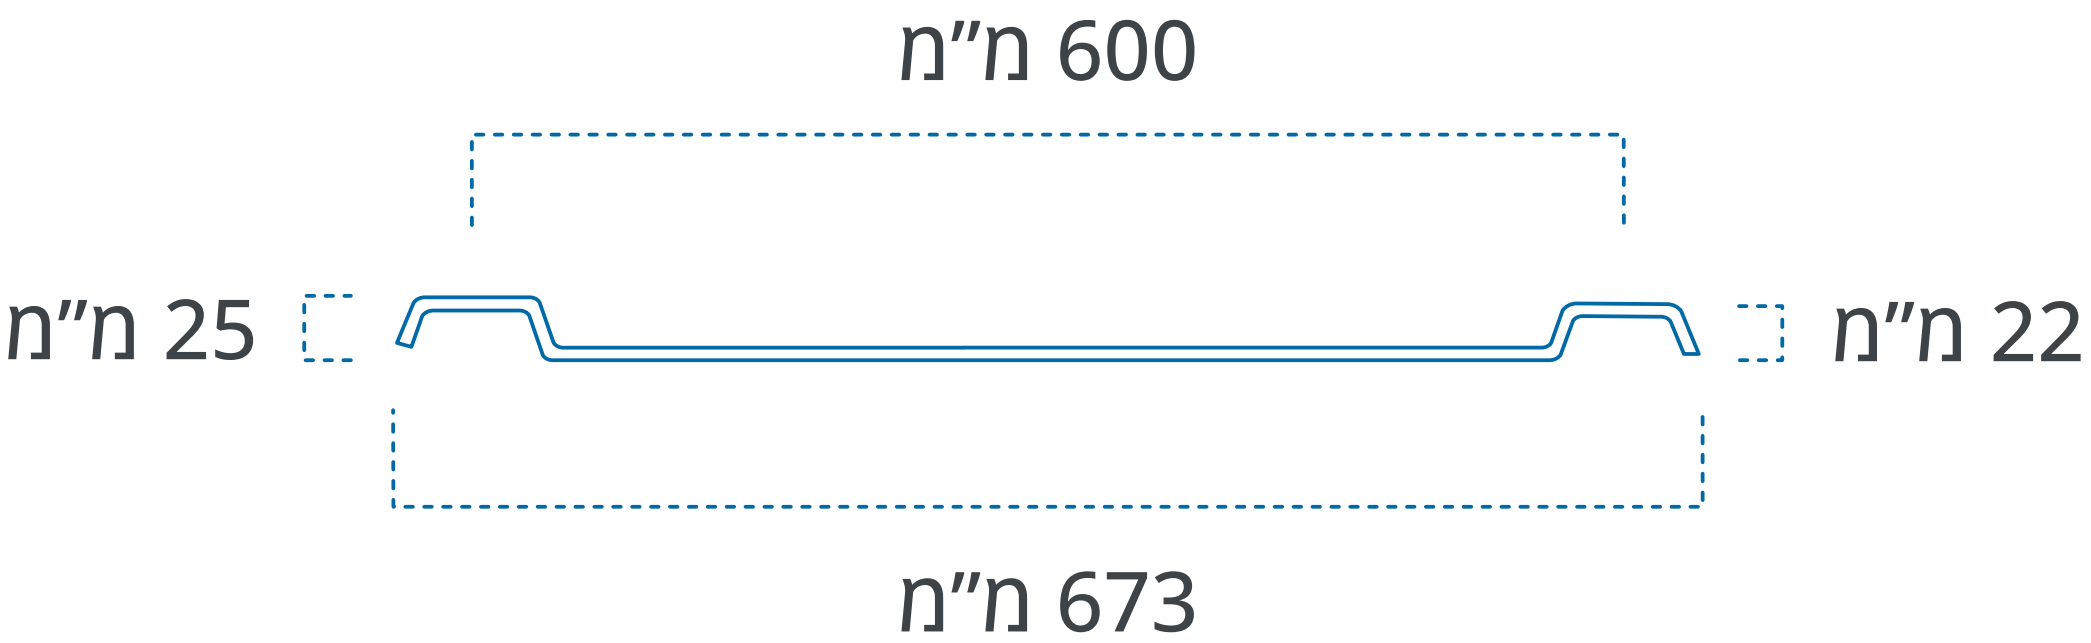


לפני התקנה

אופן ההתקנה

התקנה על מרישים
(קורות רוחב)




1300 מ"מ
מקסימום

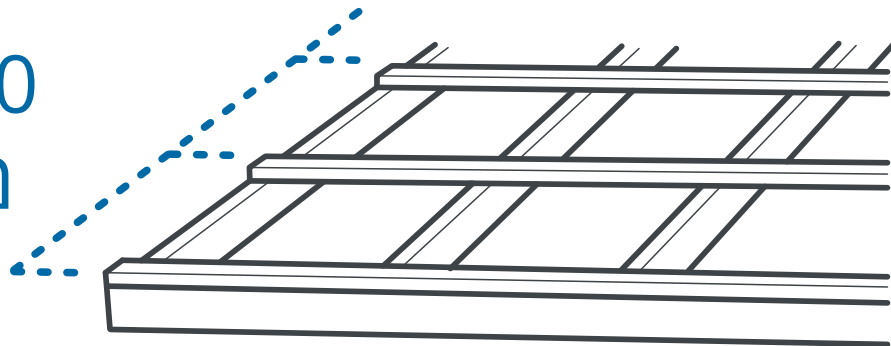


התקנה על מרישים
(קורות רוחב)




1000 מ"מ
מינימום

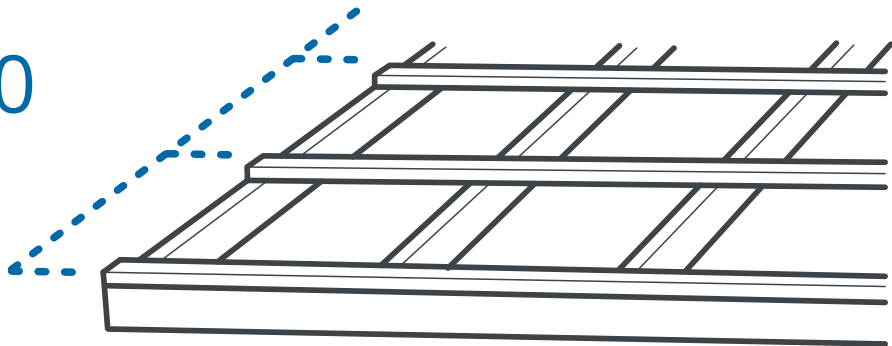


התקנה על אנדים
(קורות אורך)

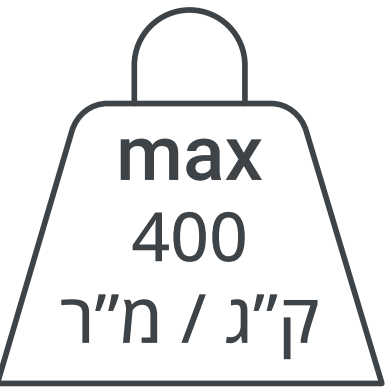


600 מ"מ

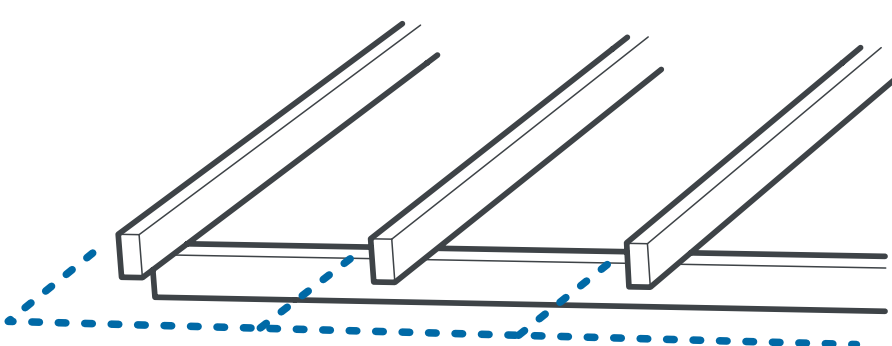



← מעל 10 לוחות →


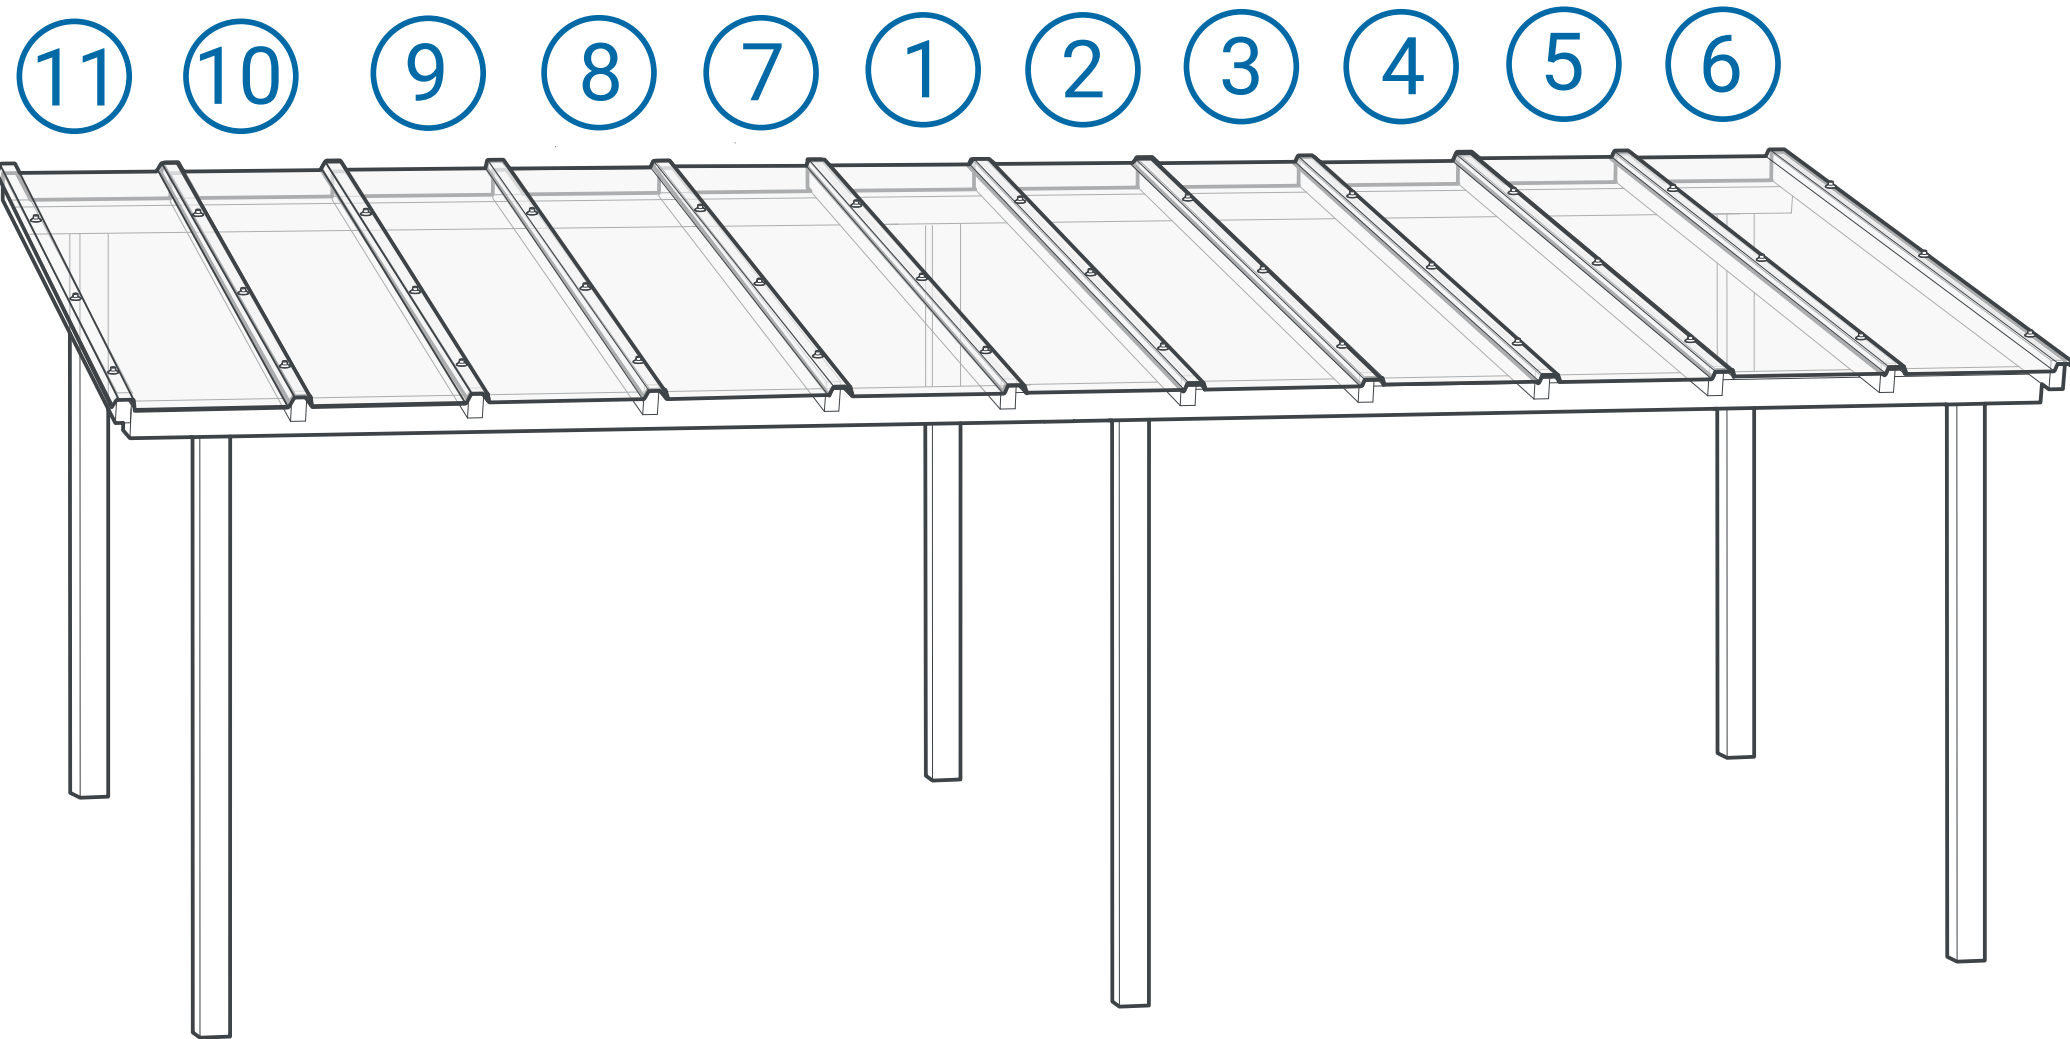



עד 10 לוחות →

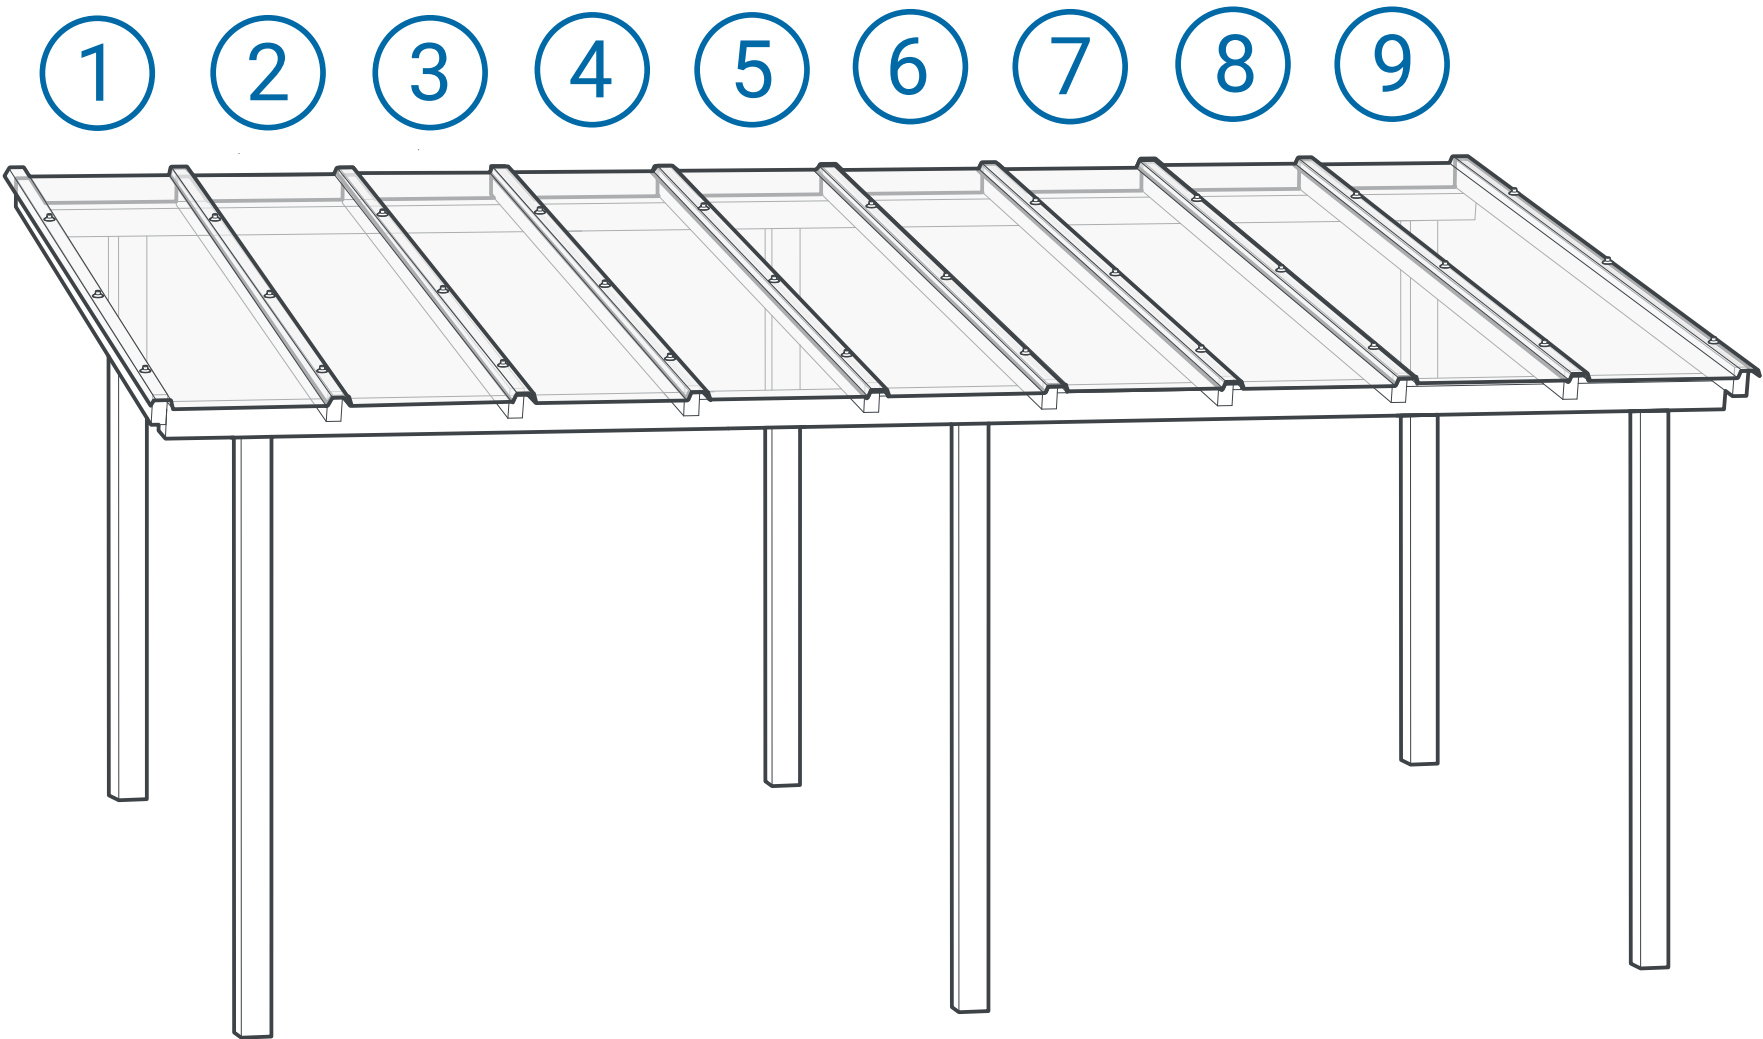



אפשרויות קונסטרוקציה בהתקנה

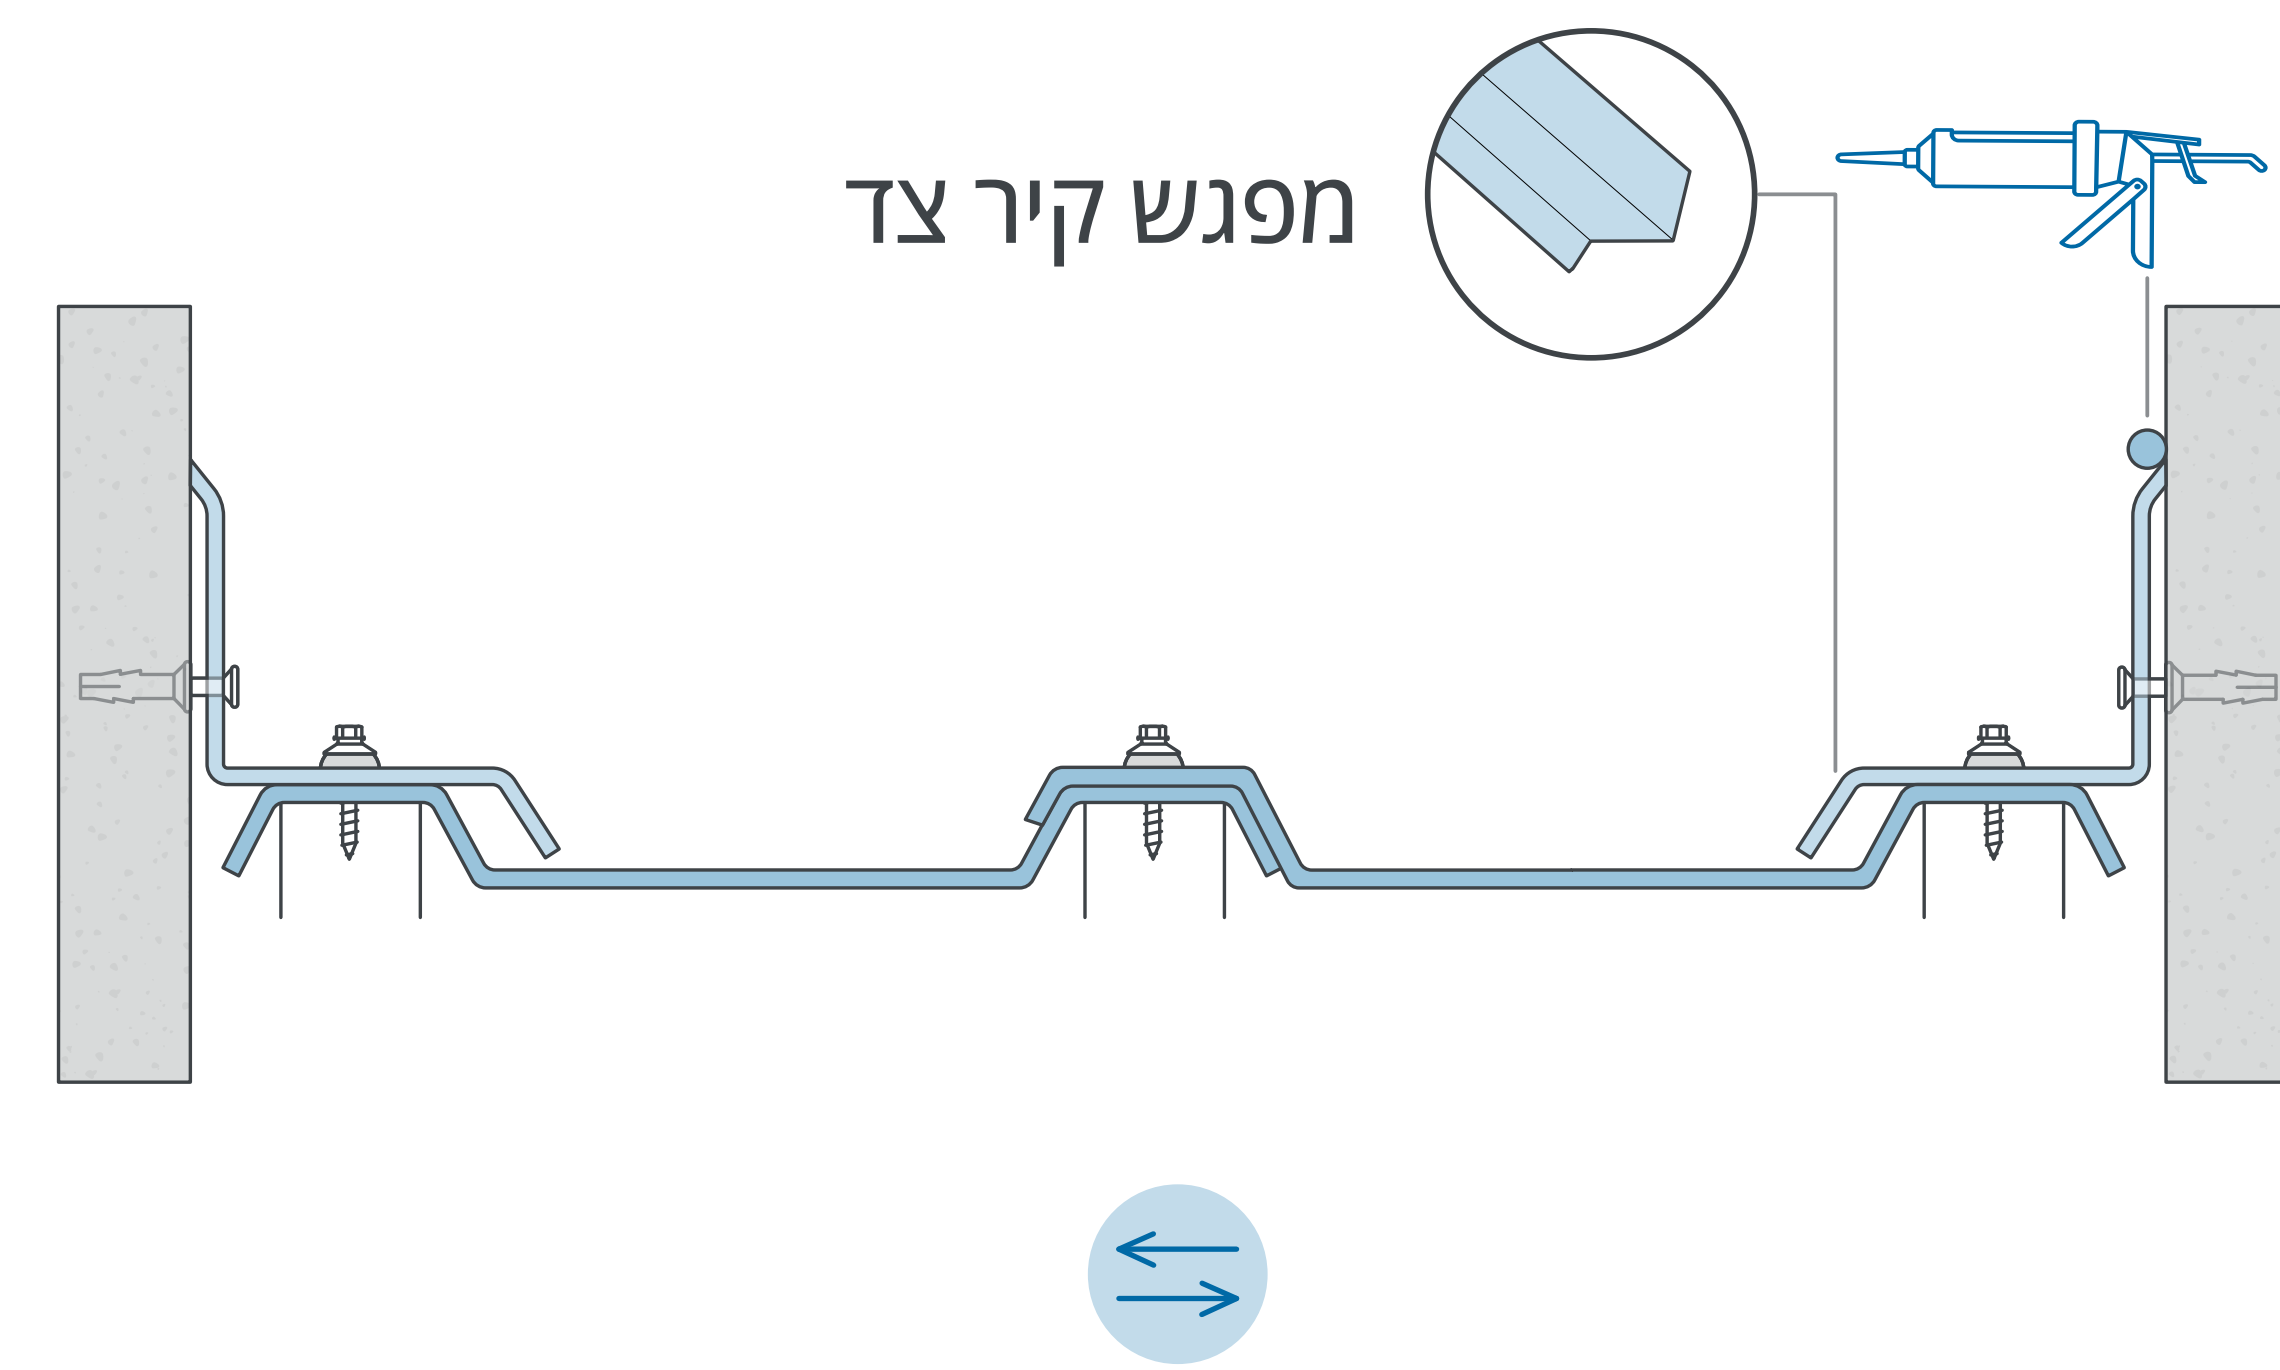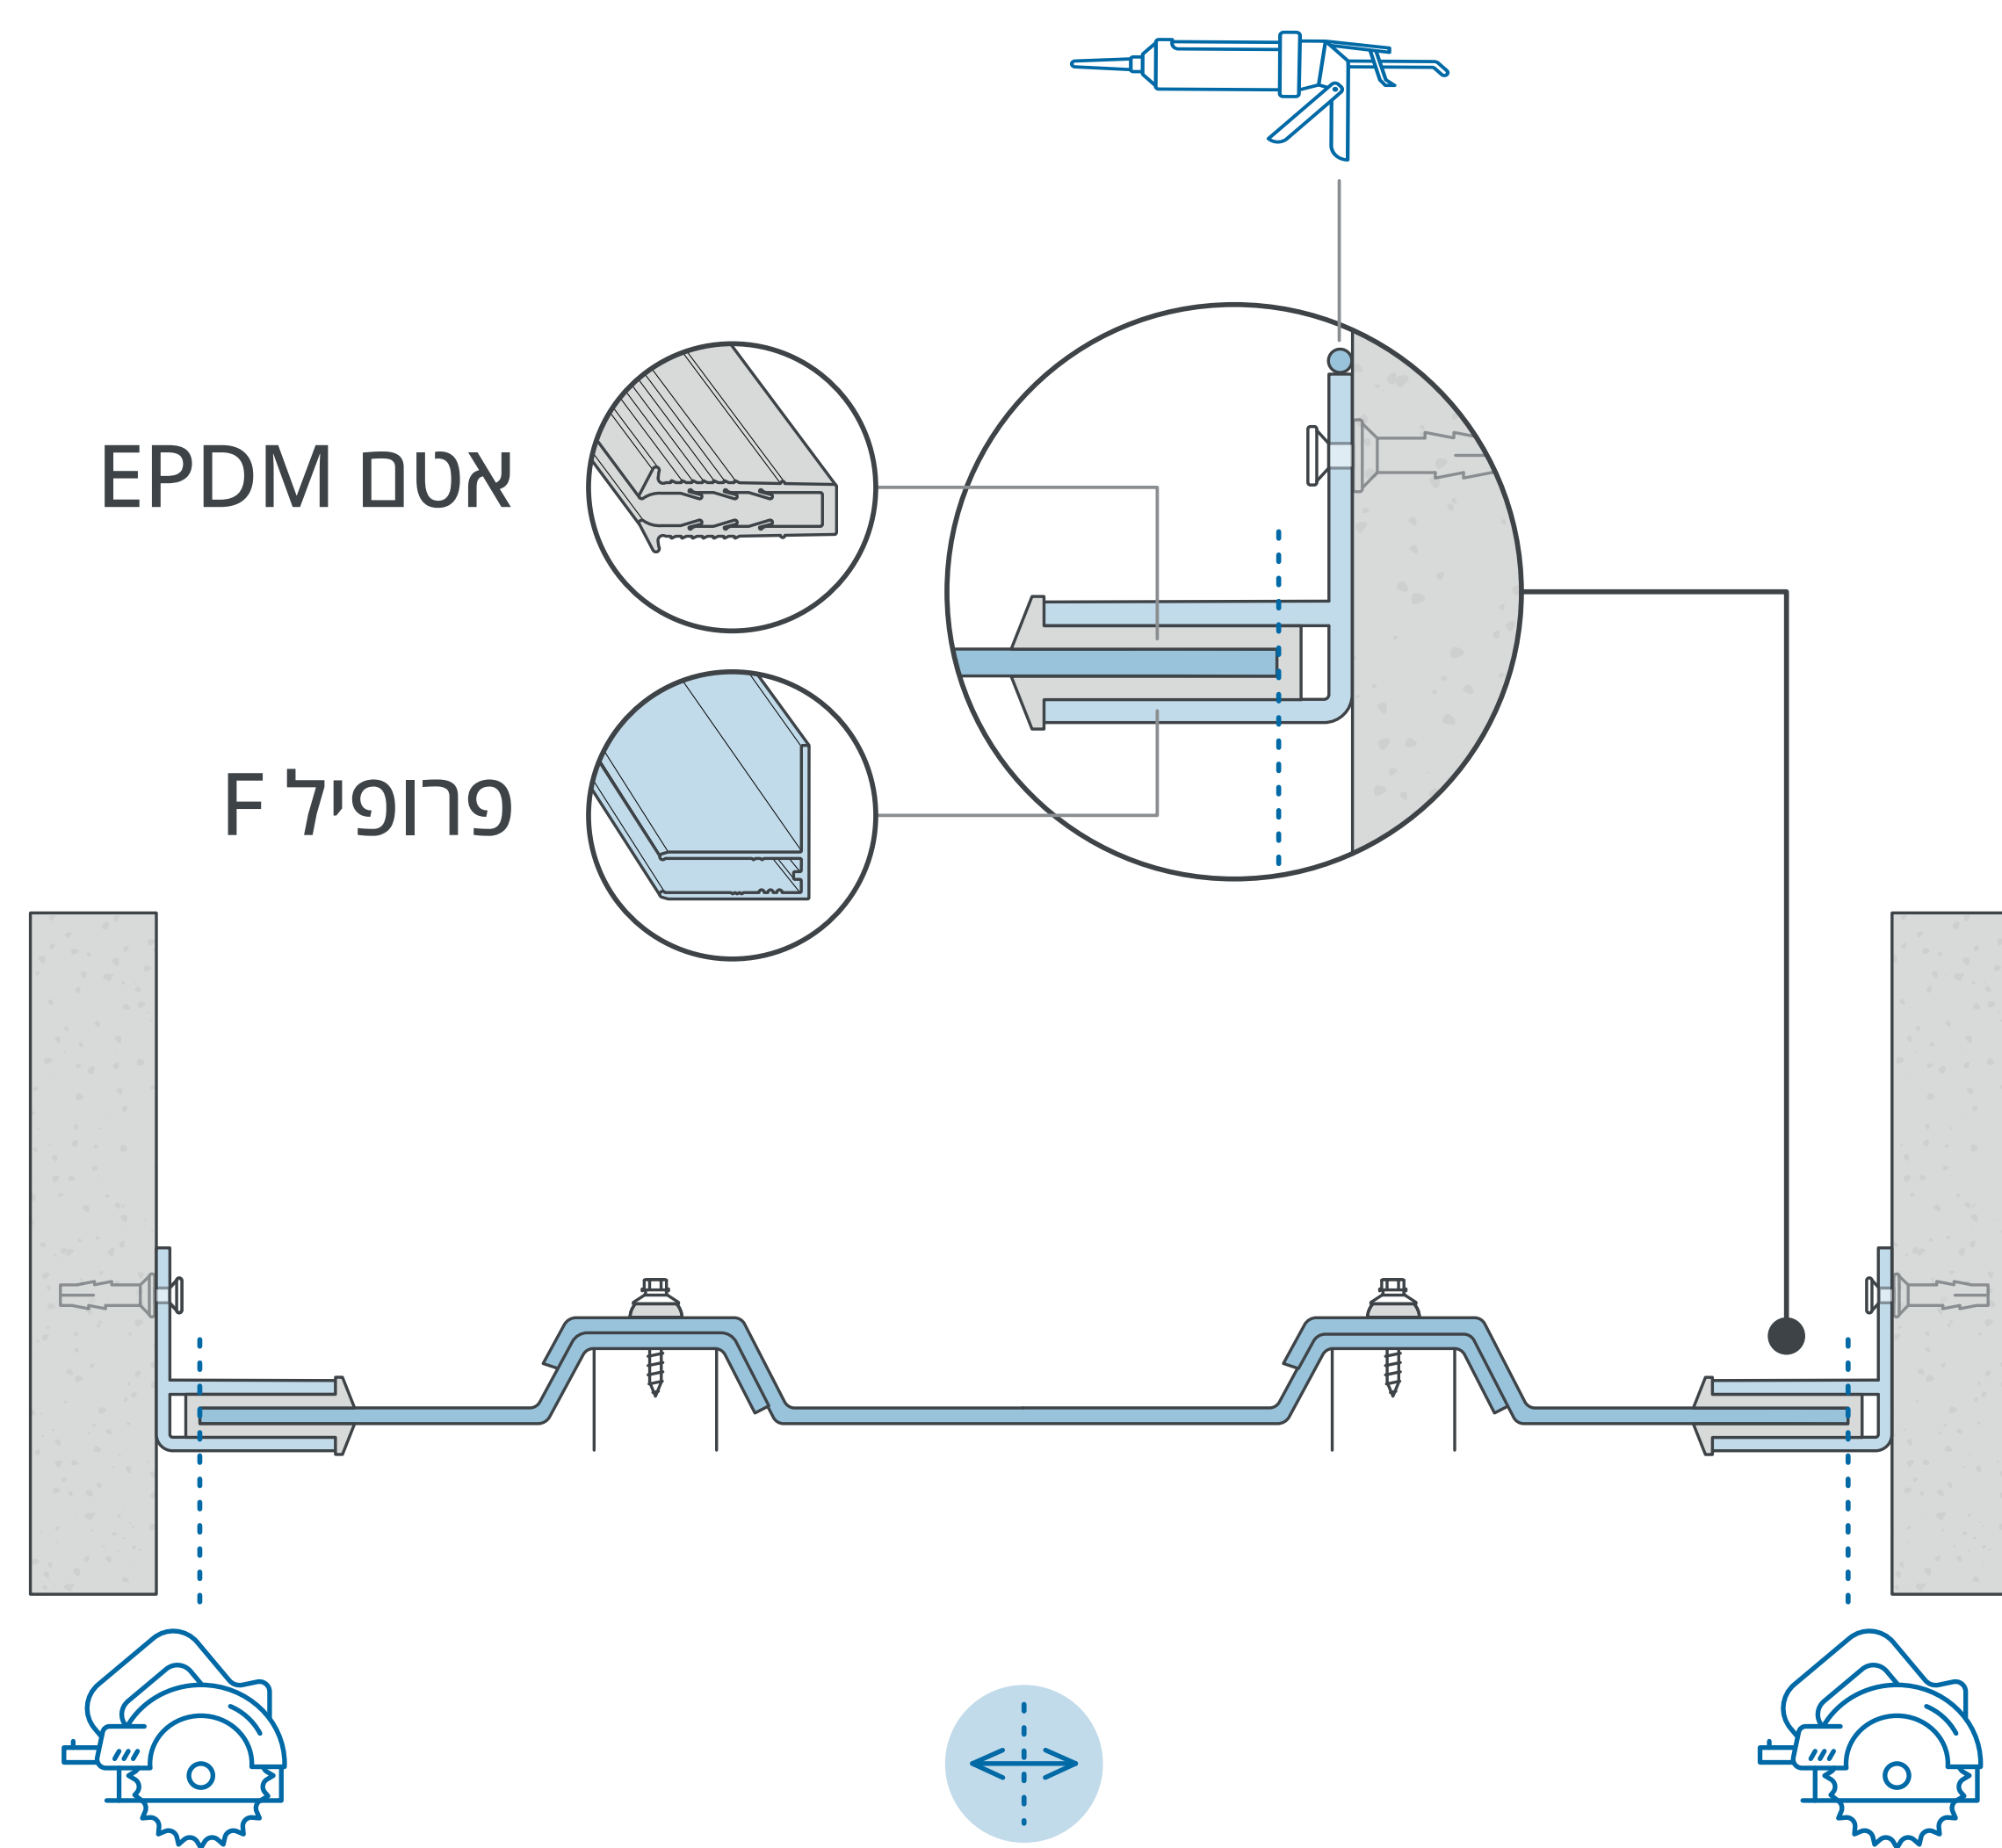

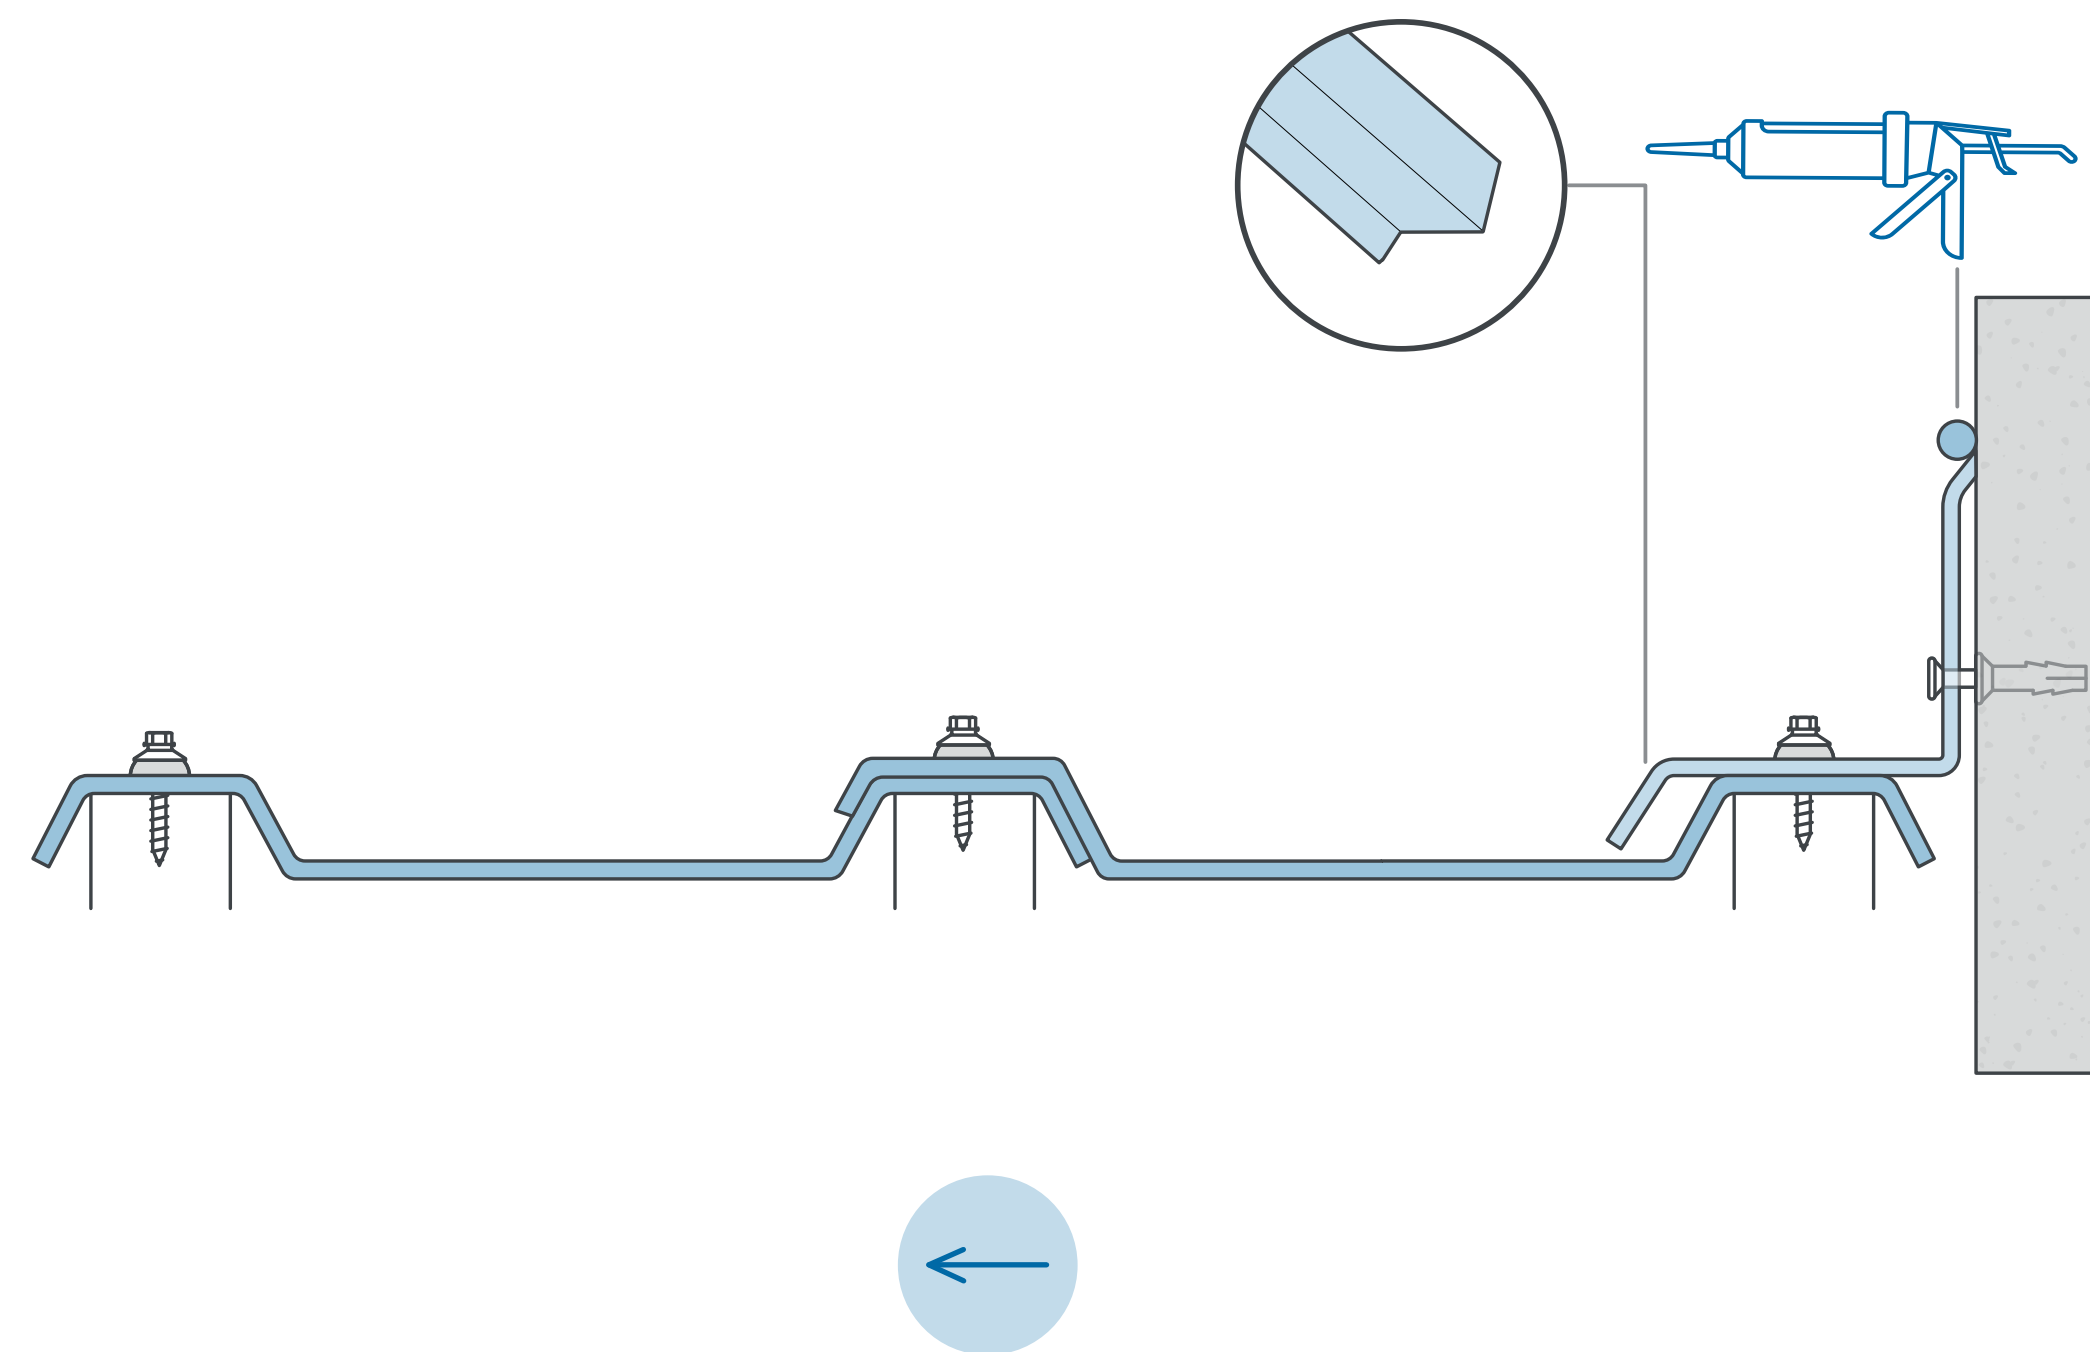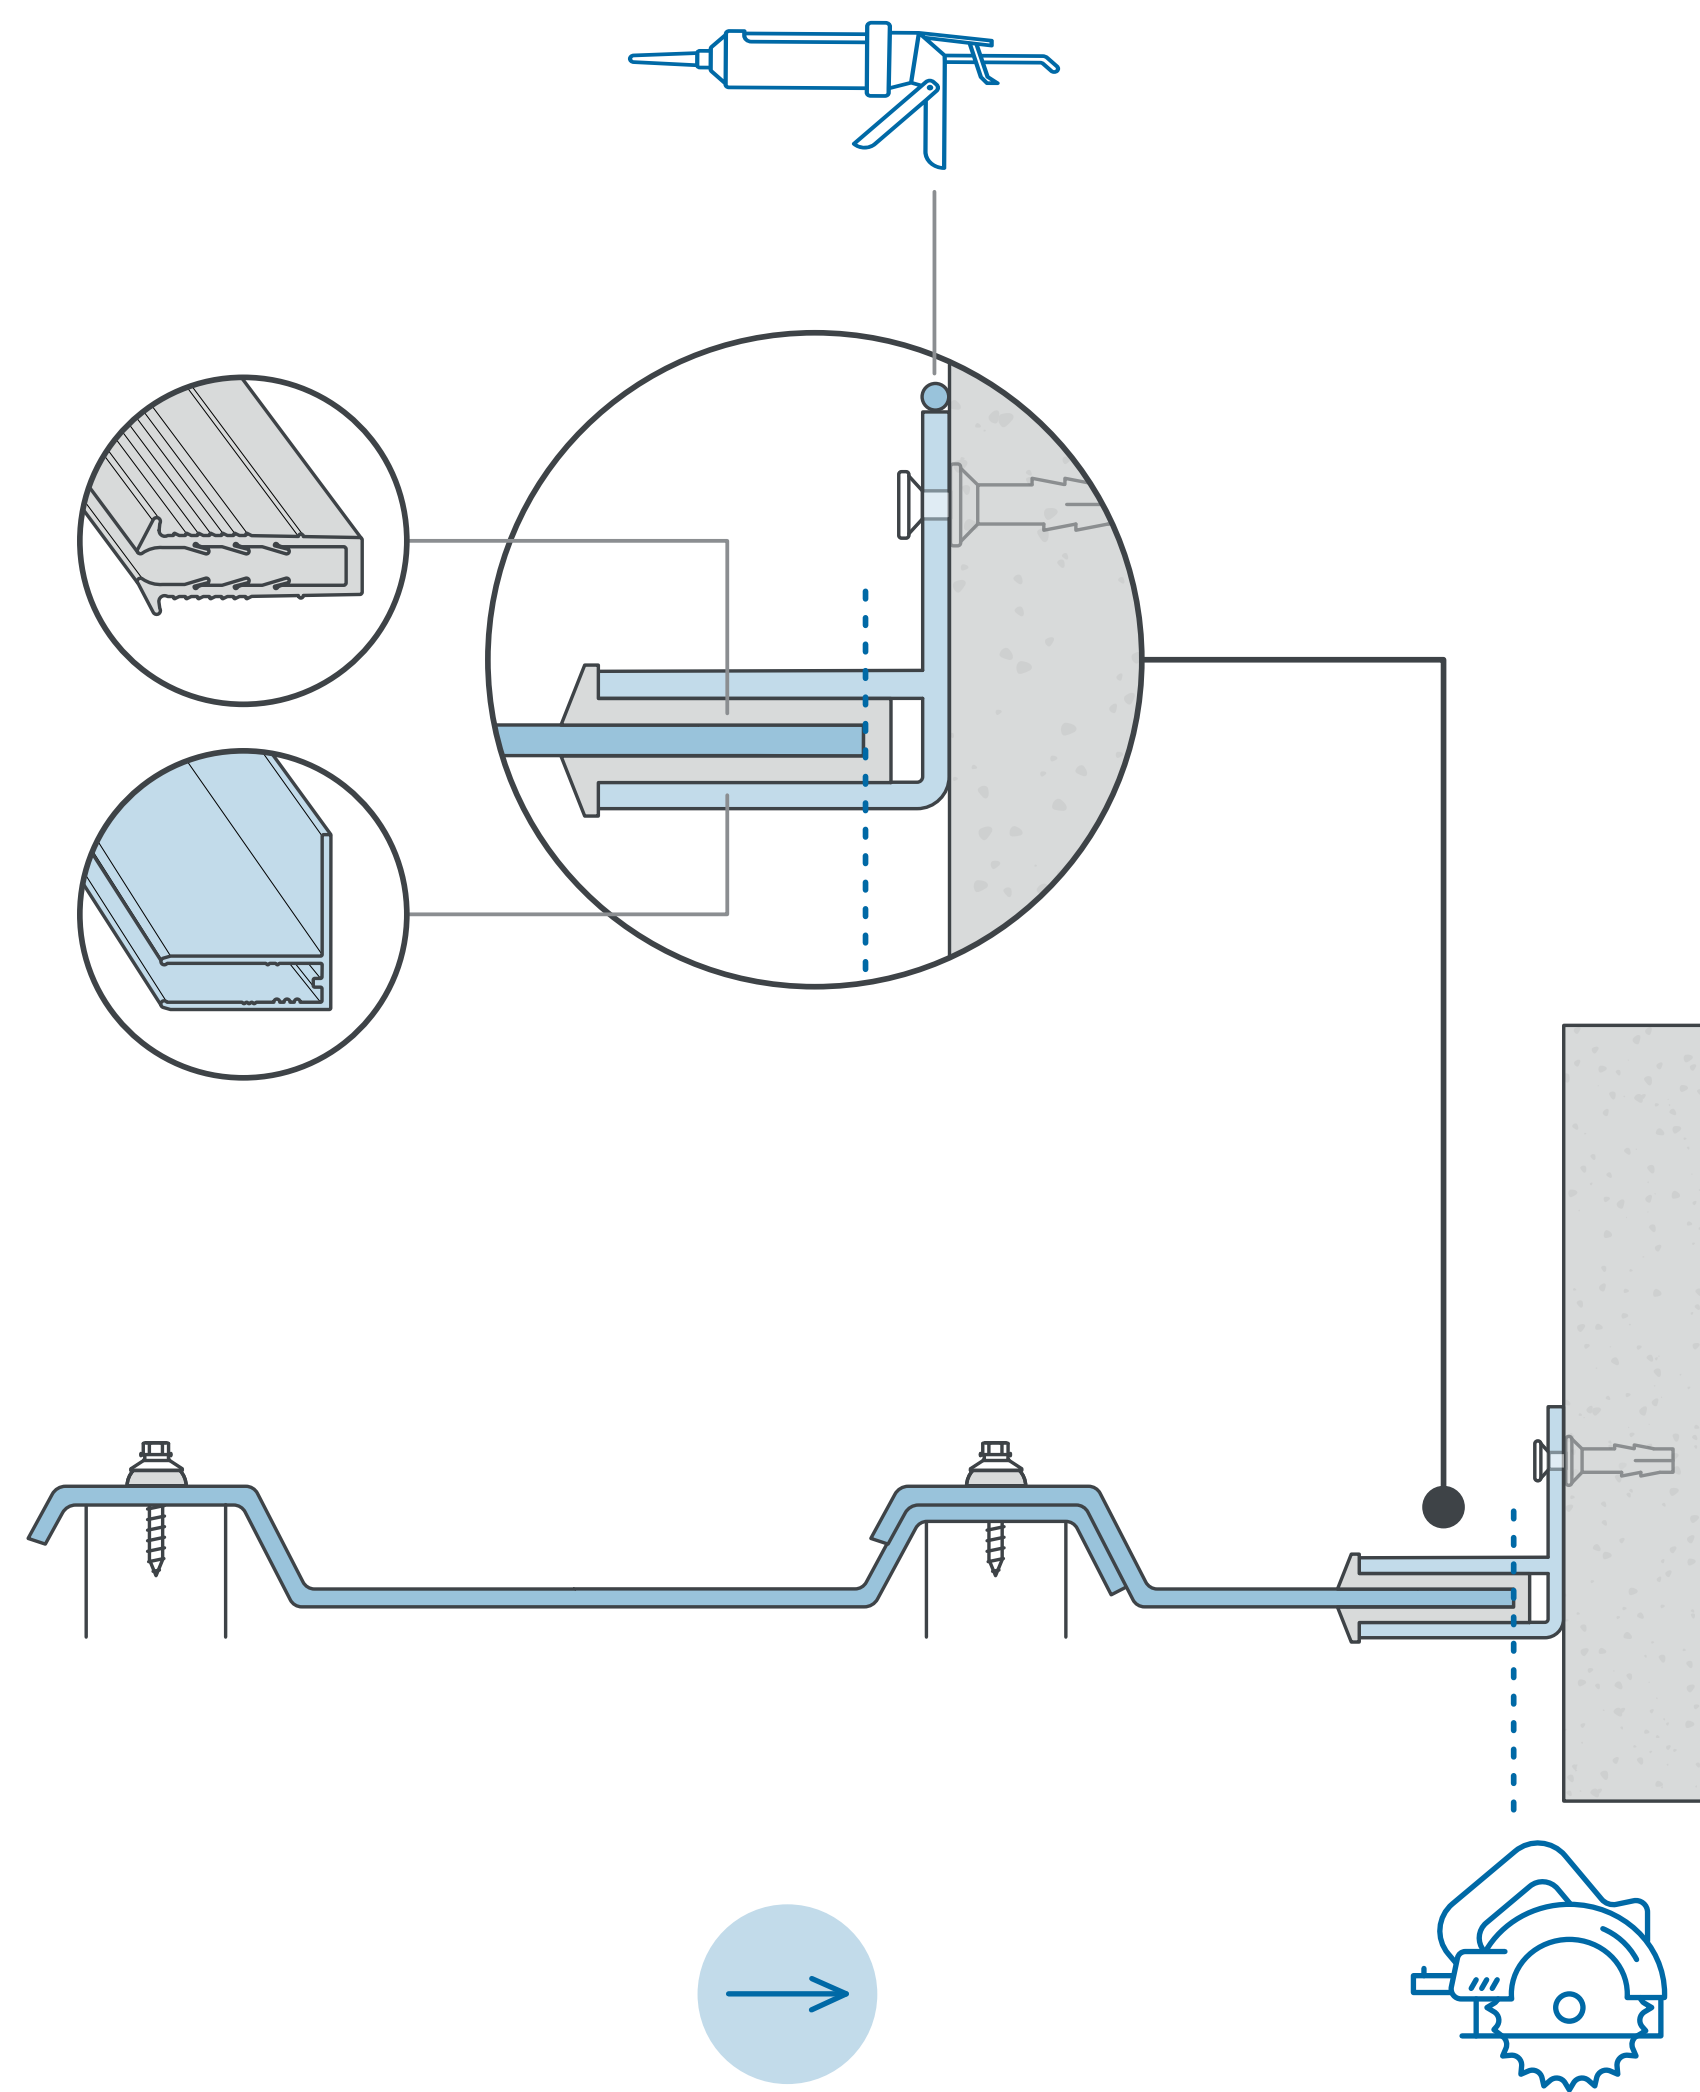


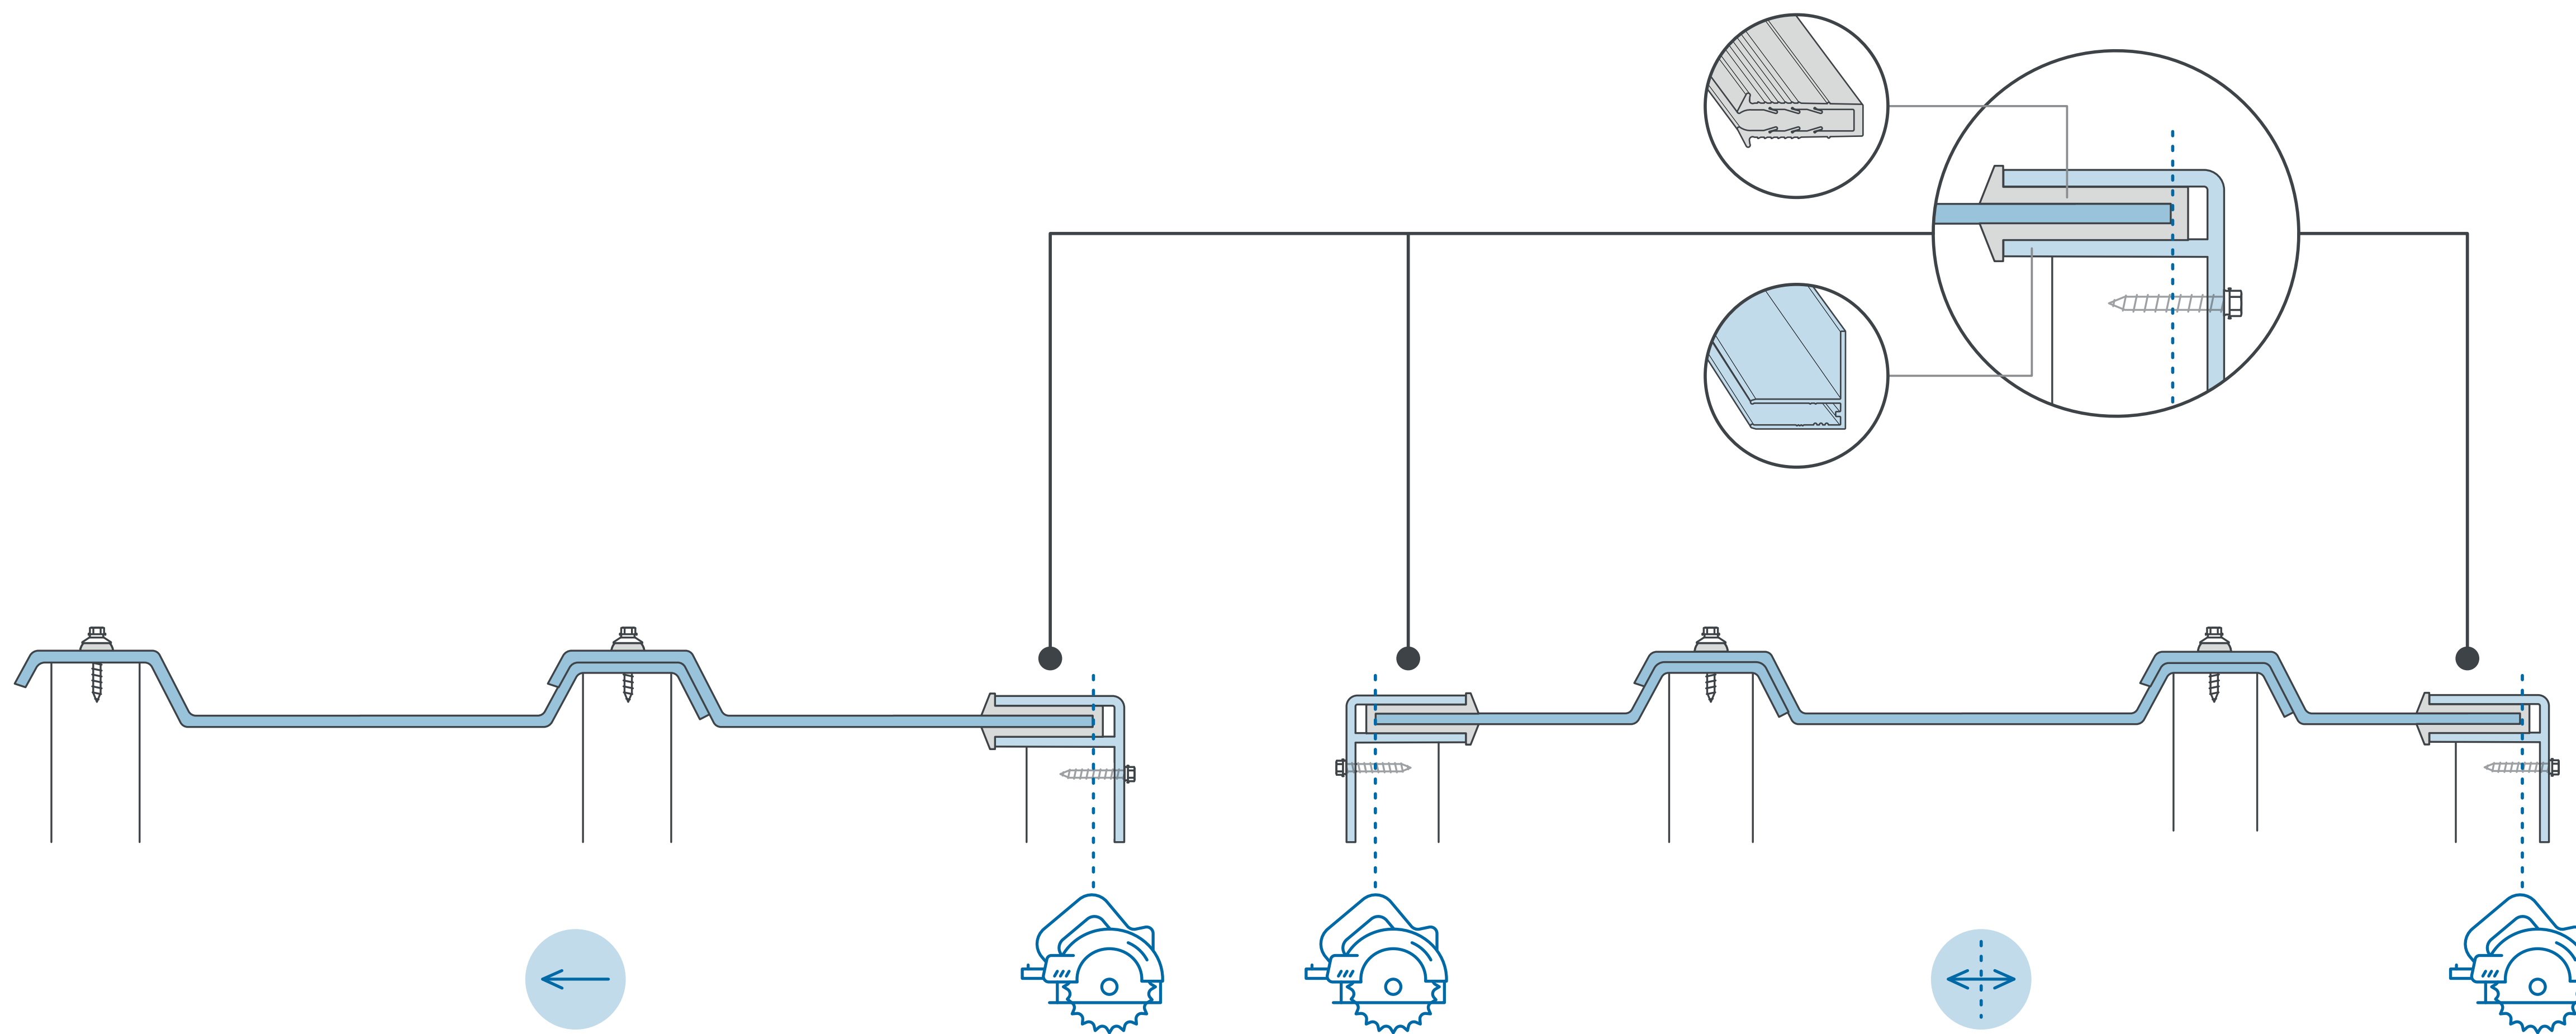



אין לדרוך על הלוחות בין הקורות!
בעת ההתקנה של לוחות איזיגלייז, או בעת עבודות ניקיון ואחזקה, הקפידו תמיד להשתמש בסולם דריכה או במשטח עבודה בטיחותי הנתמכים על ידי לפחות 3 נקודות תמיכה קונסטרוקטיביות.

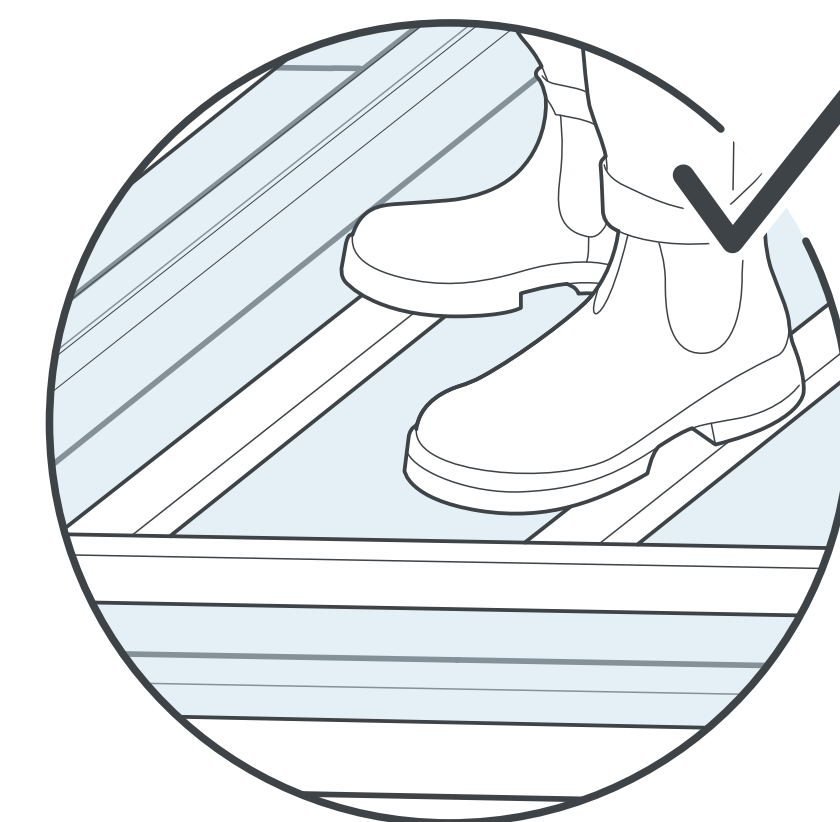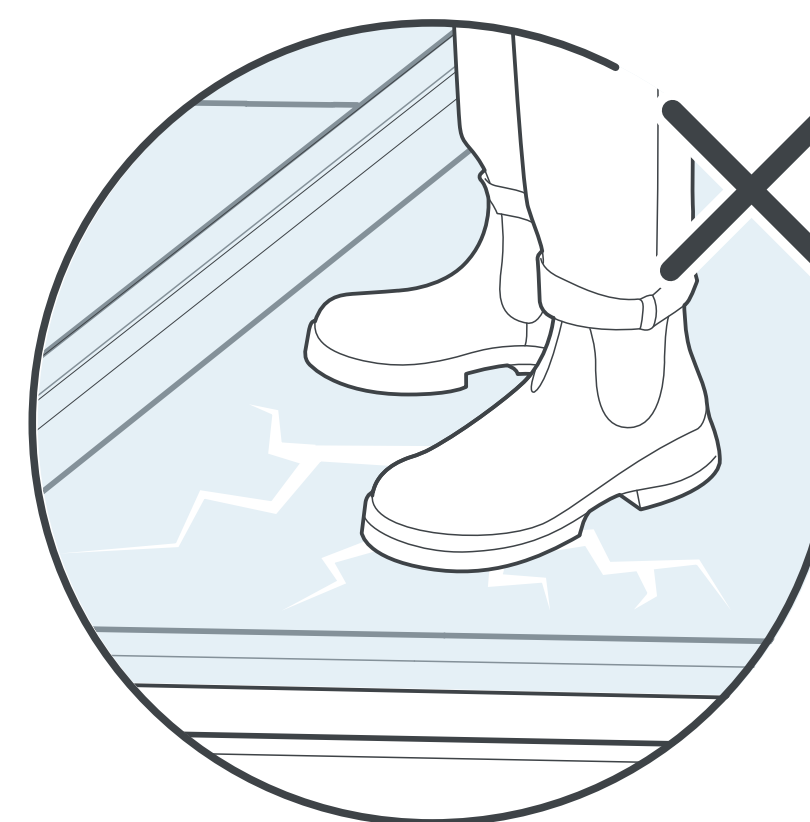


01


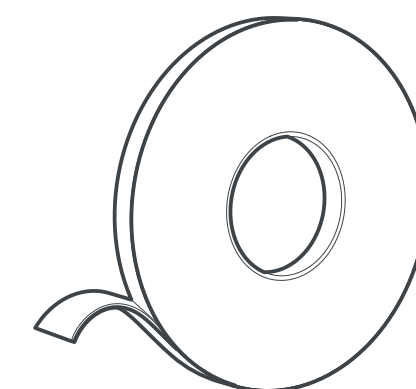


סרט מבודד


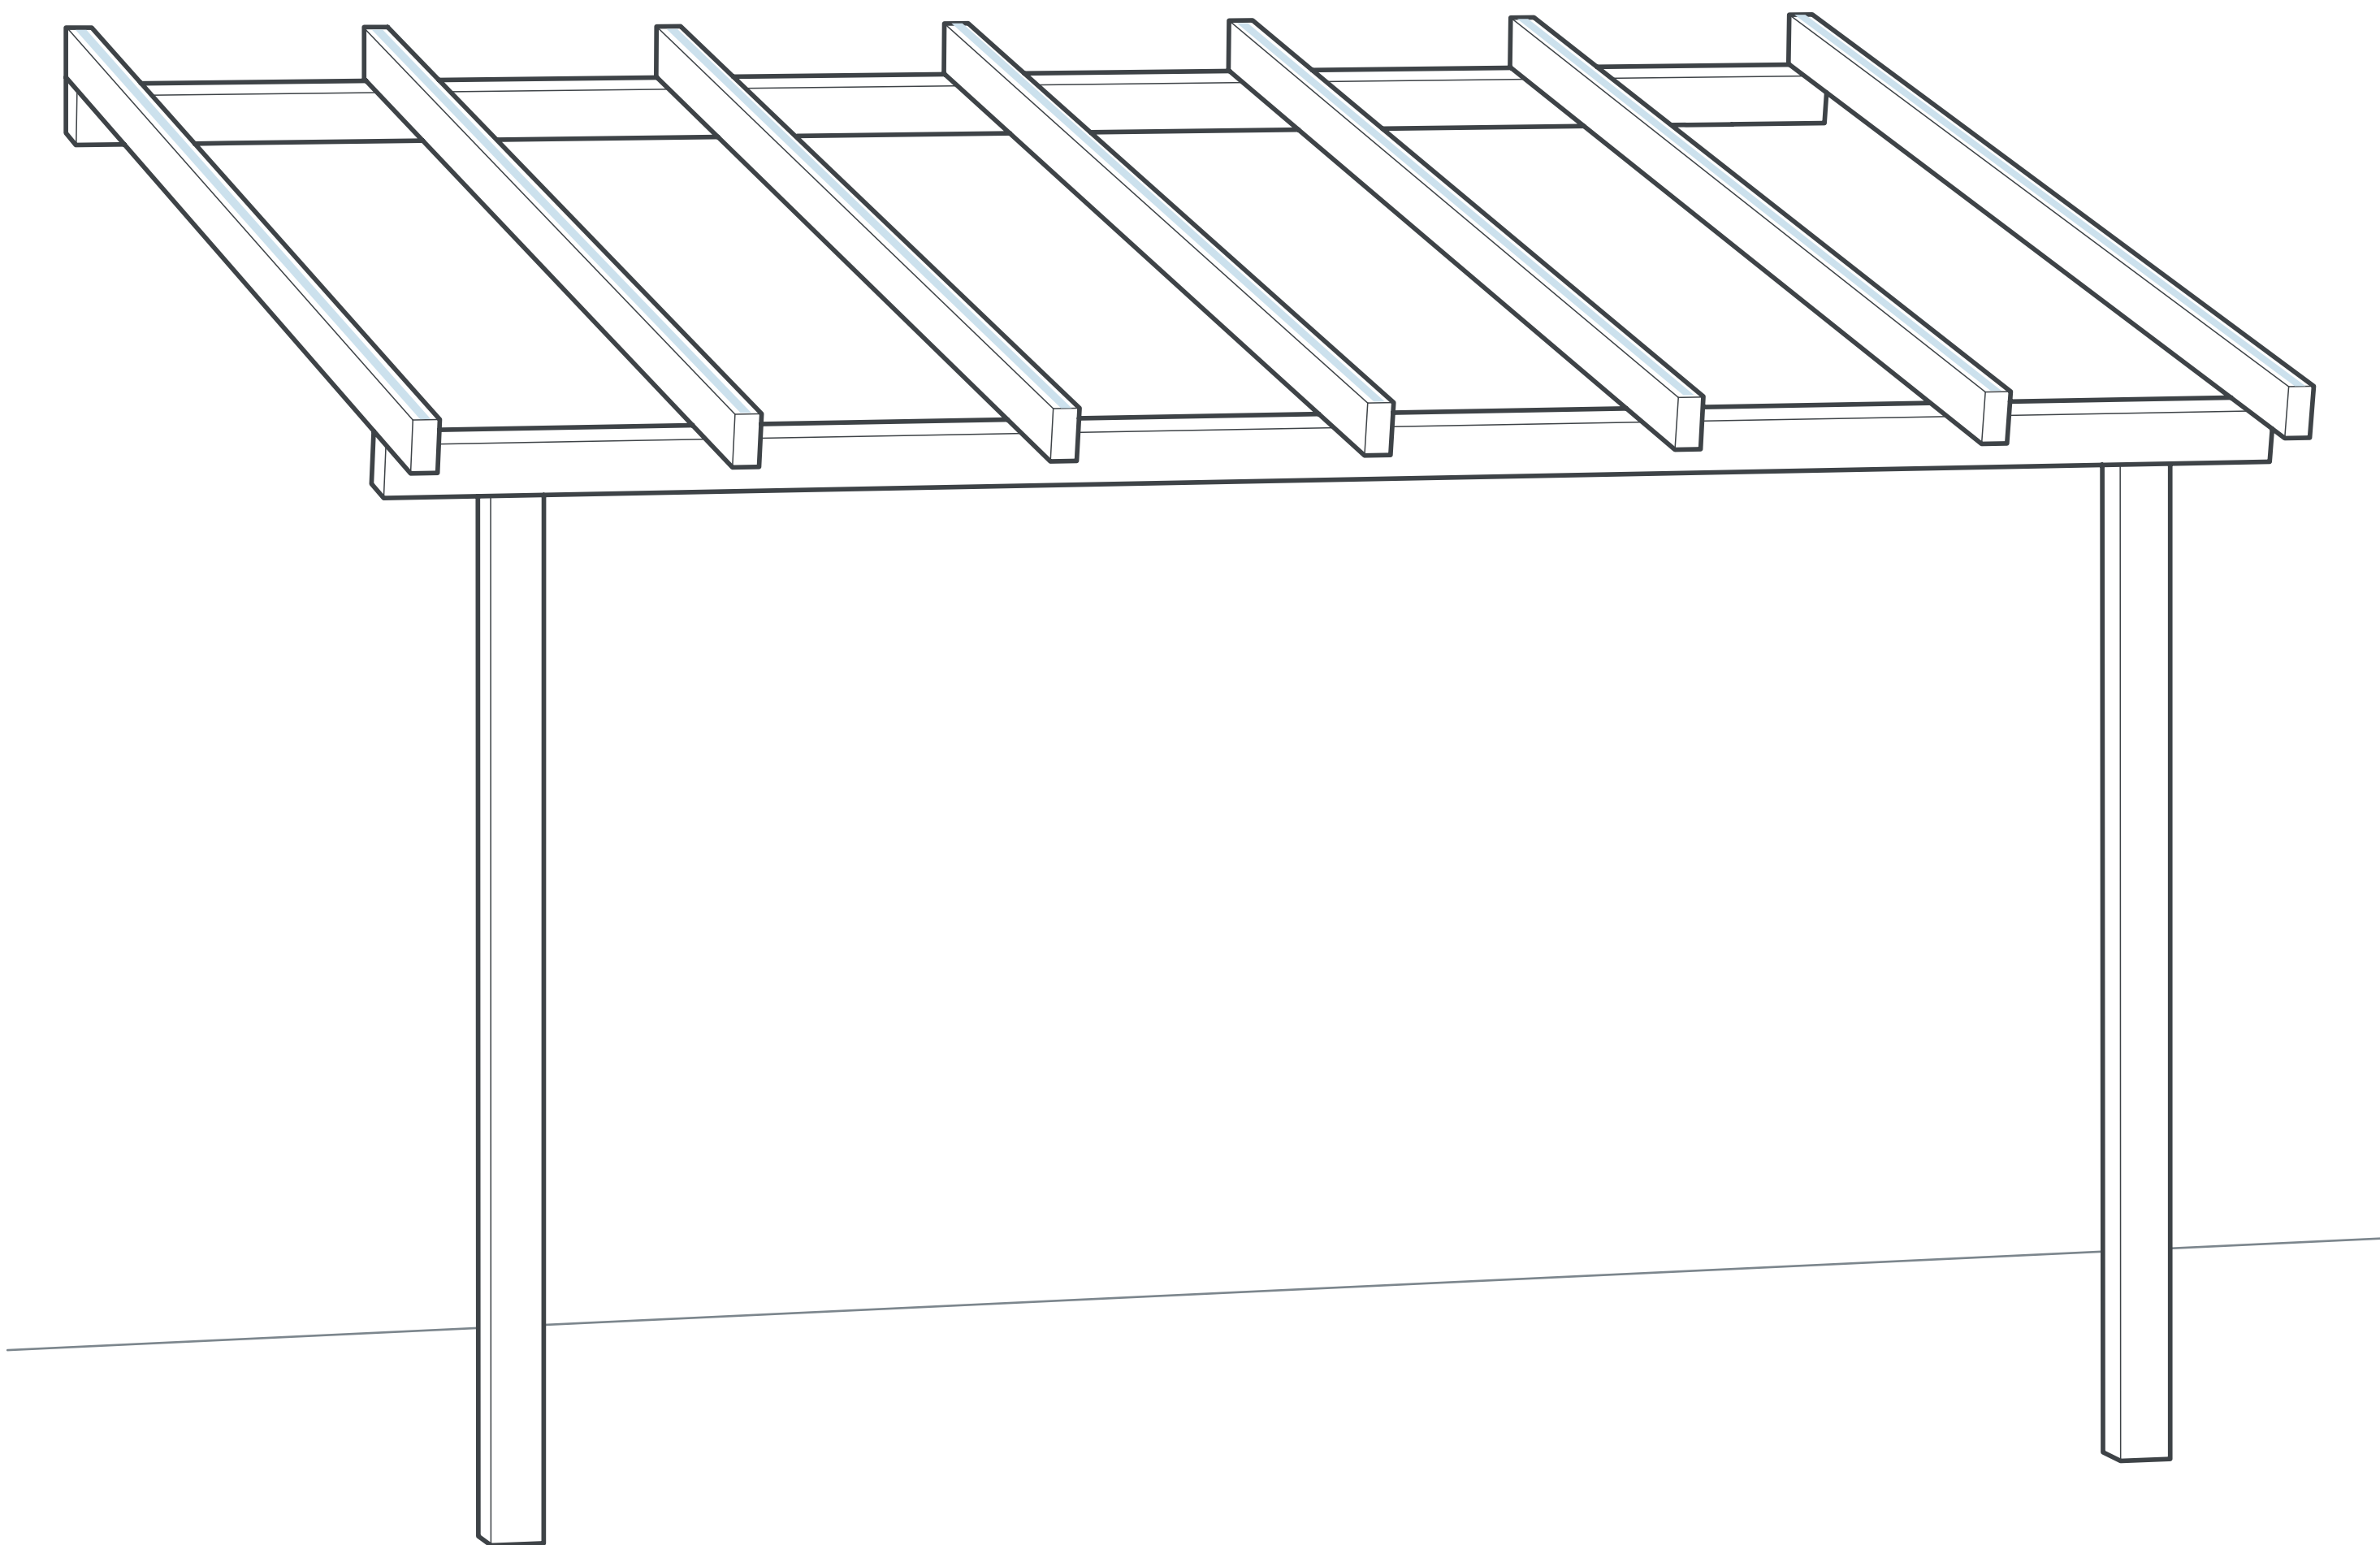
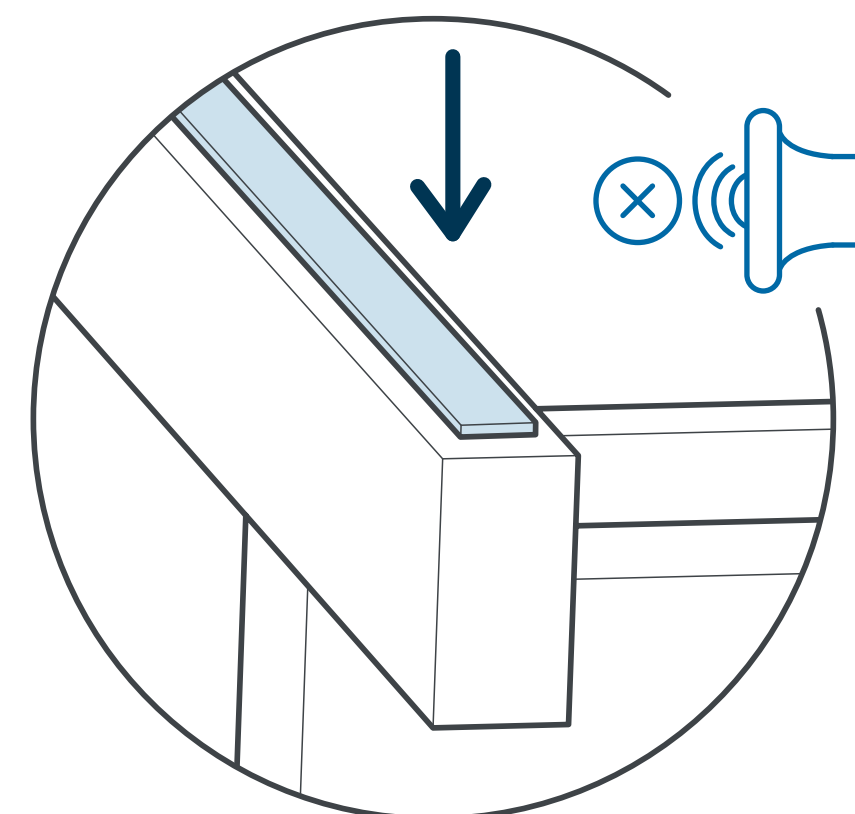


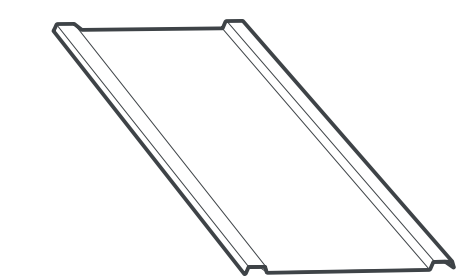



x1

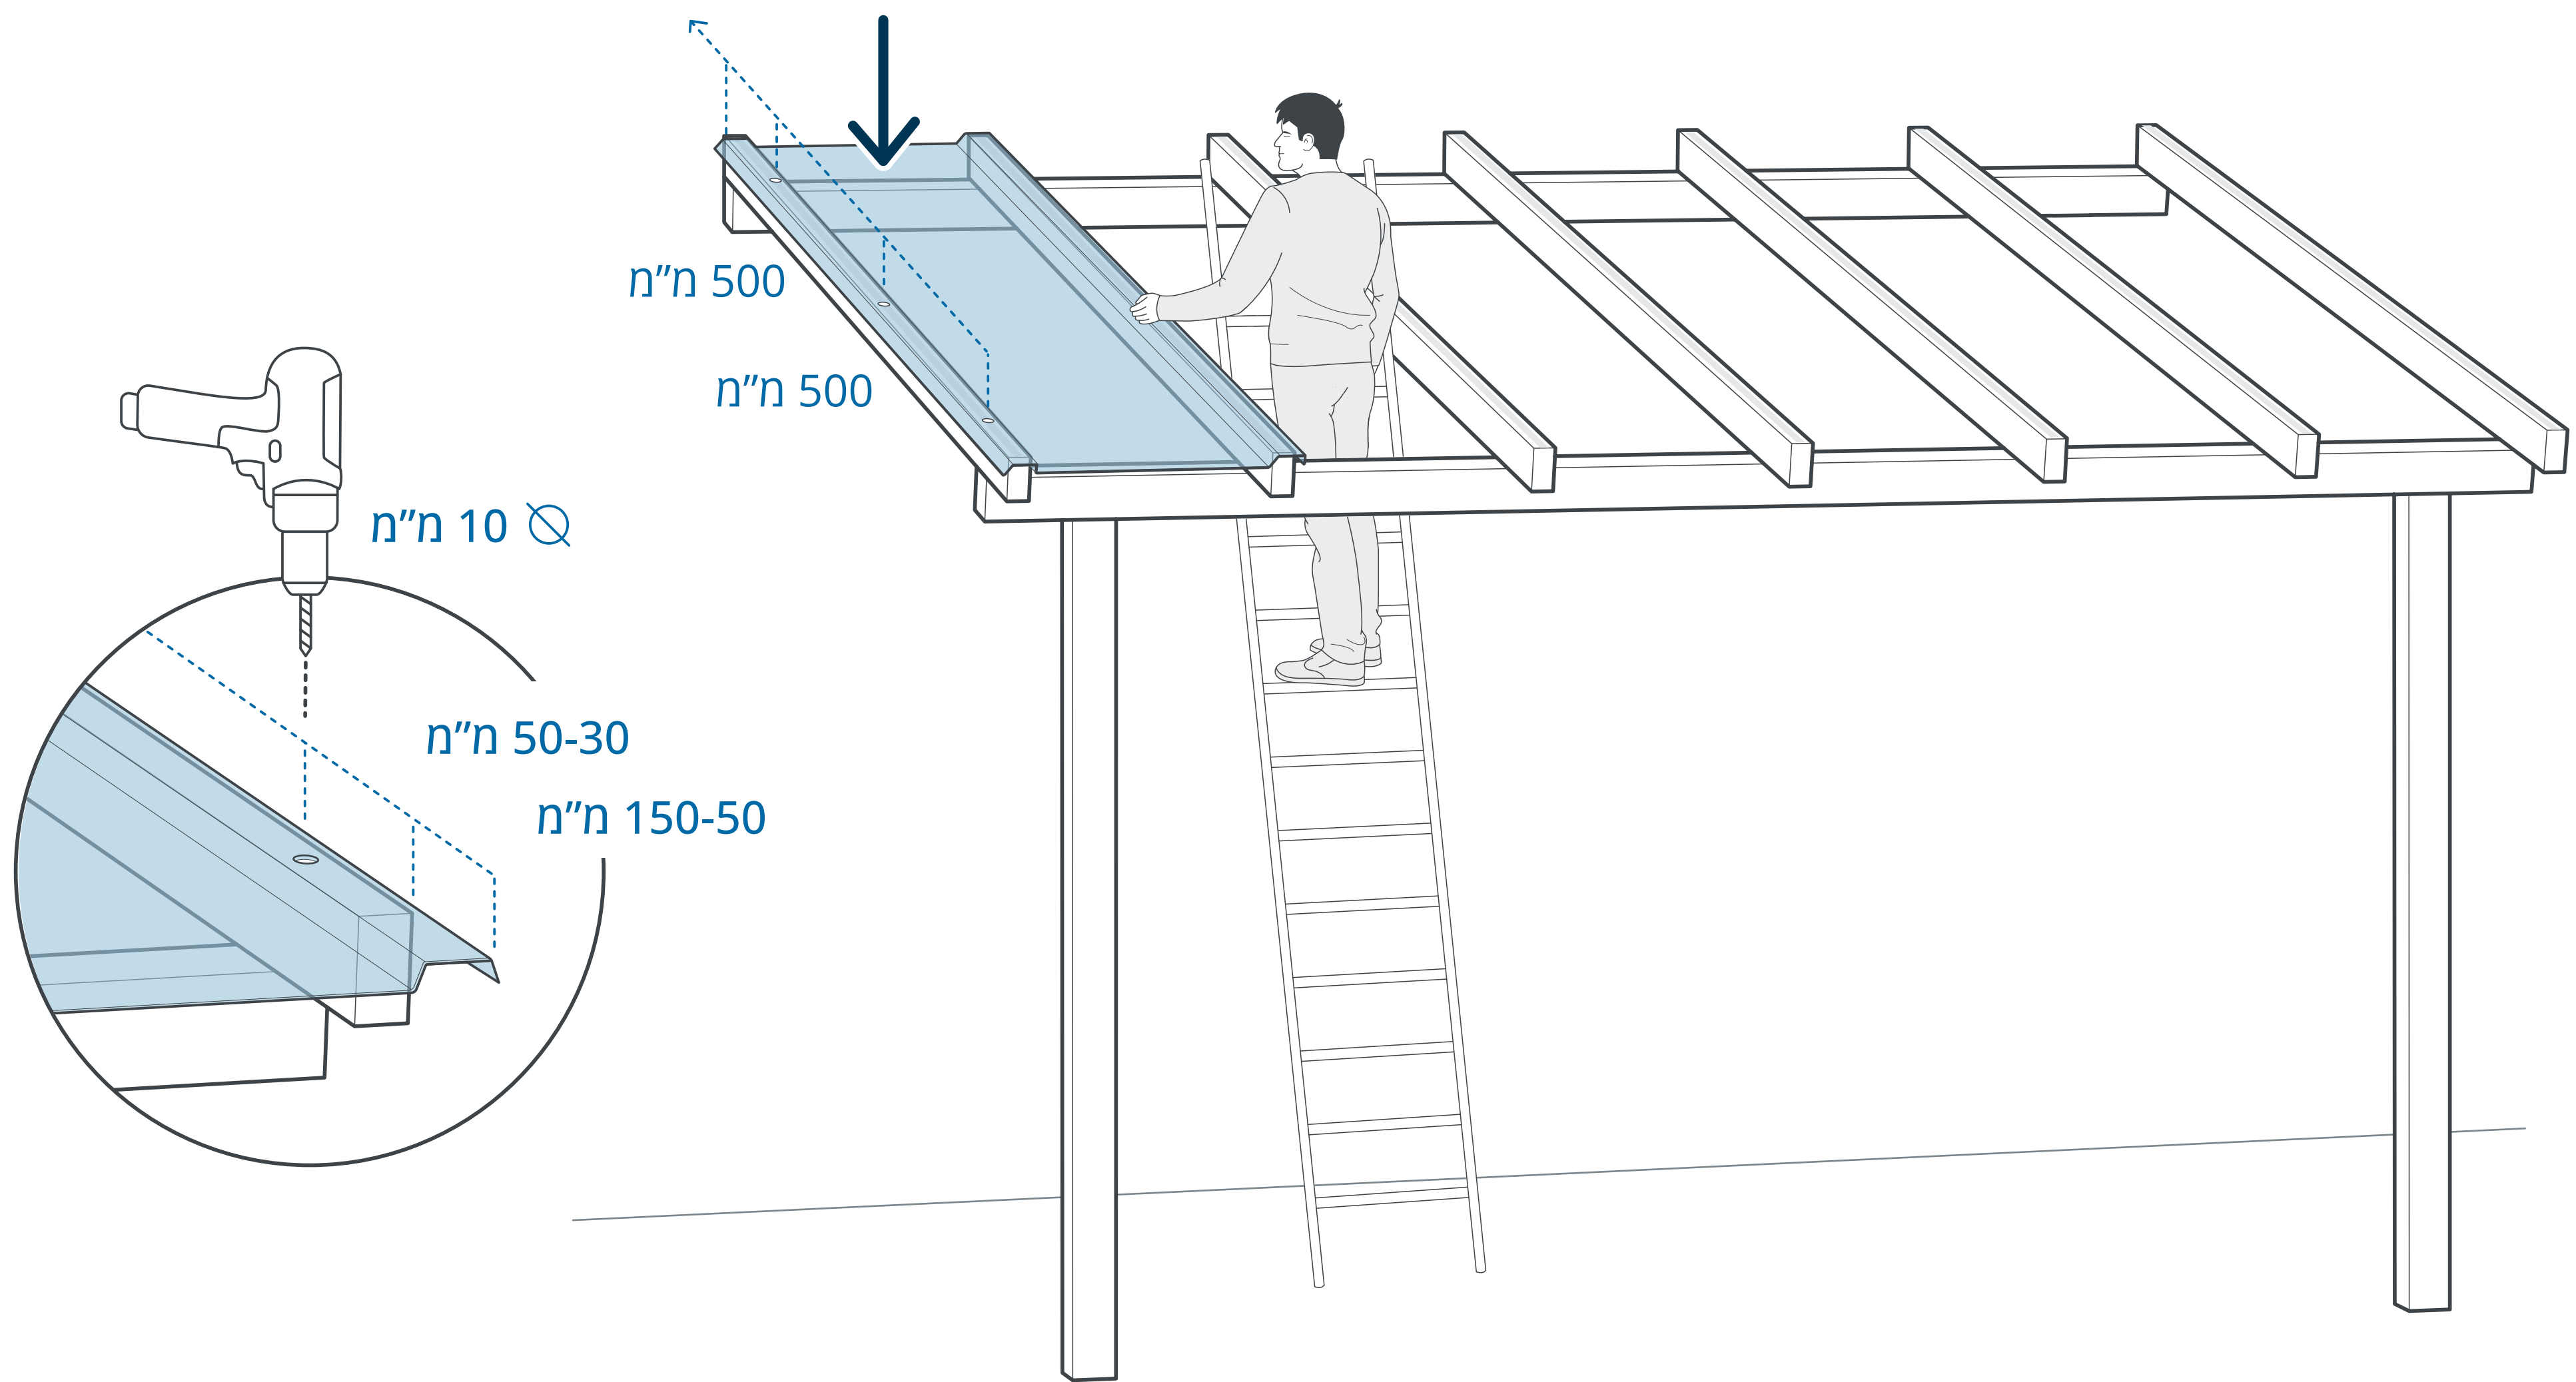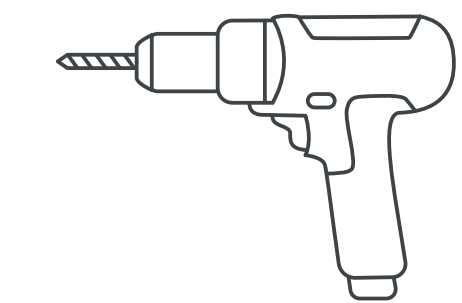




03

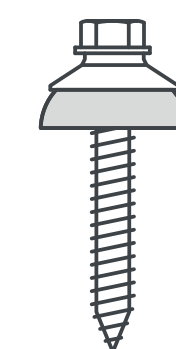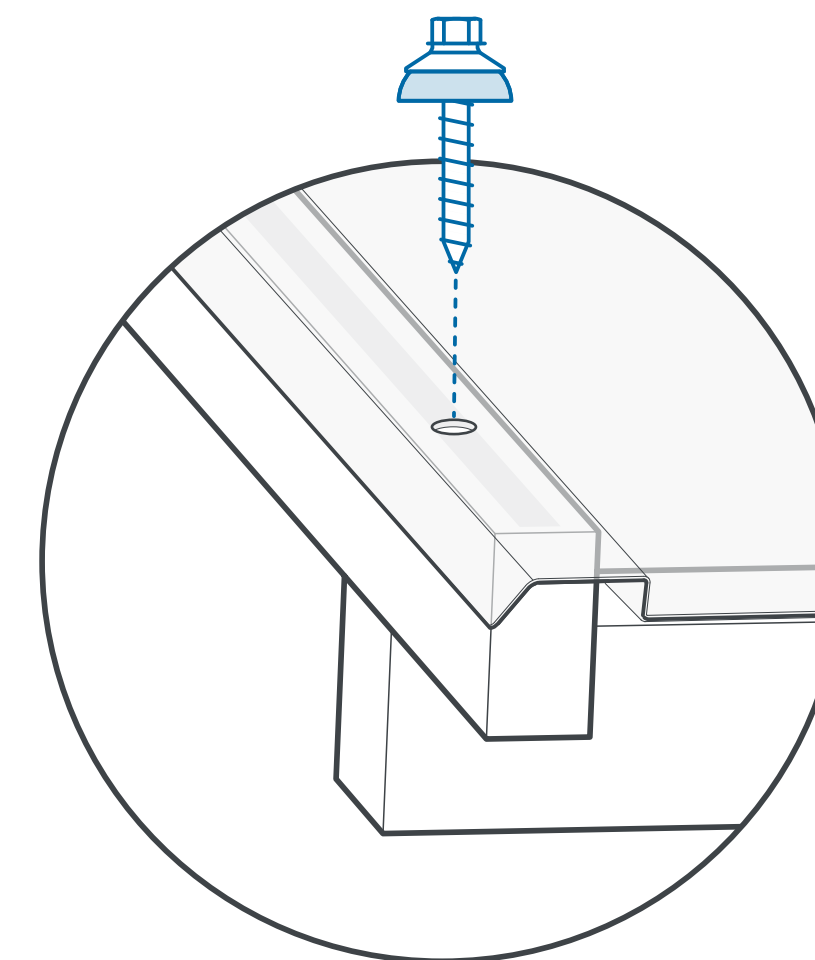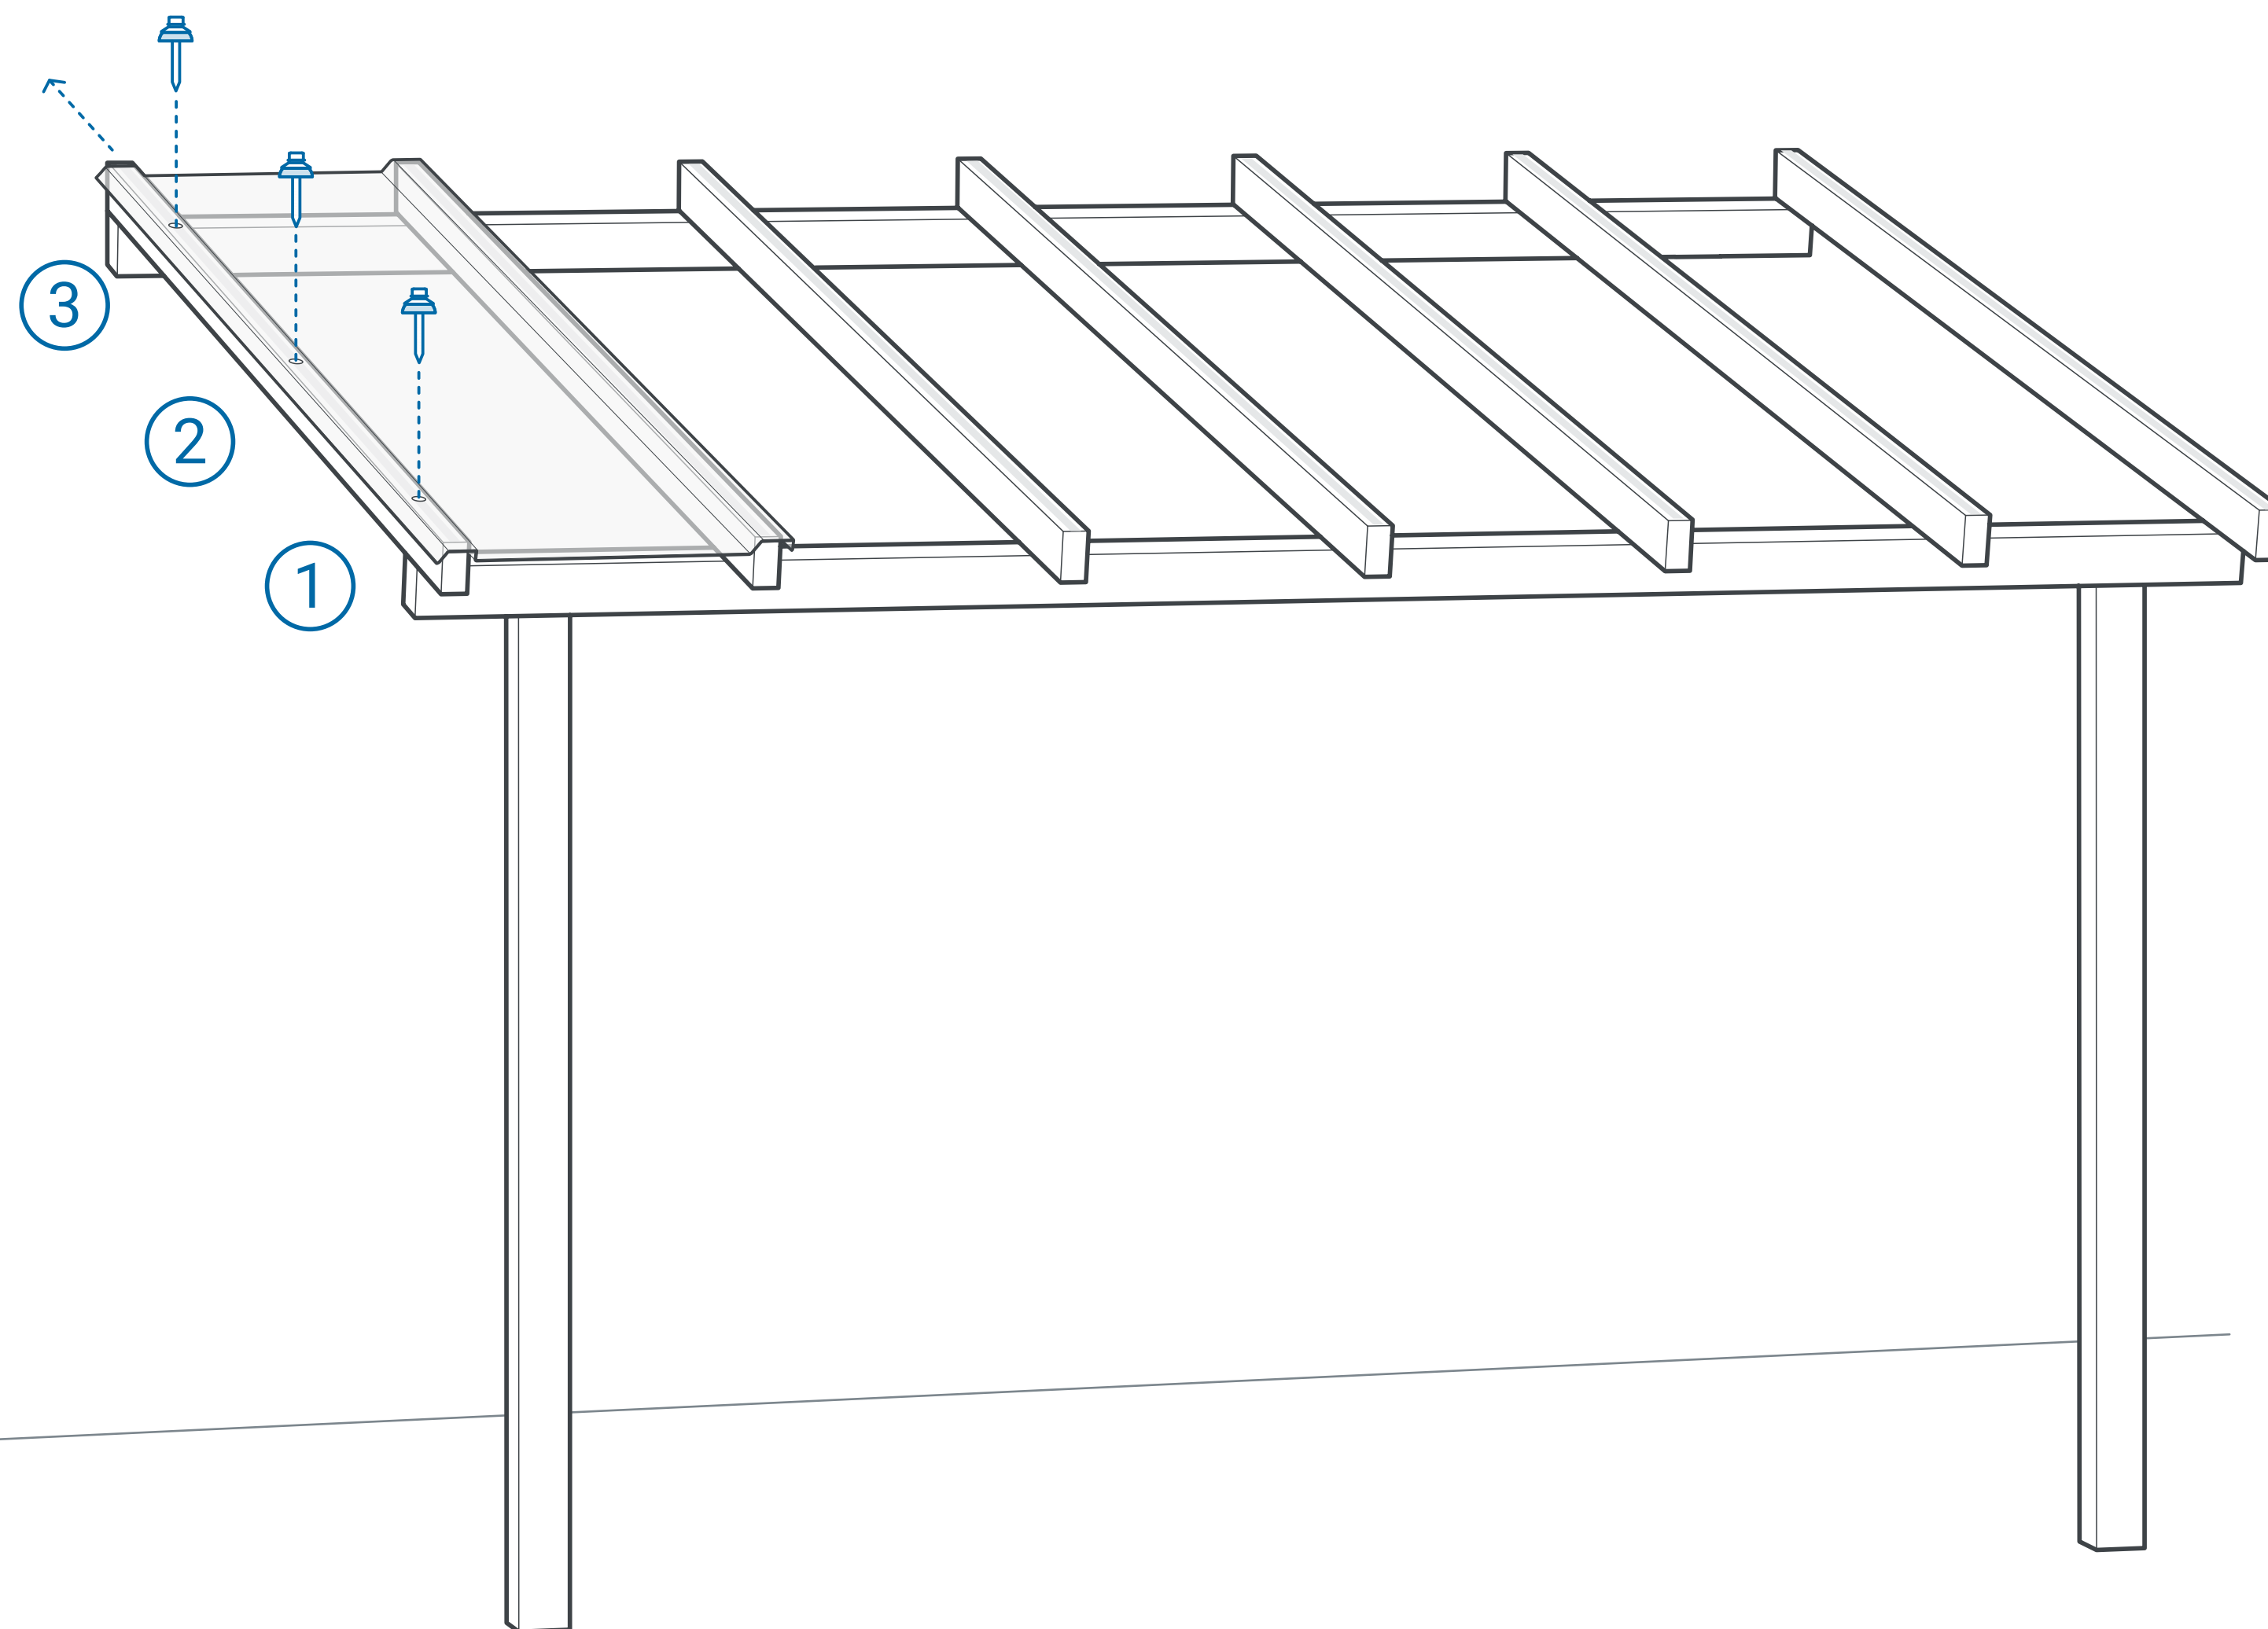



בורג עם אטם
25 מ"מ

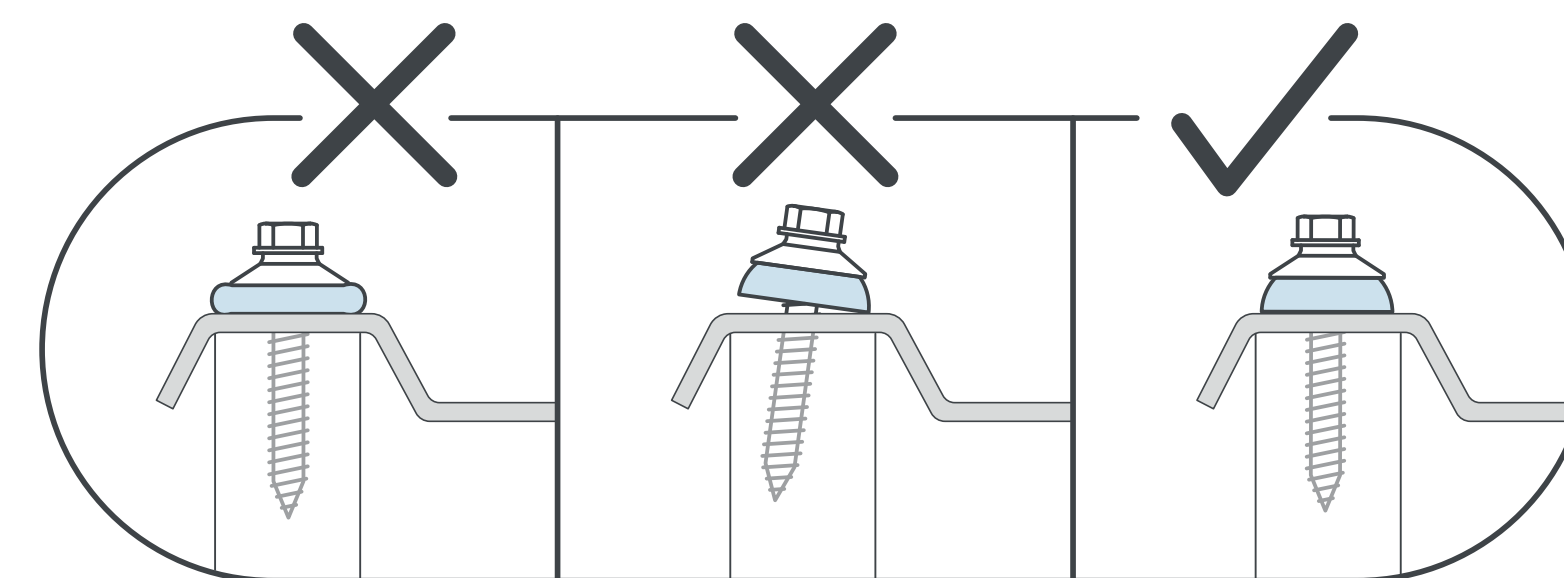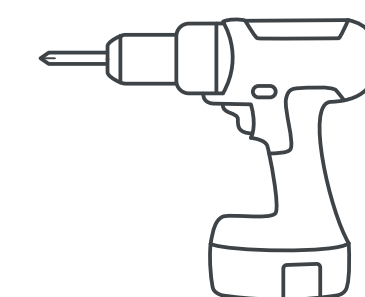





04

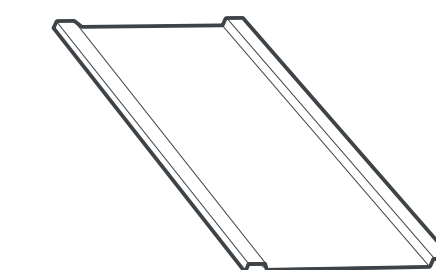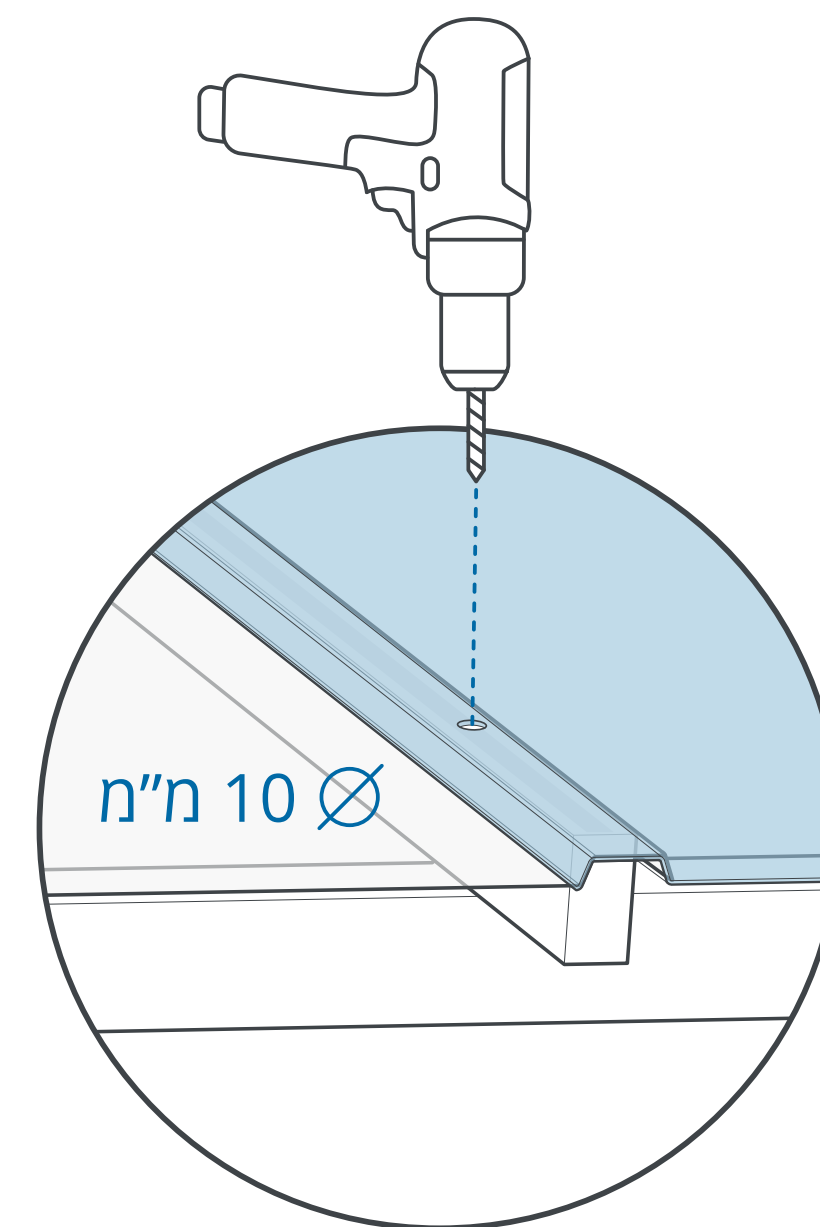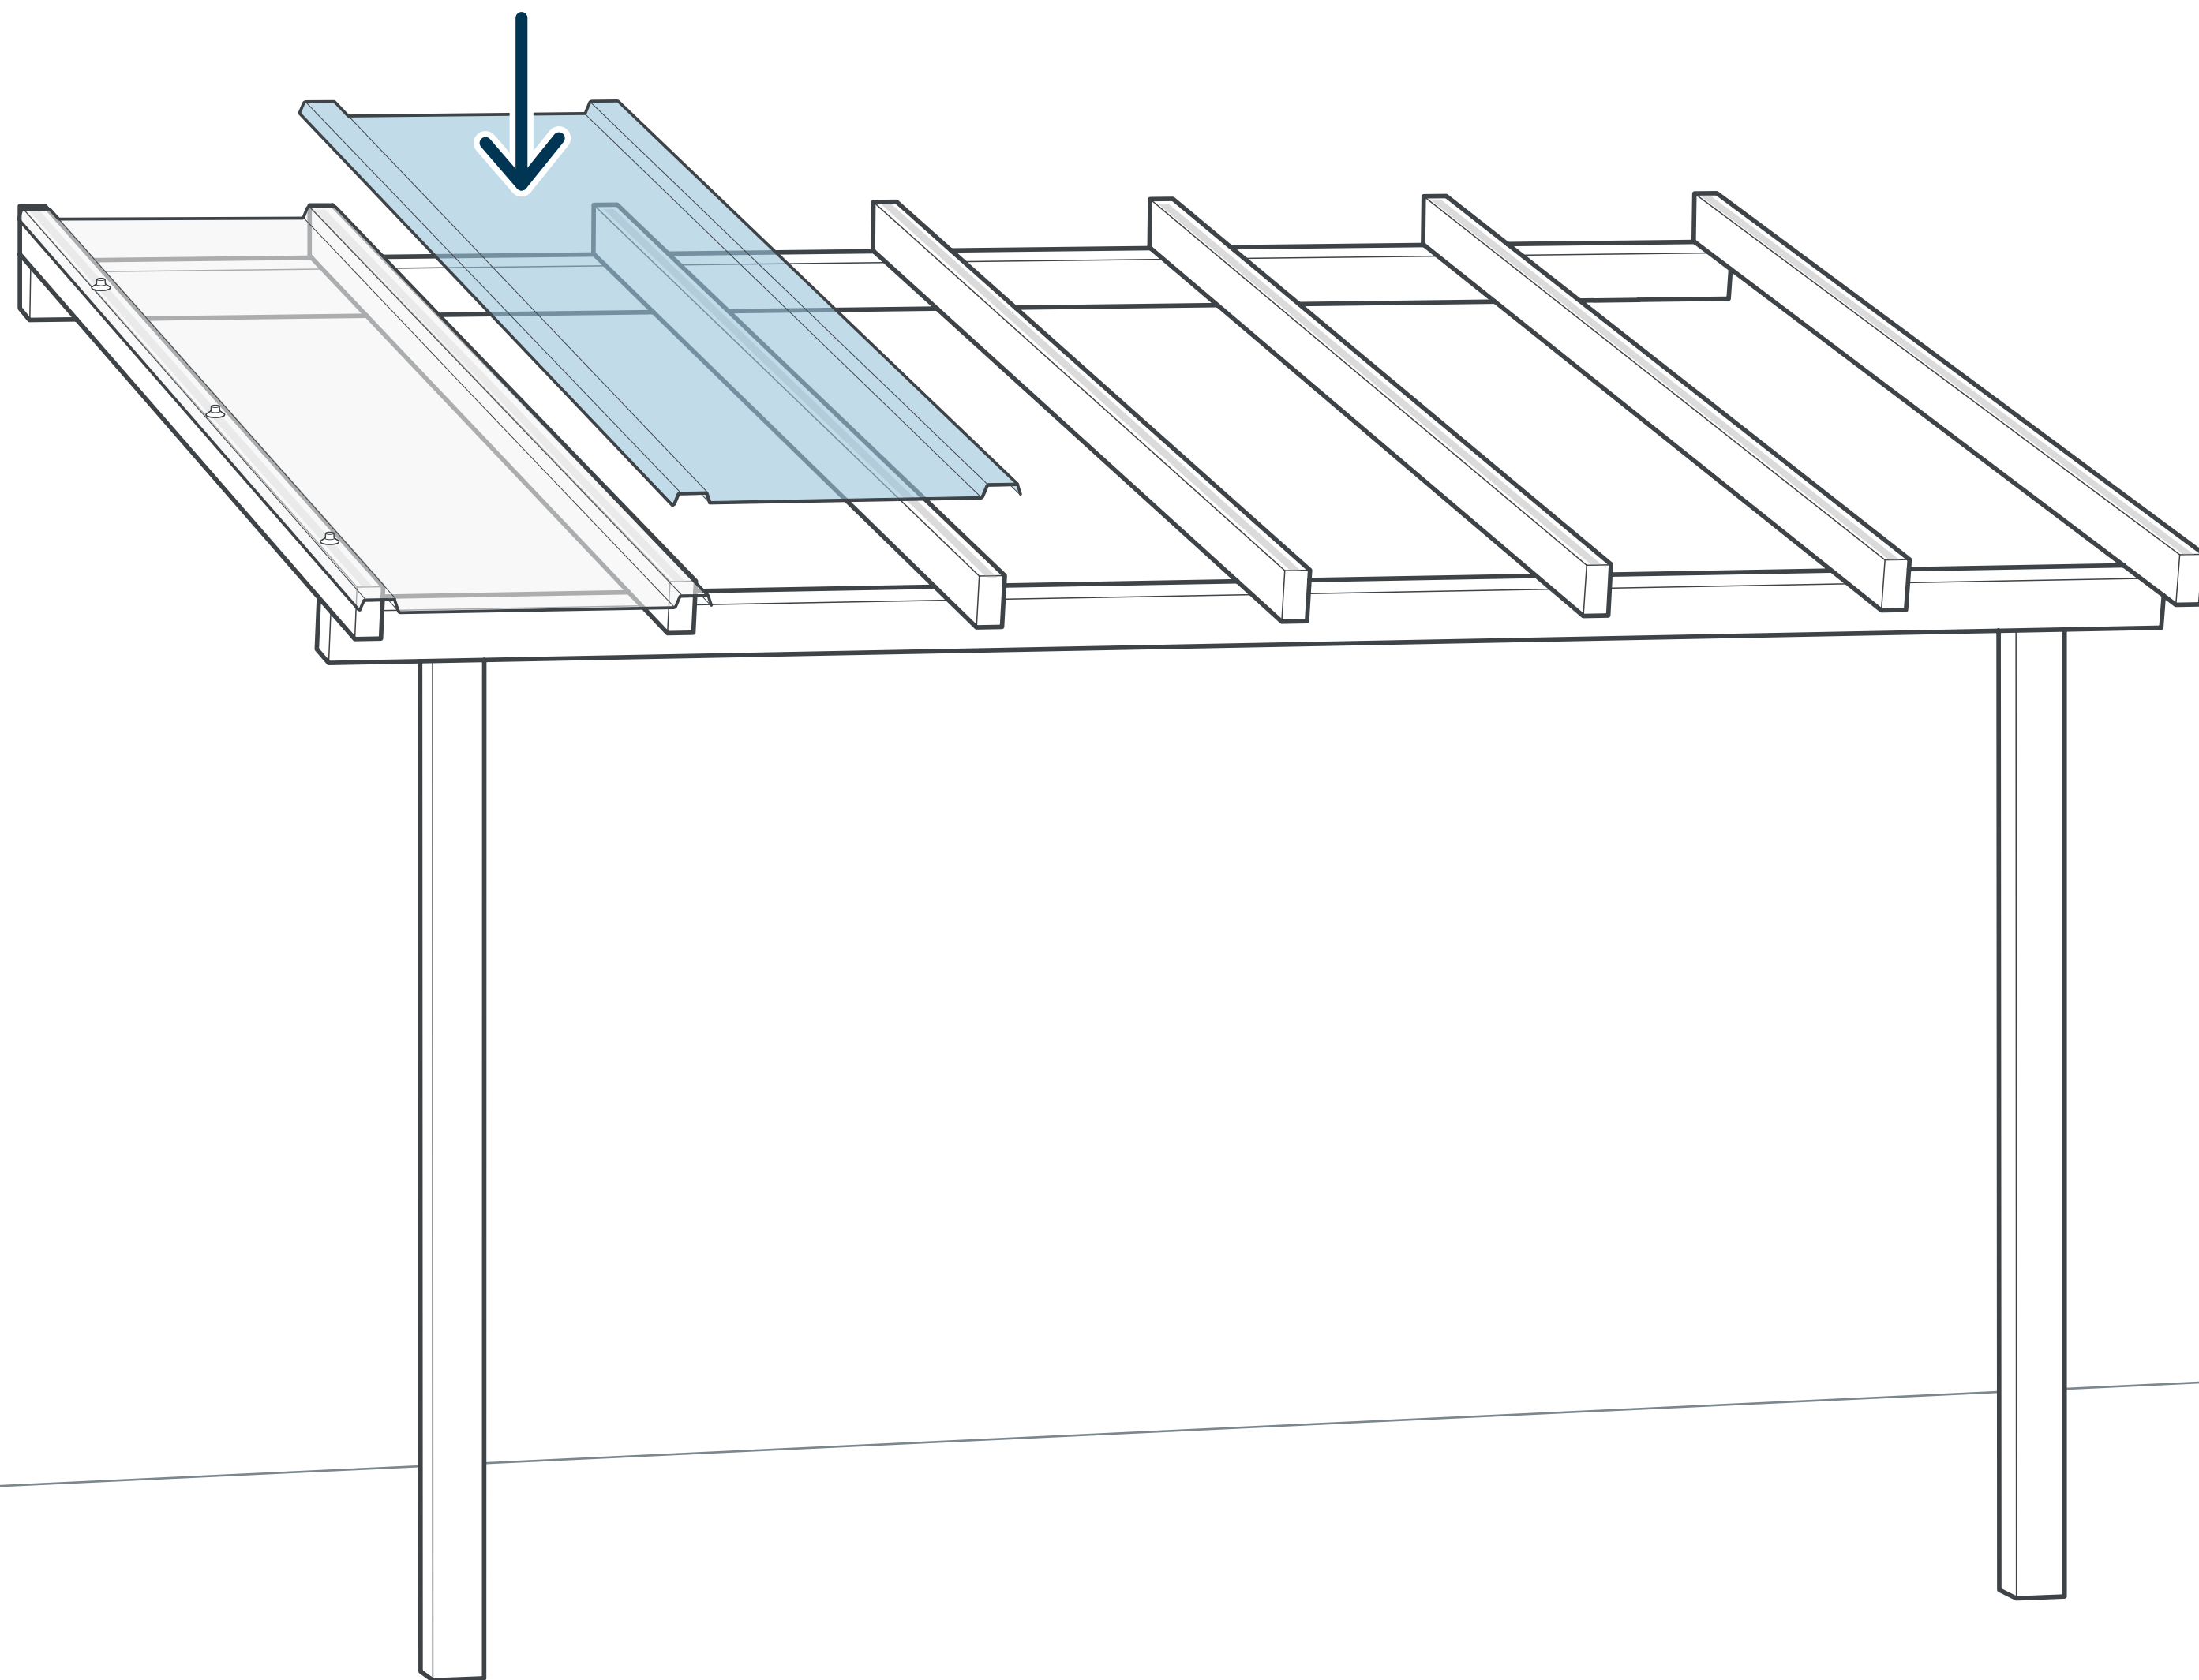






x1

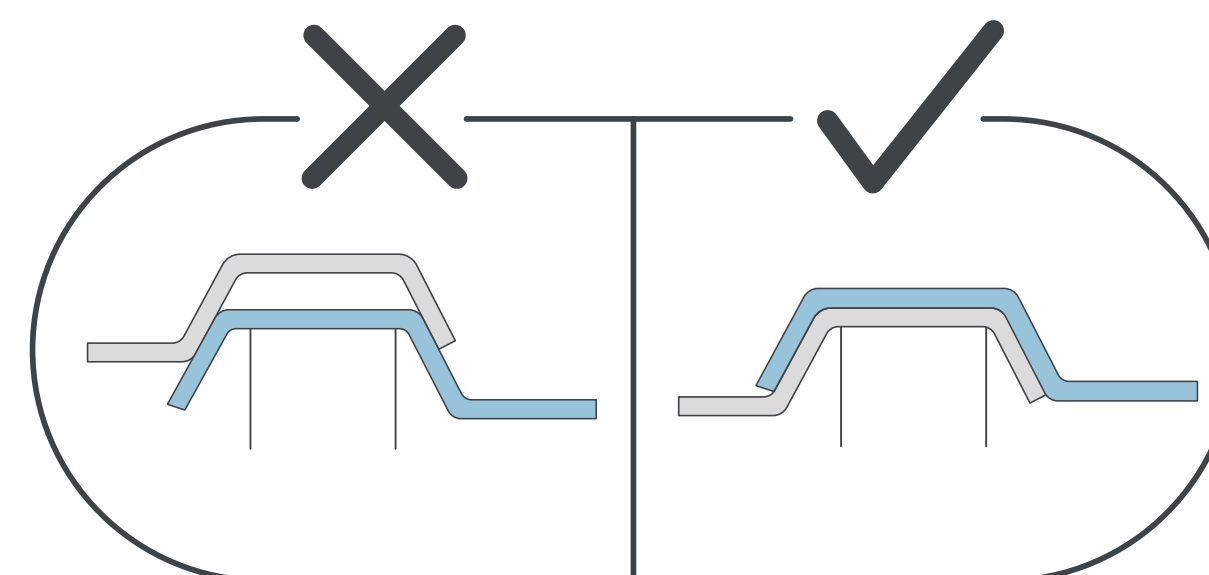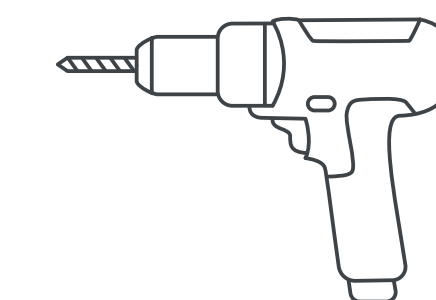


05

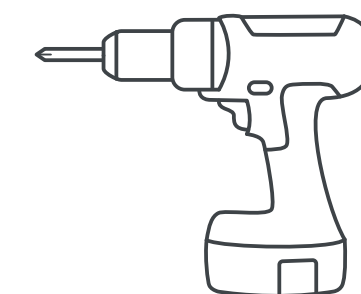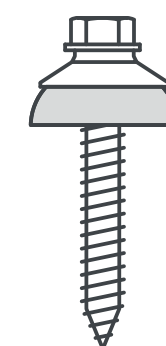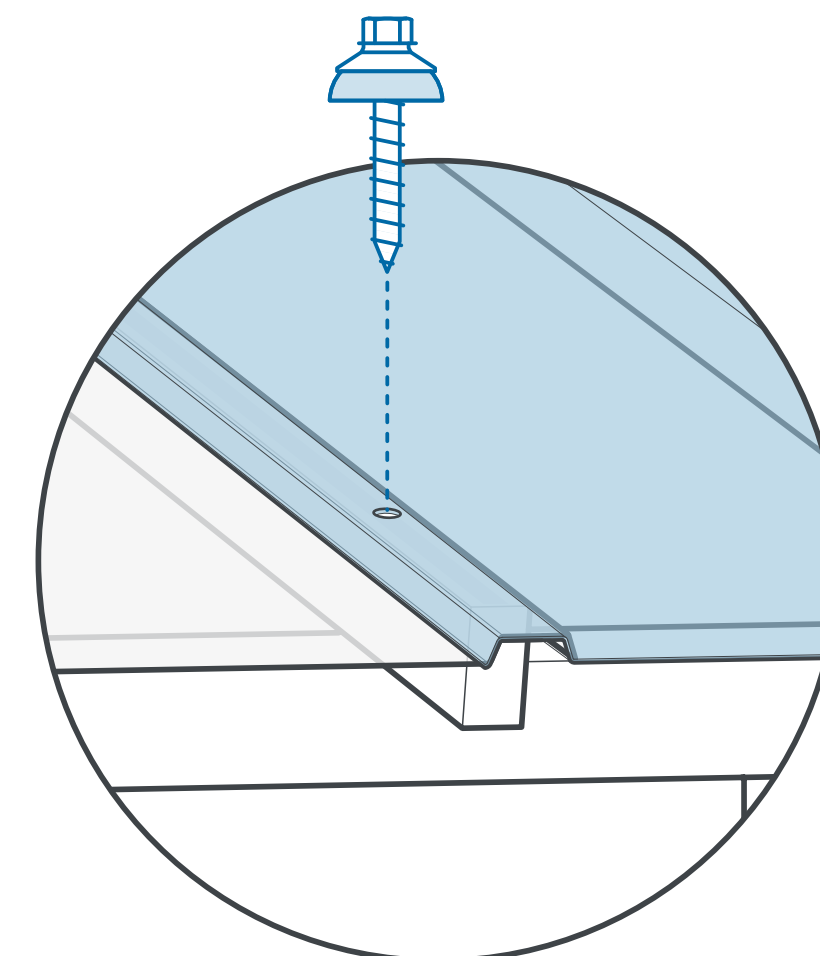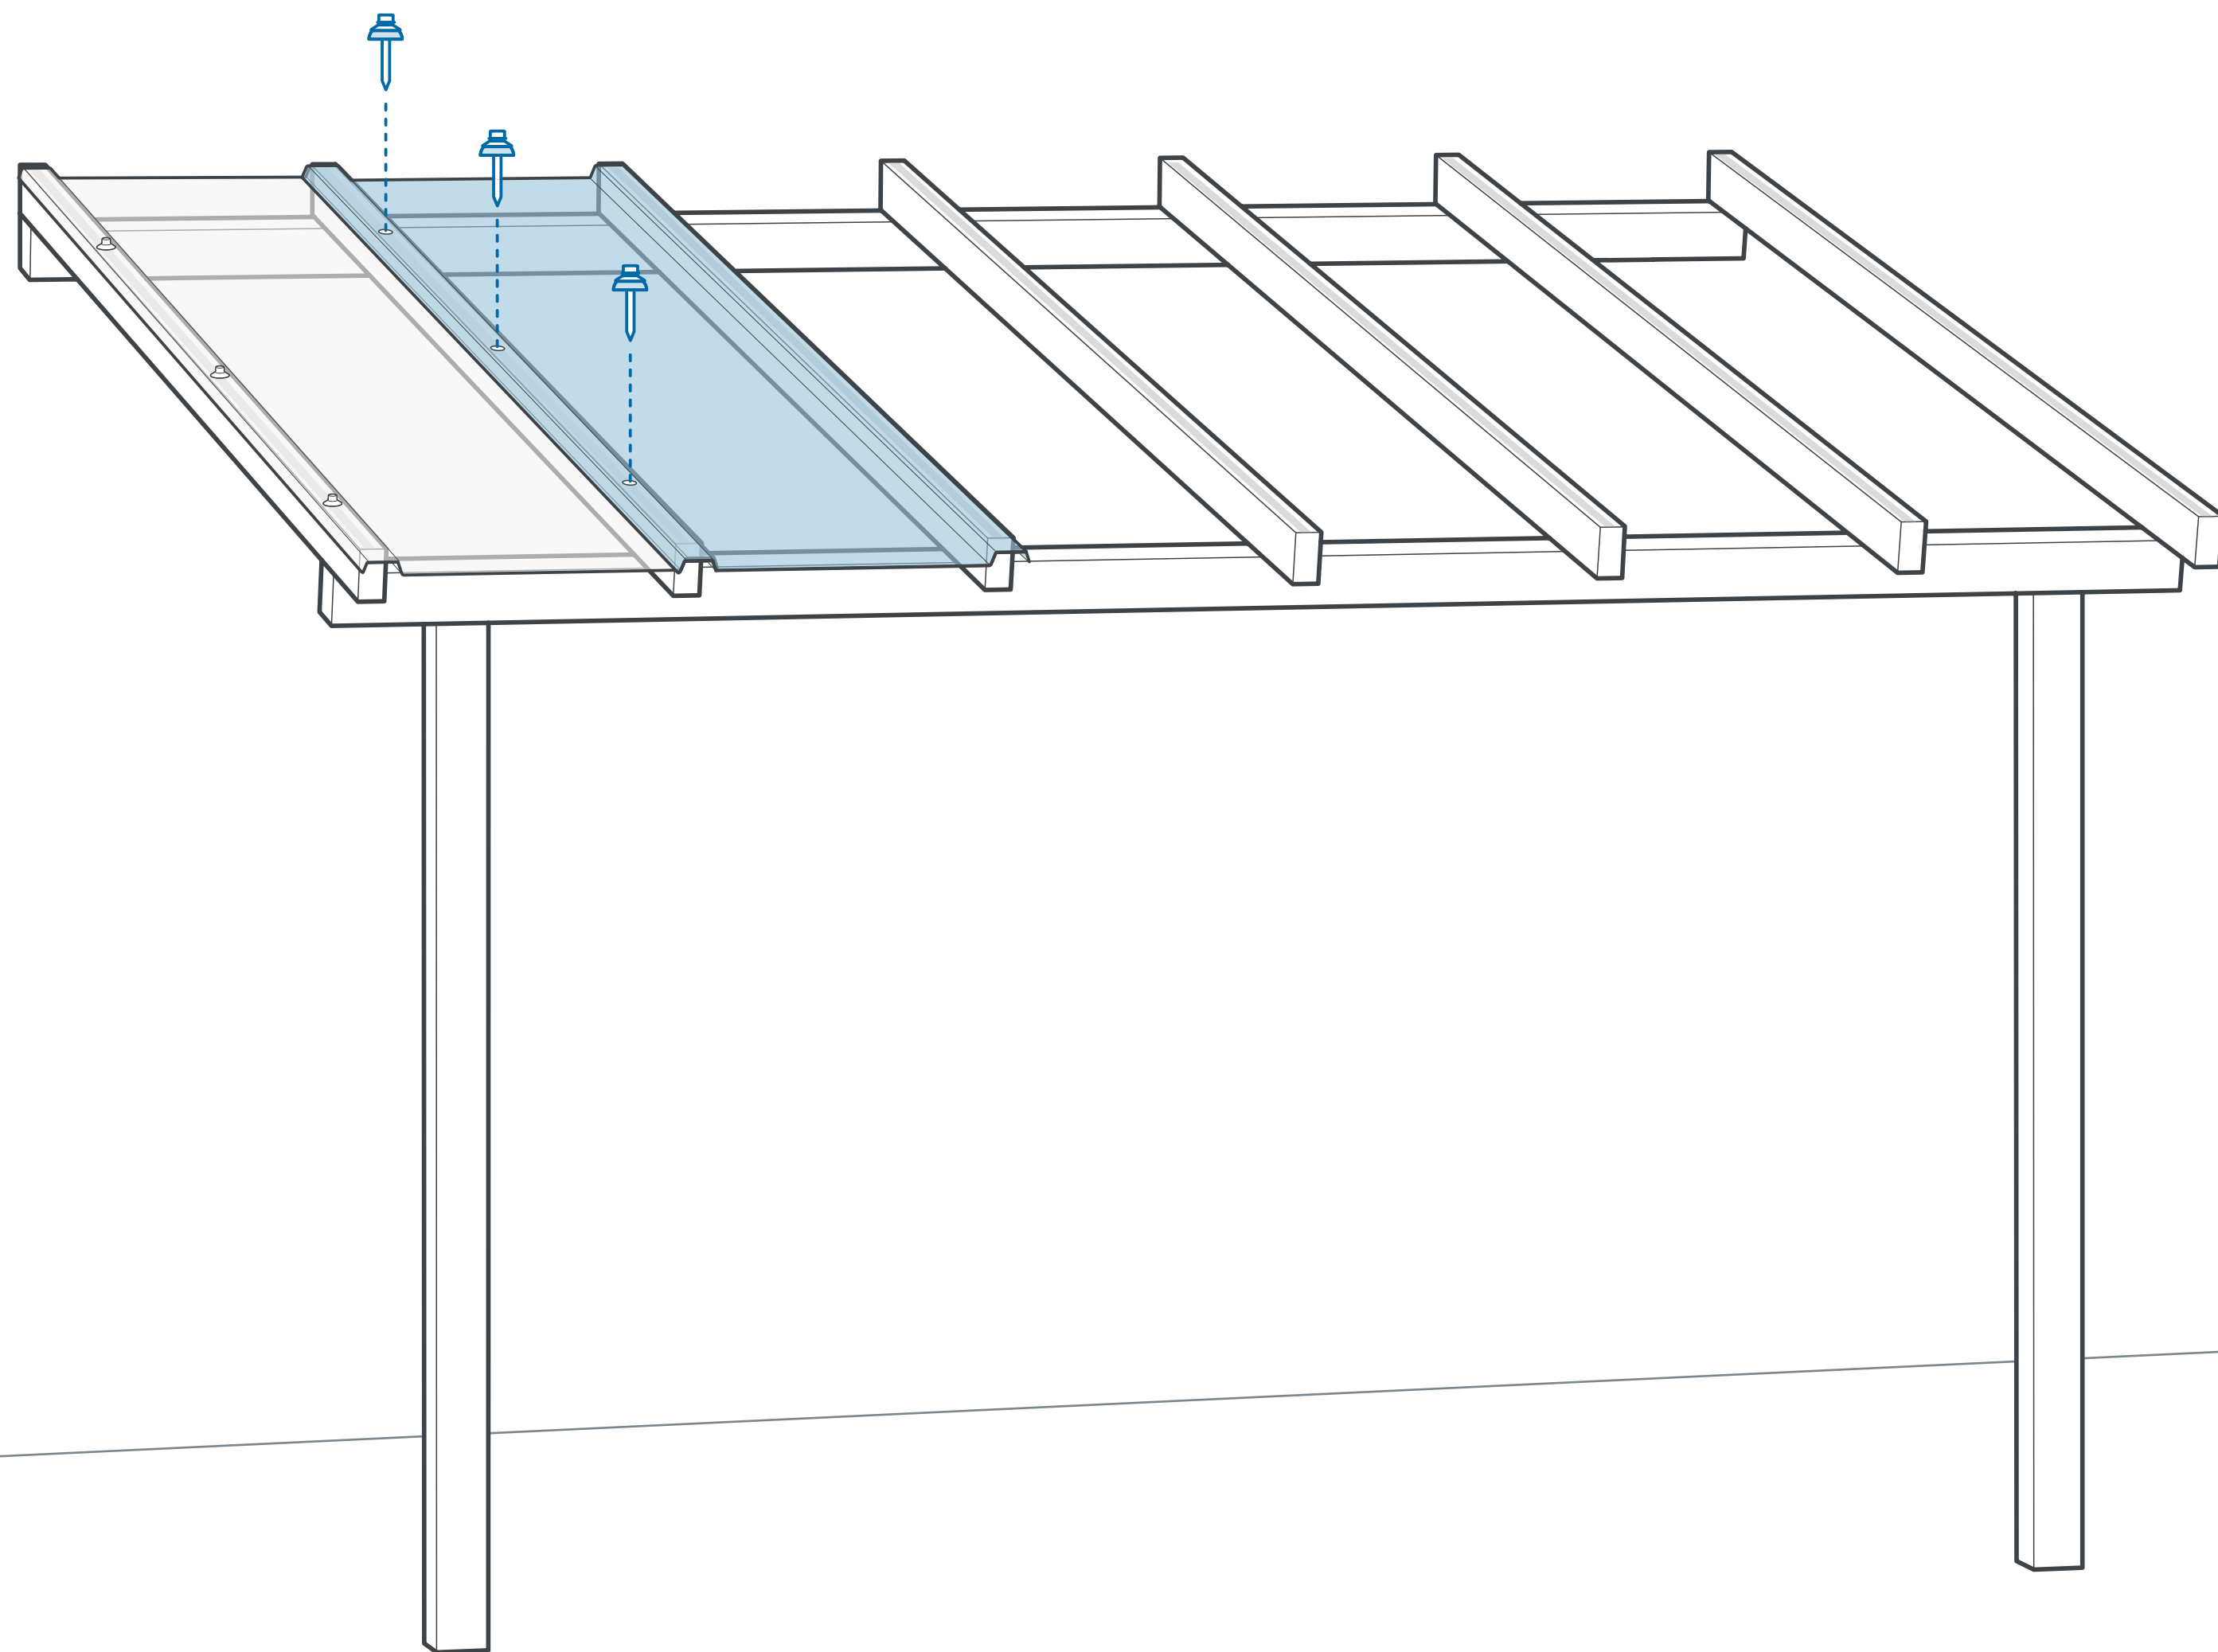


06

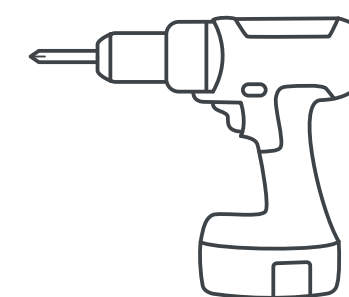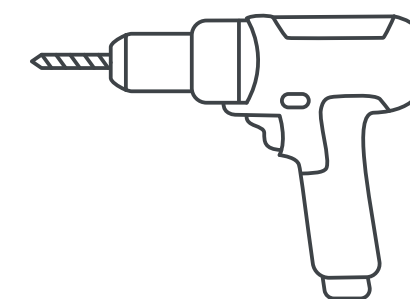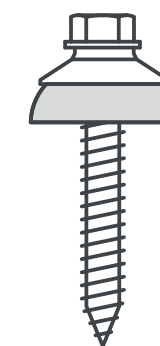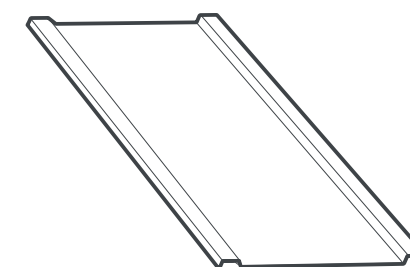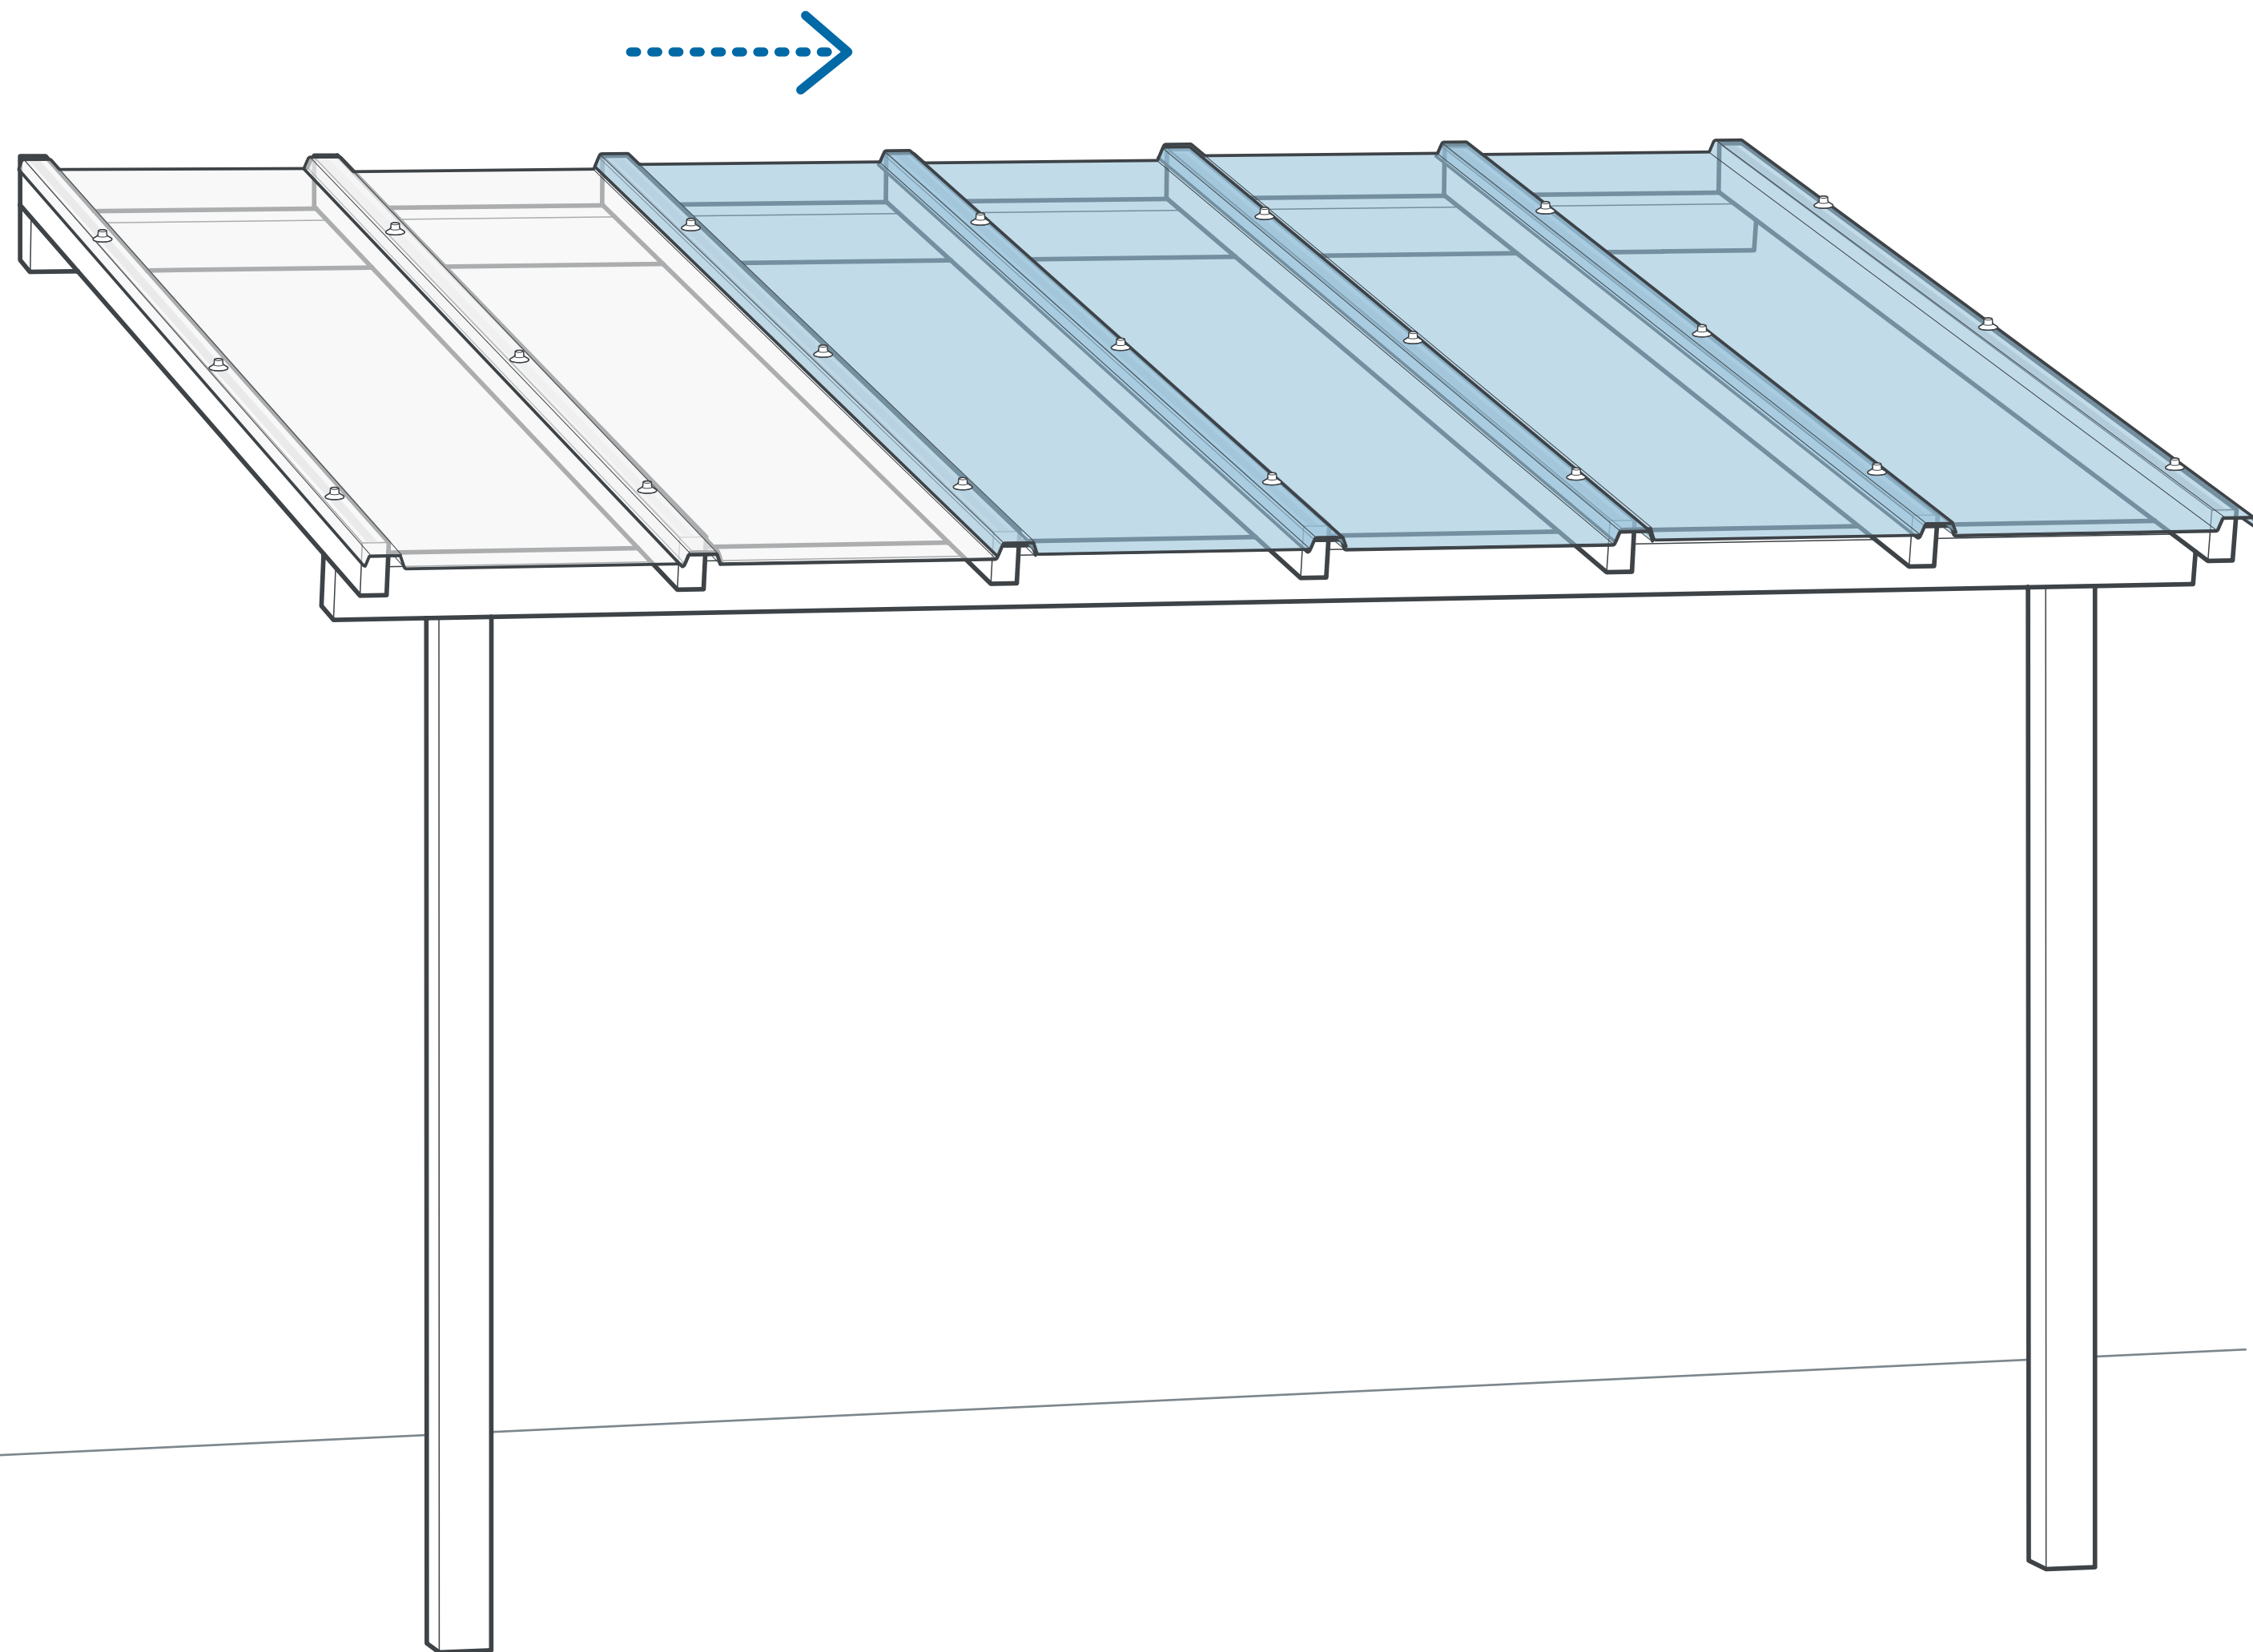

07



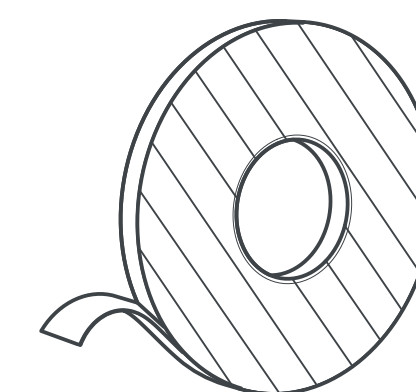


סרט איטום בוטילי
(פנאלסטיק)

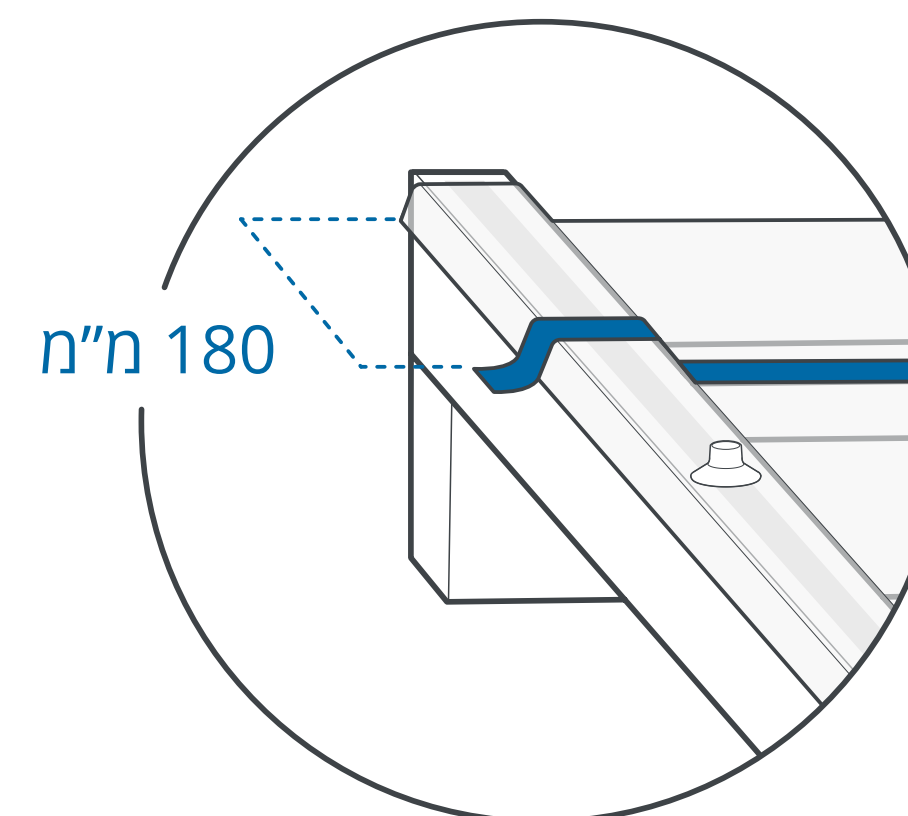







הוסף קורות תמיכה
במידת הצורך



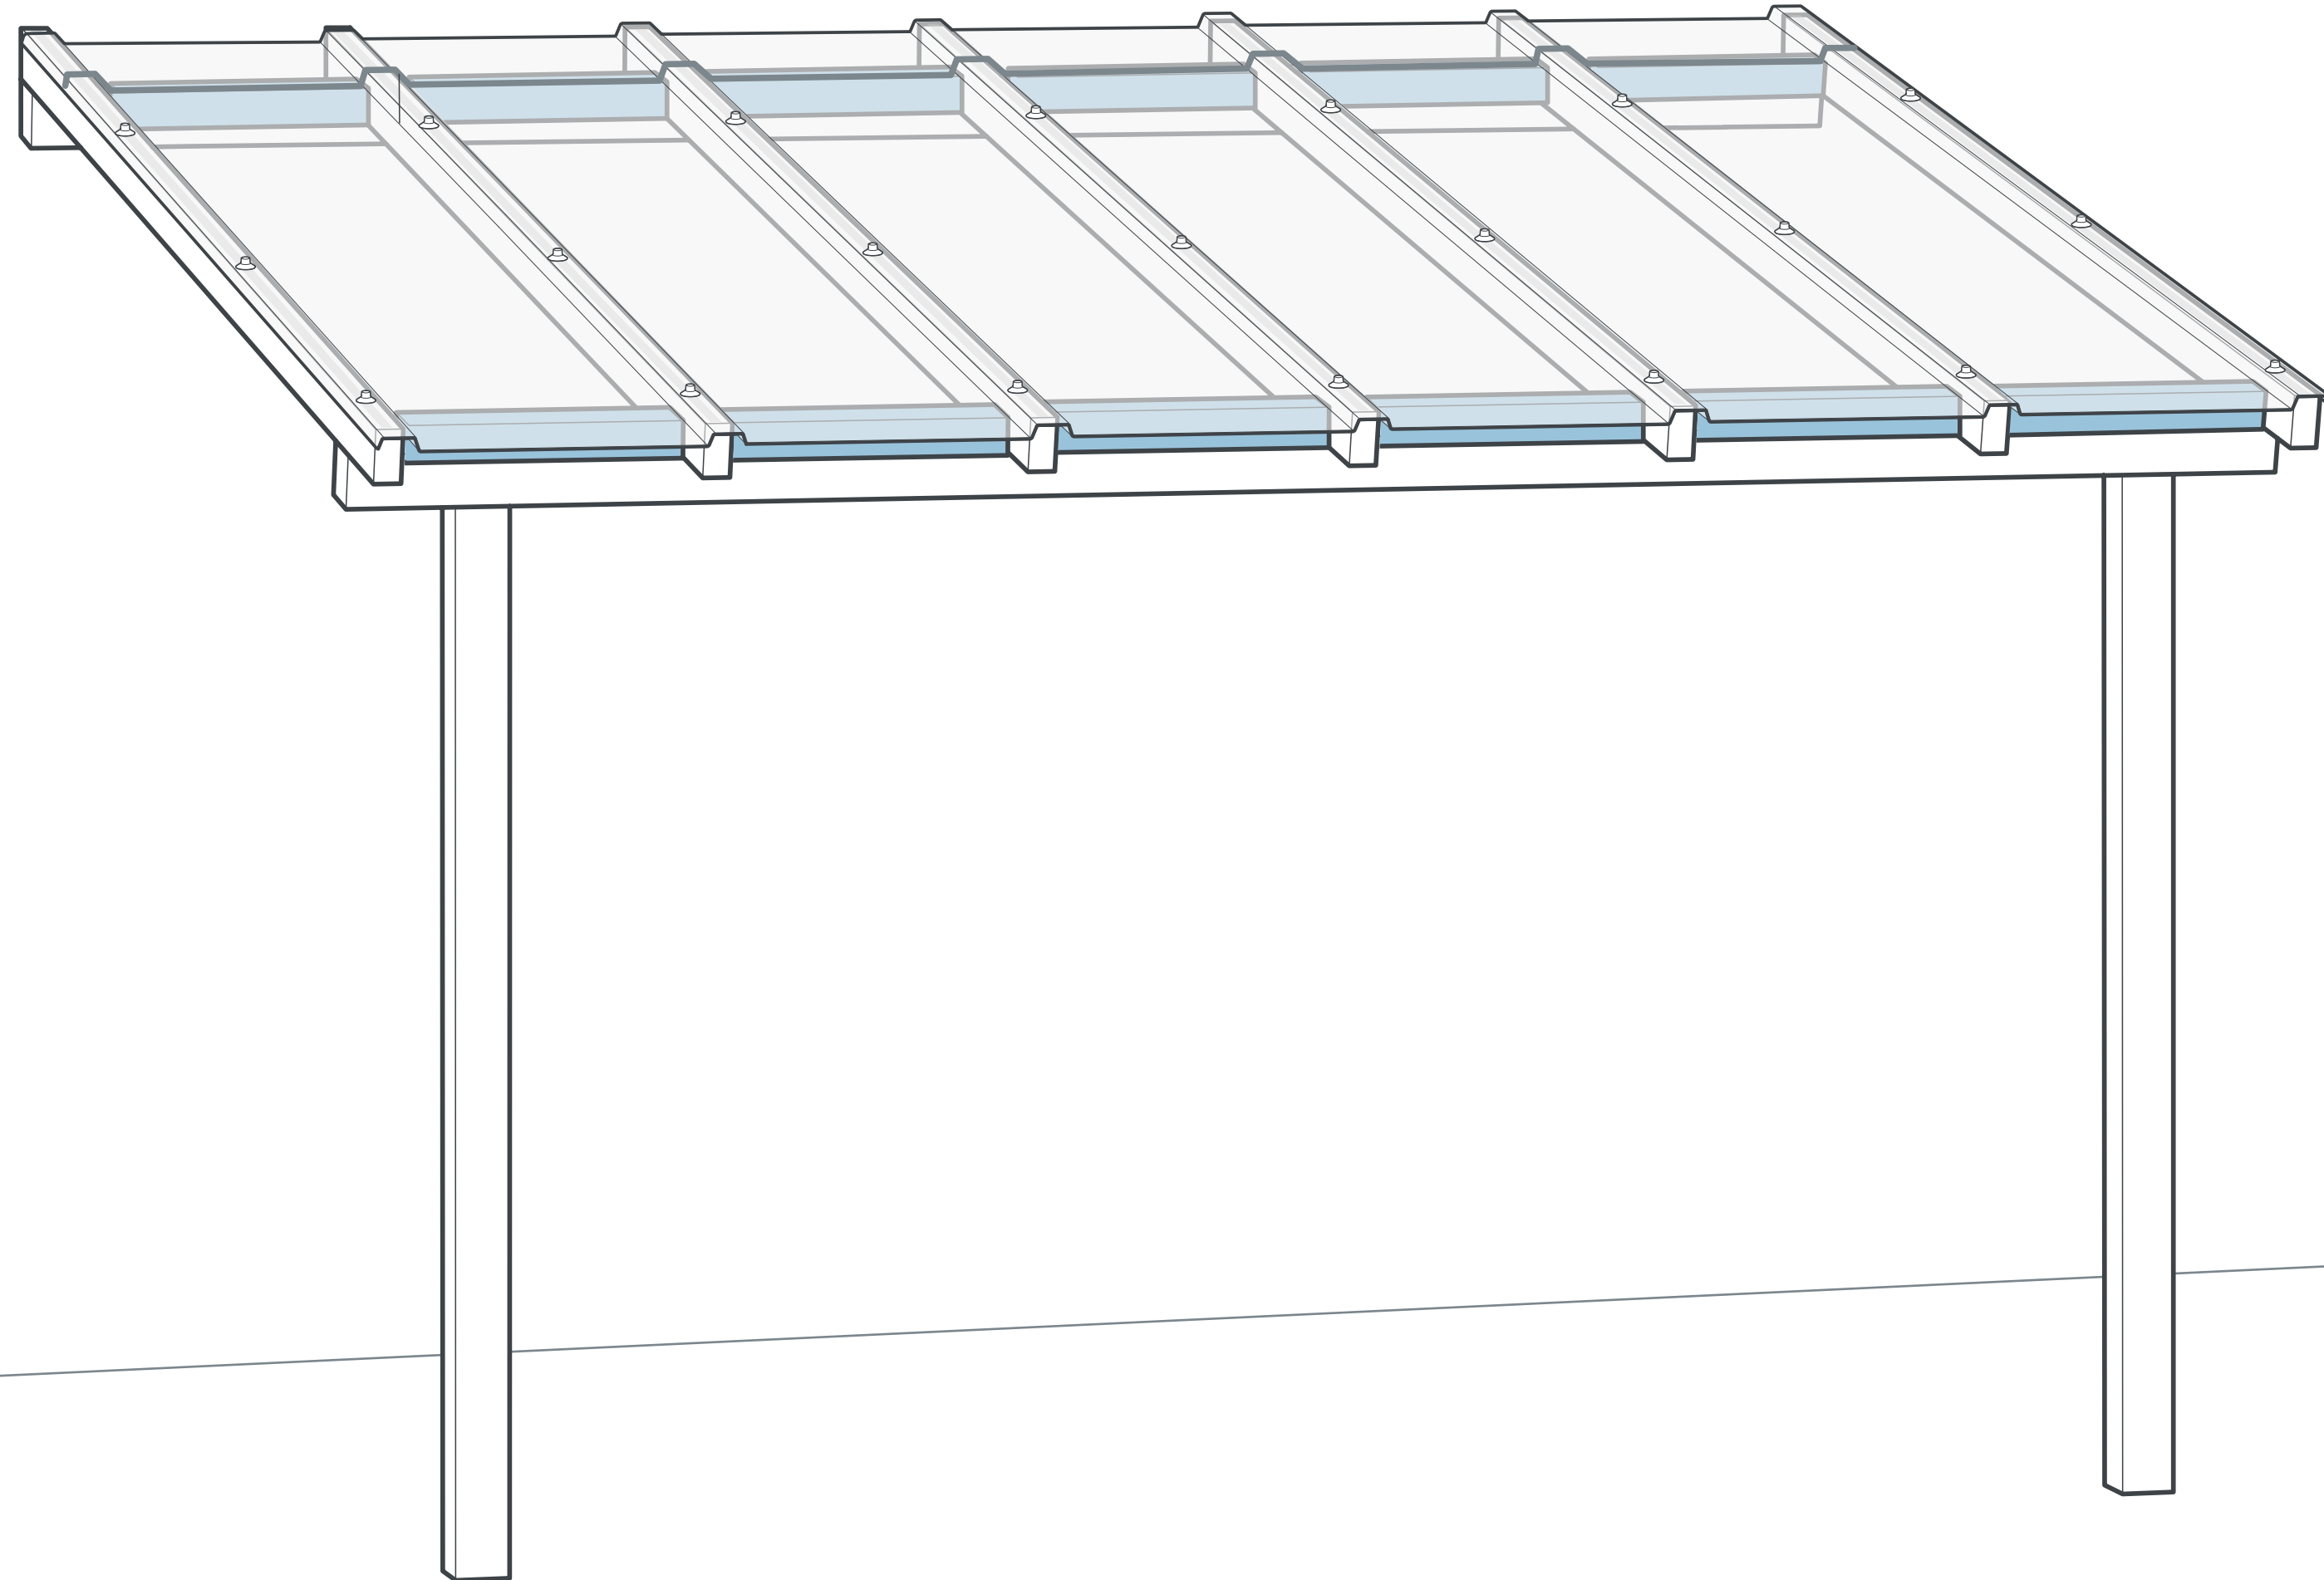
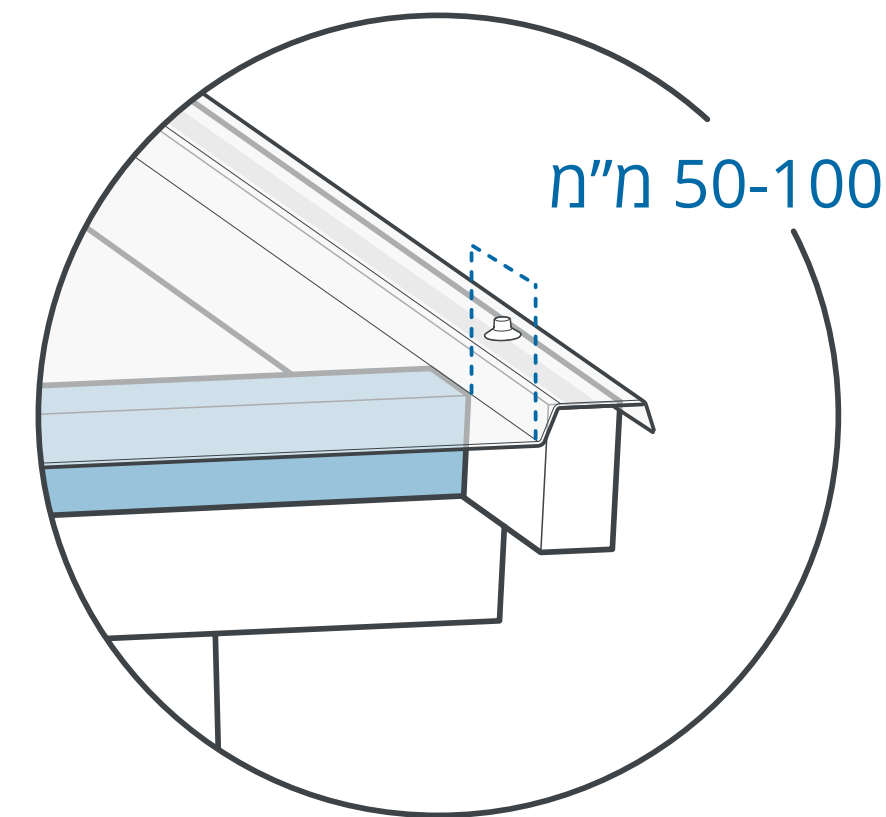
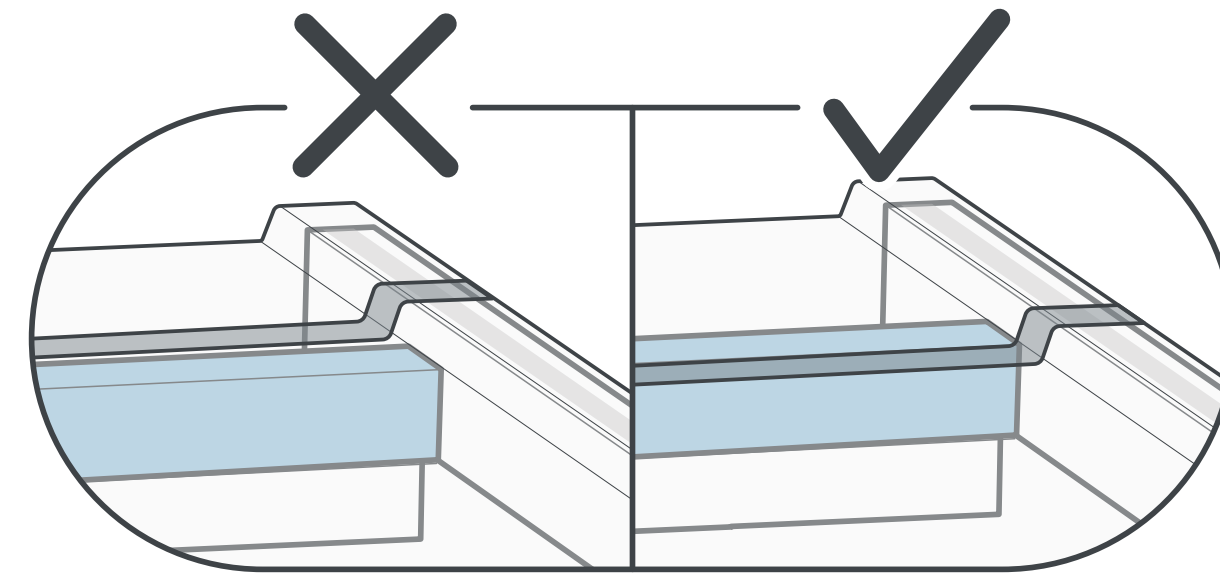


09




מפגש קיר

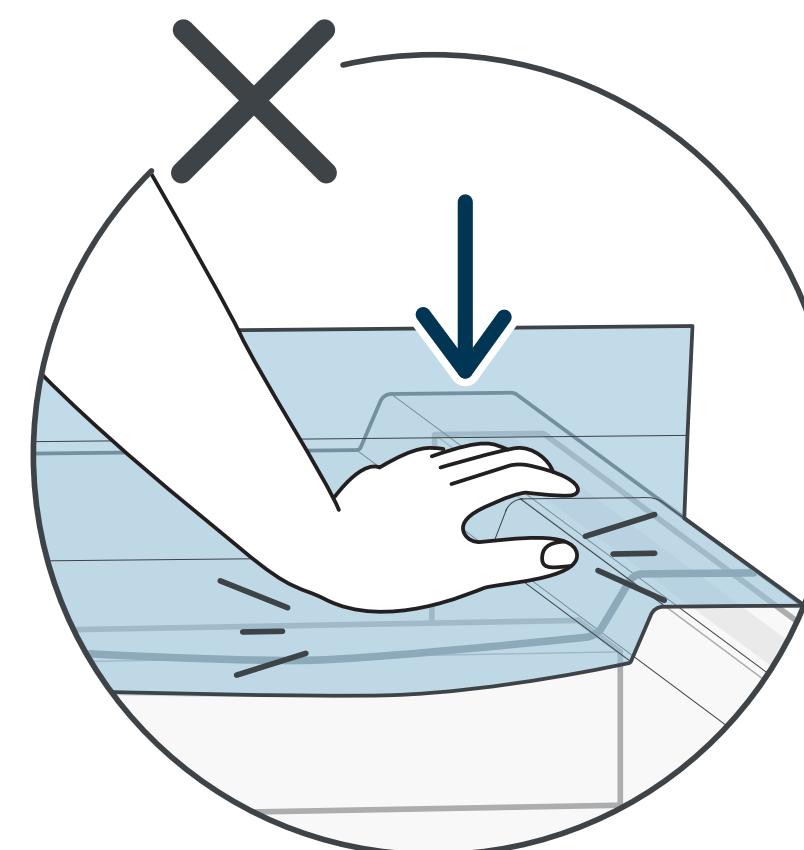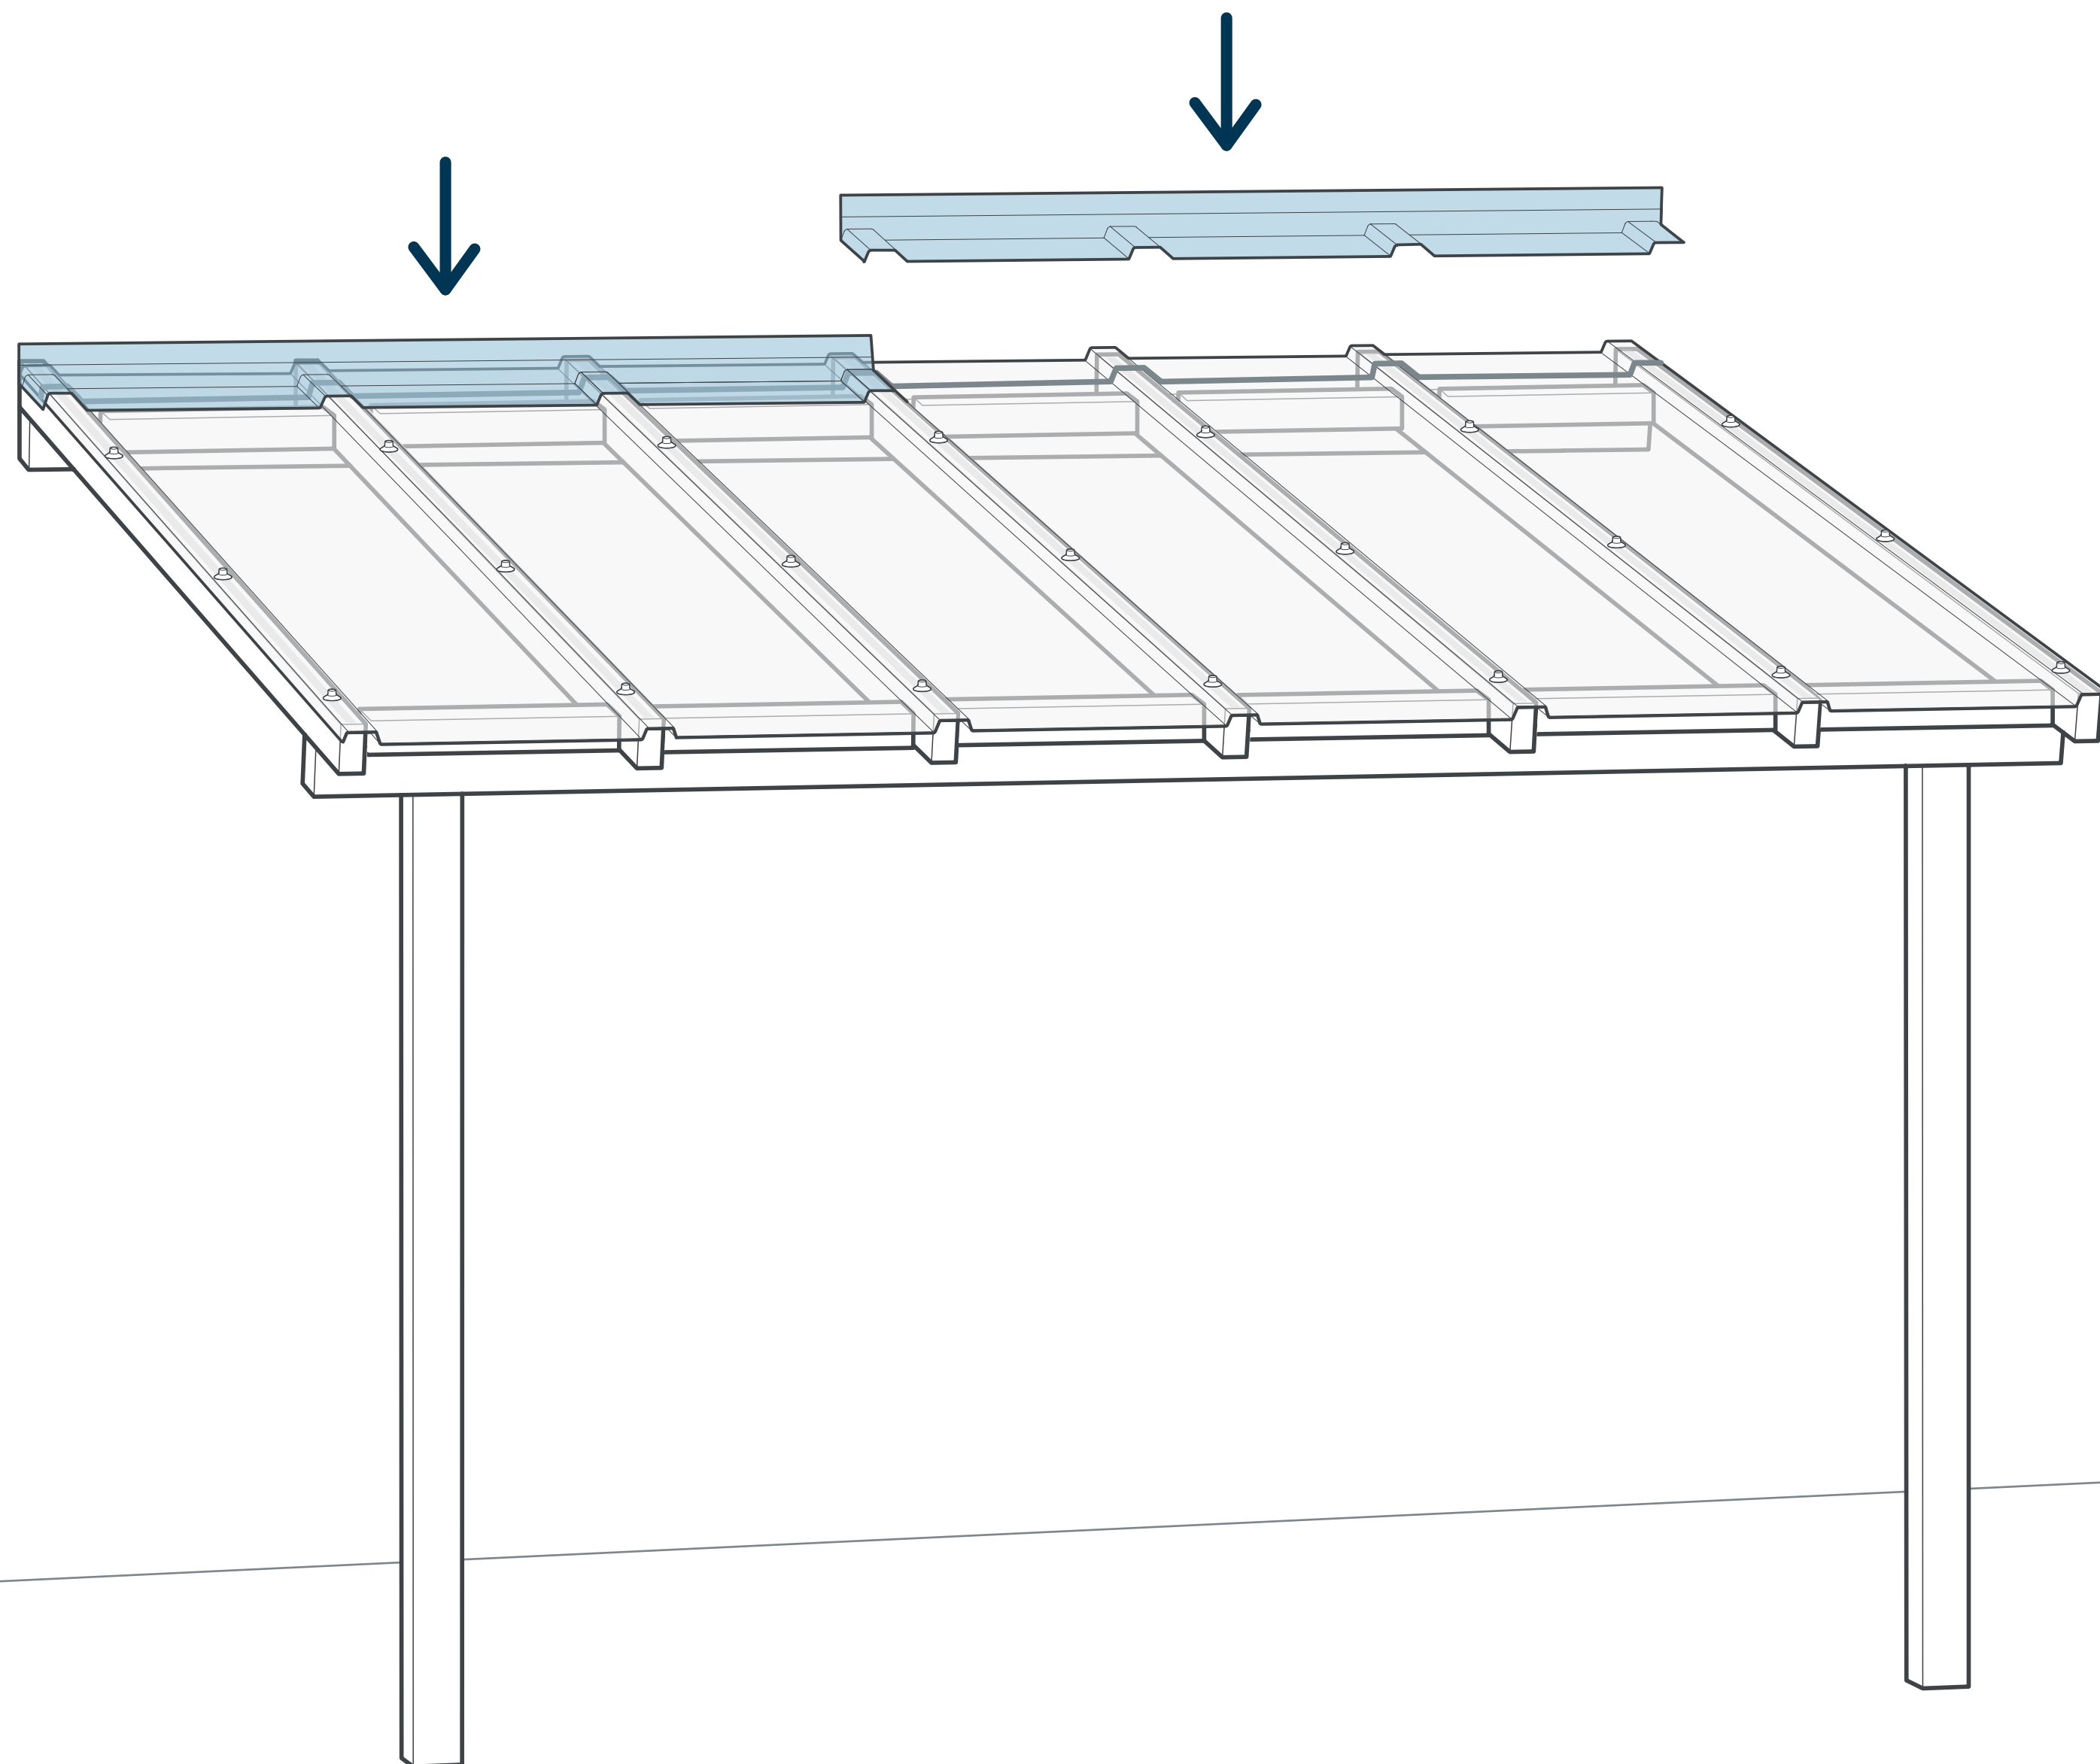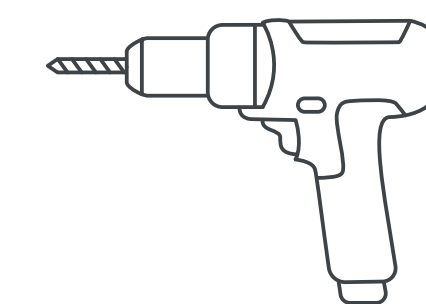

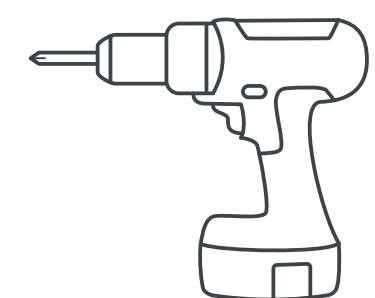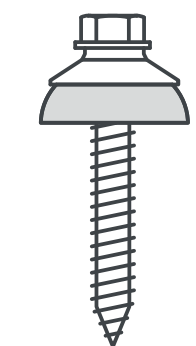
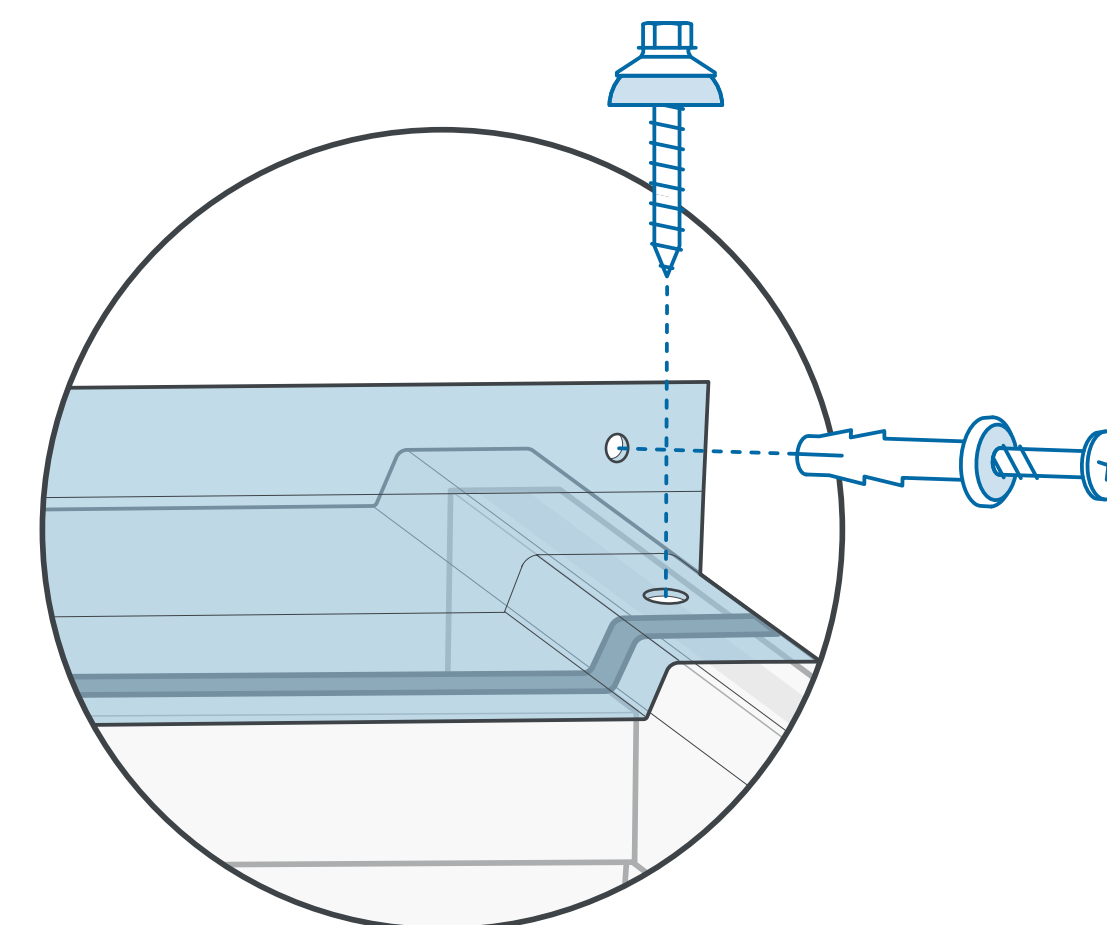
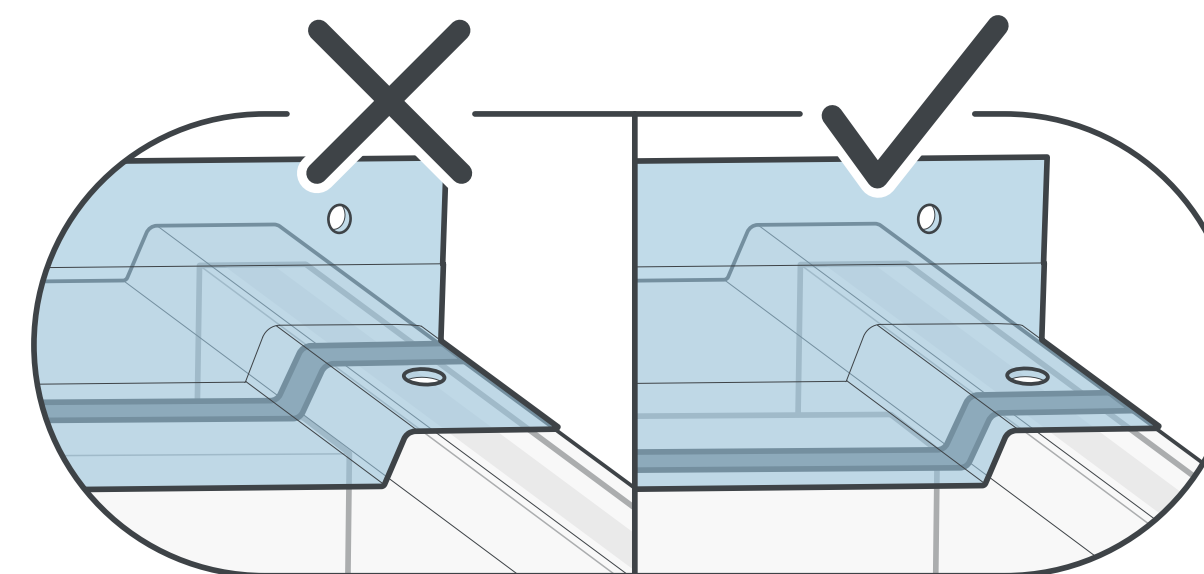
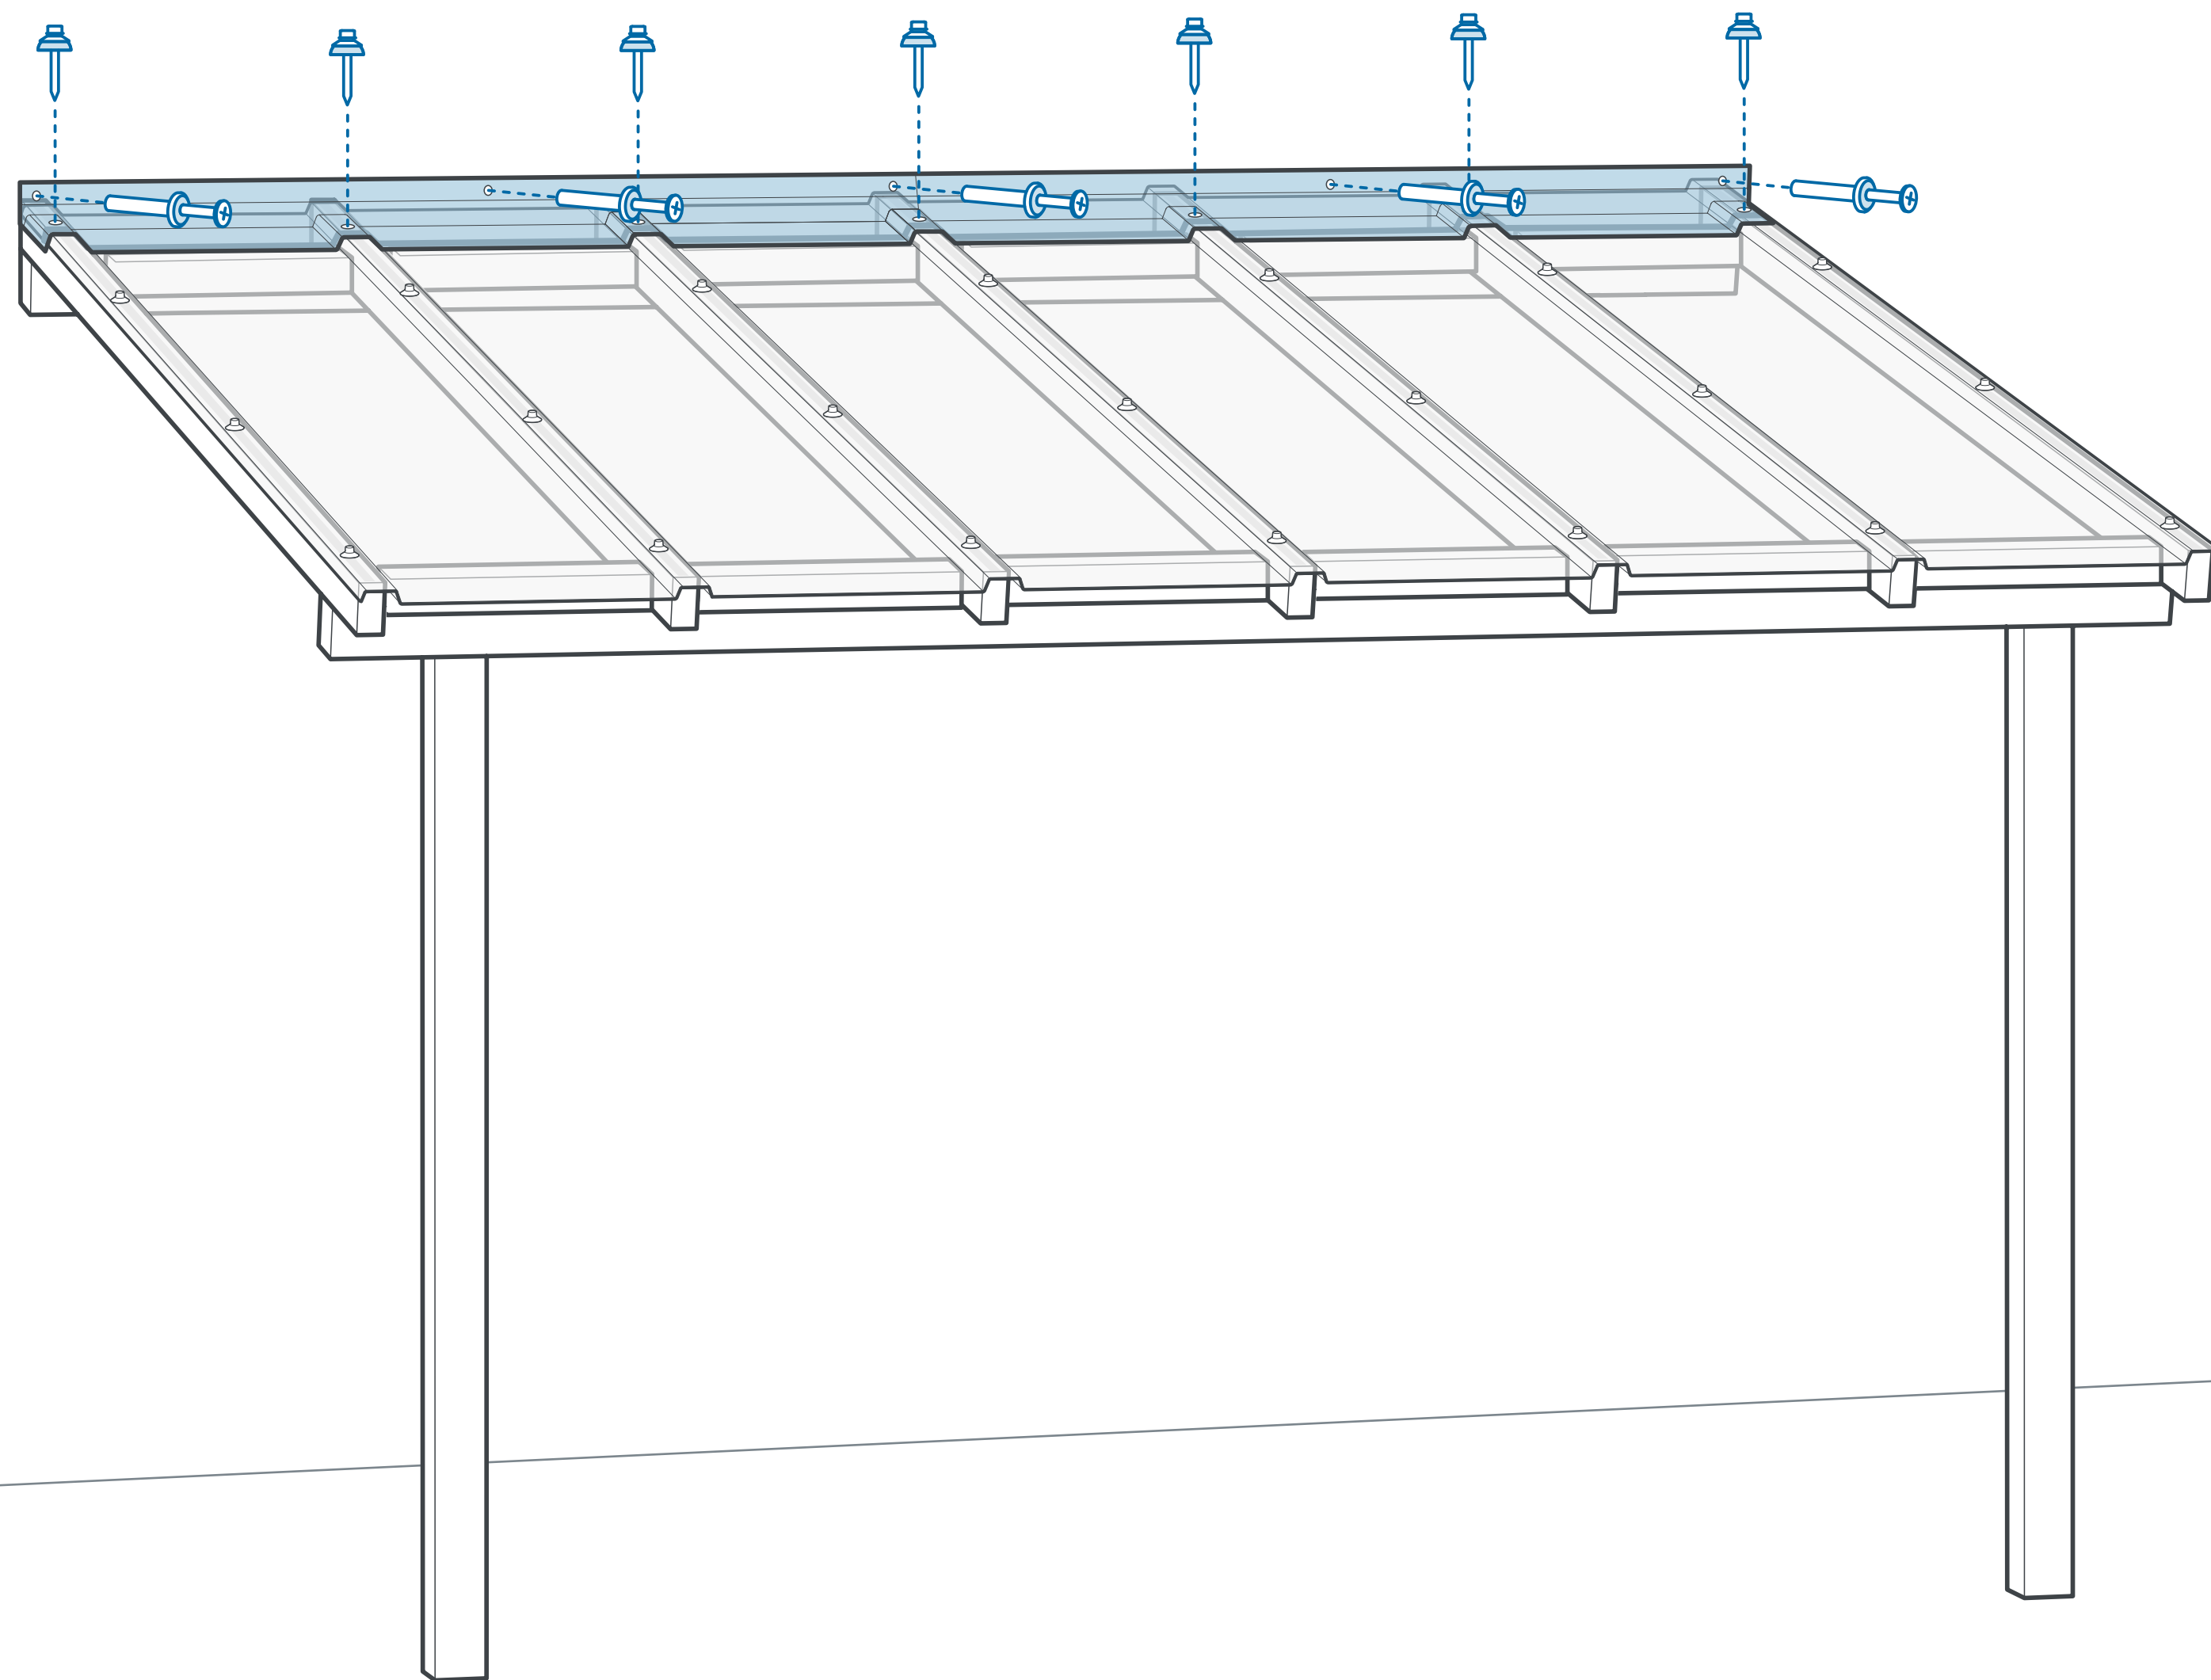


11

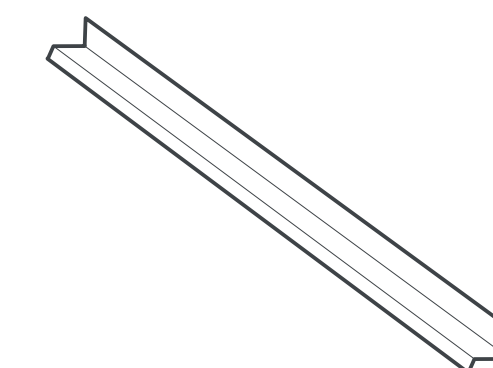


מפגש קיר צד


נמכר בנפרד
(לא ע"י פלורם)

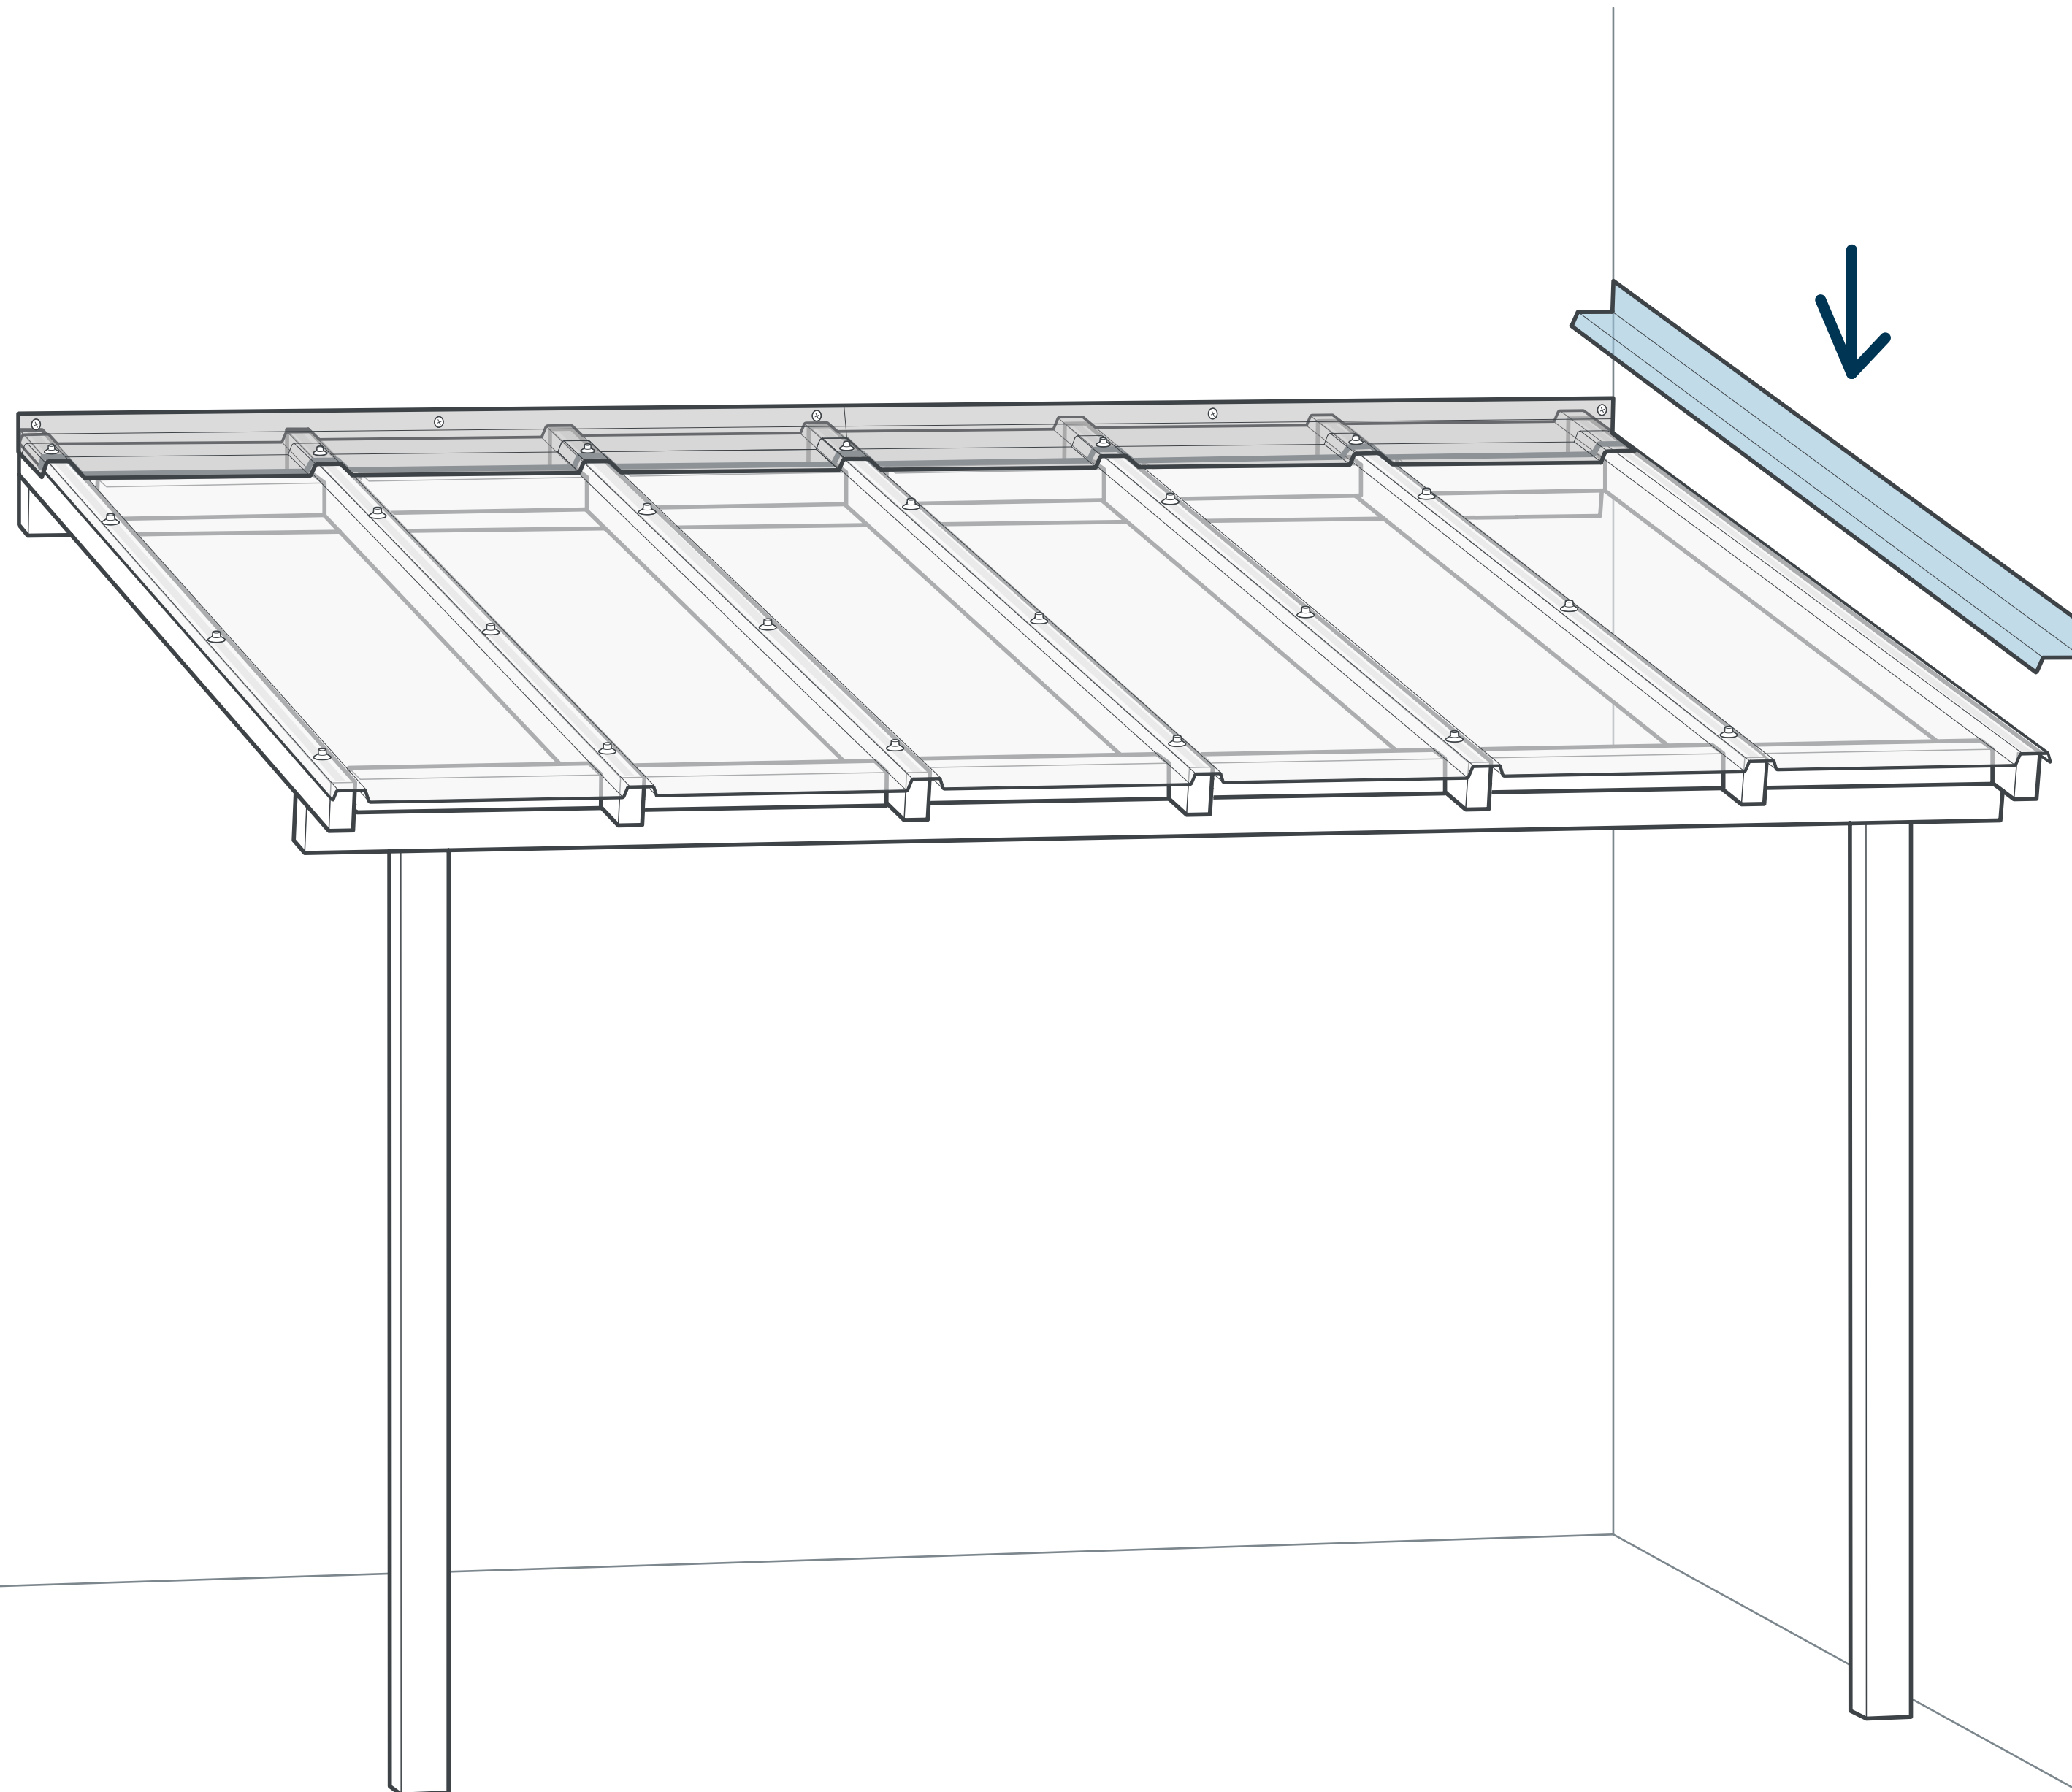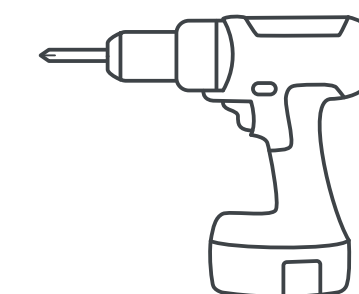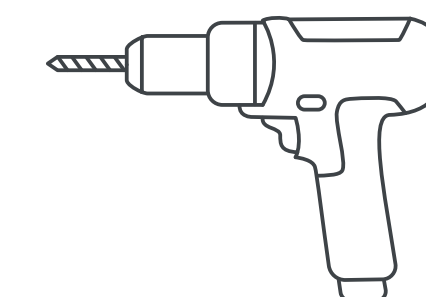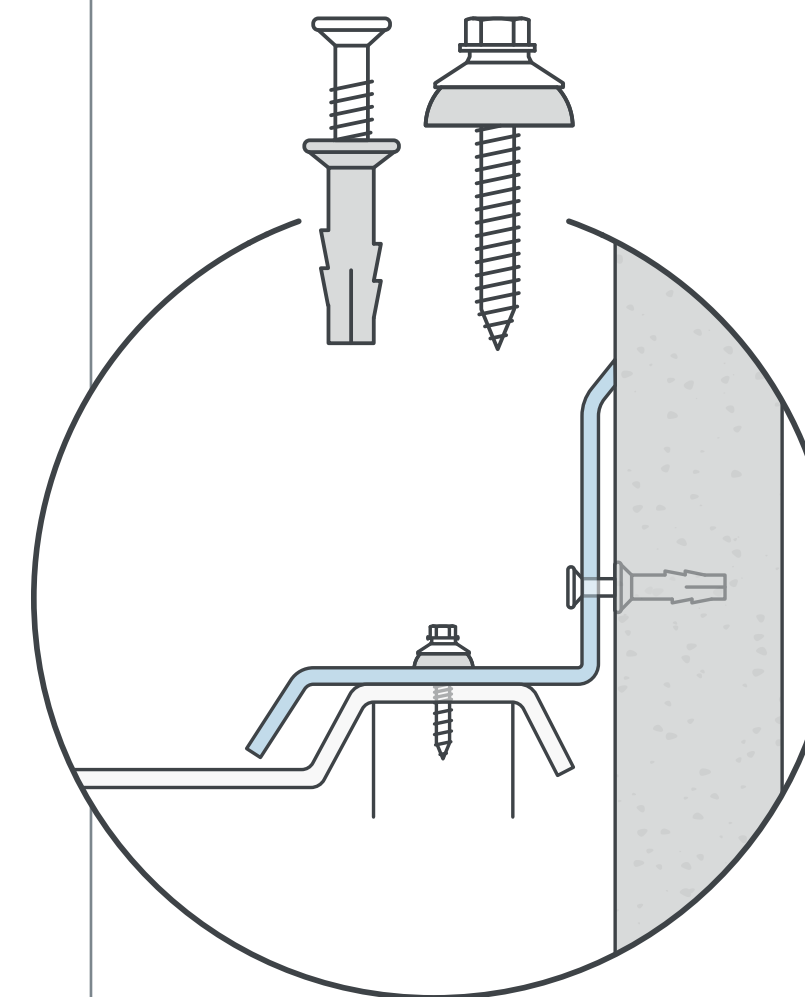




12

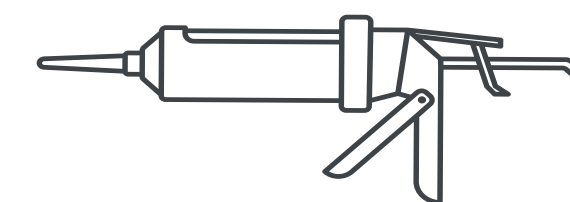


יש להשתמש בסילקון מוגן UV
ומתאים לשימוש עם
פוליקרבונט

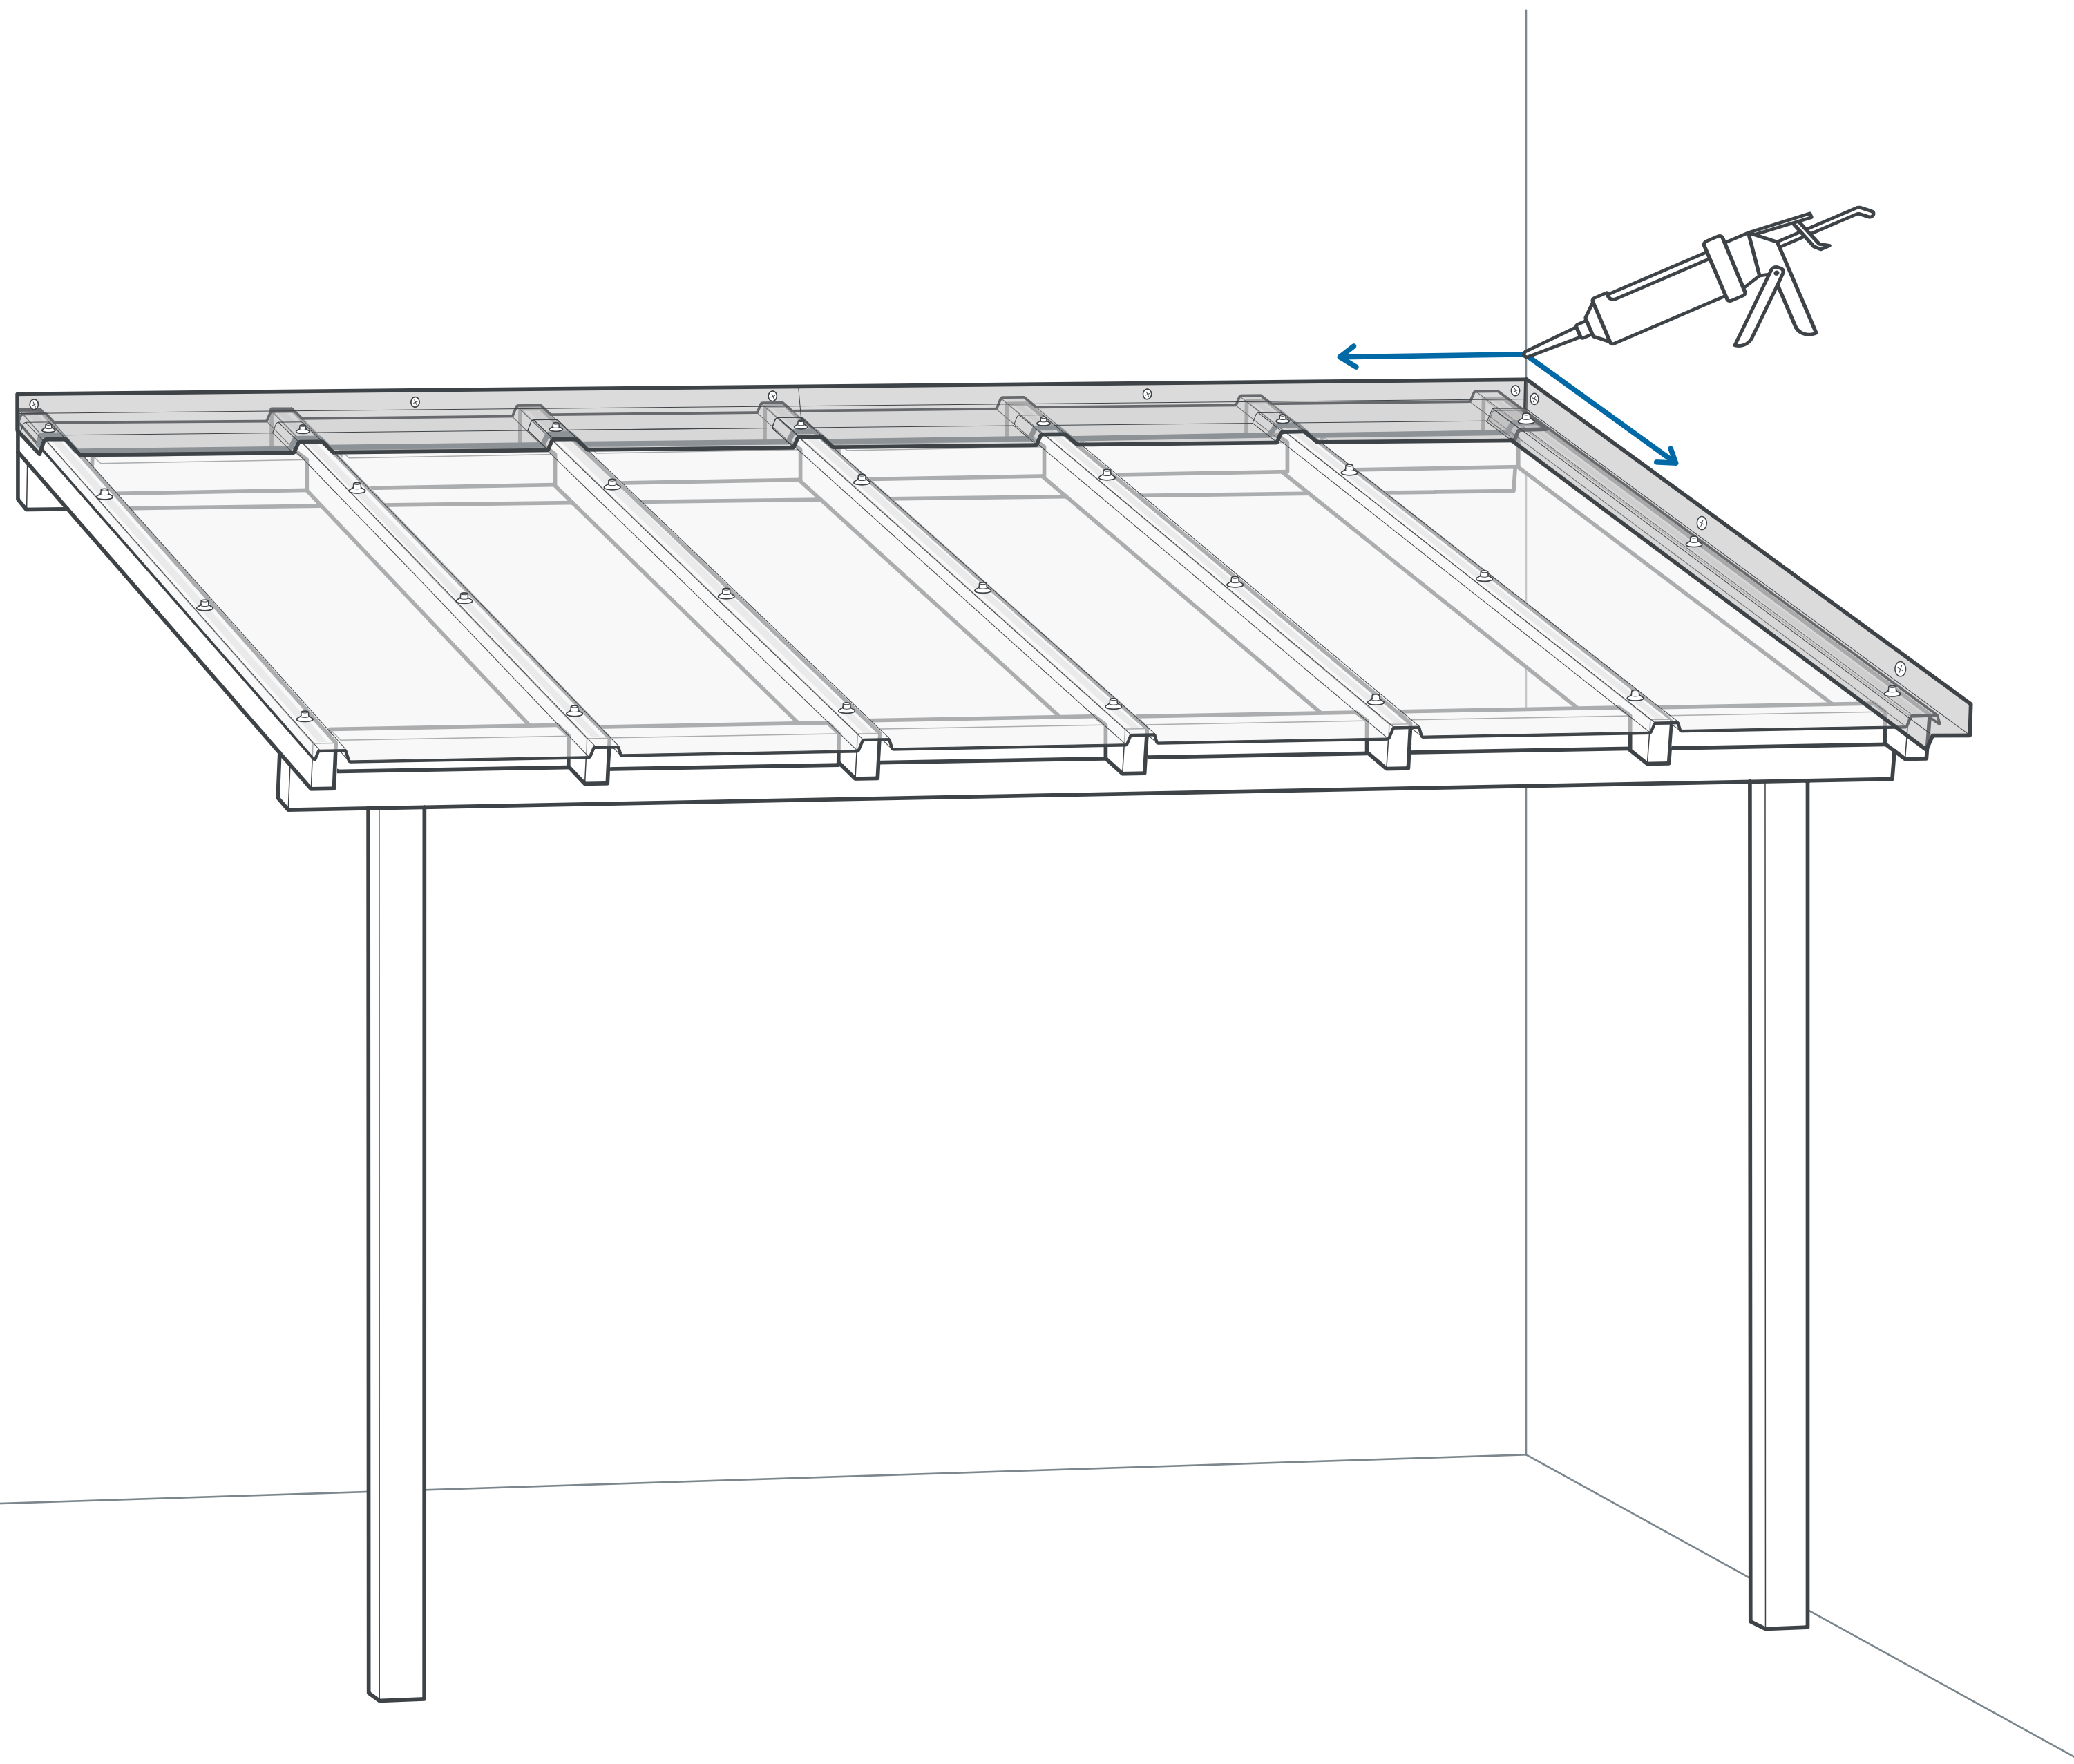




13

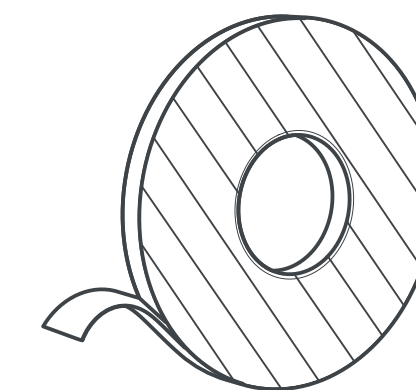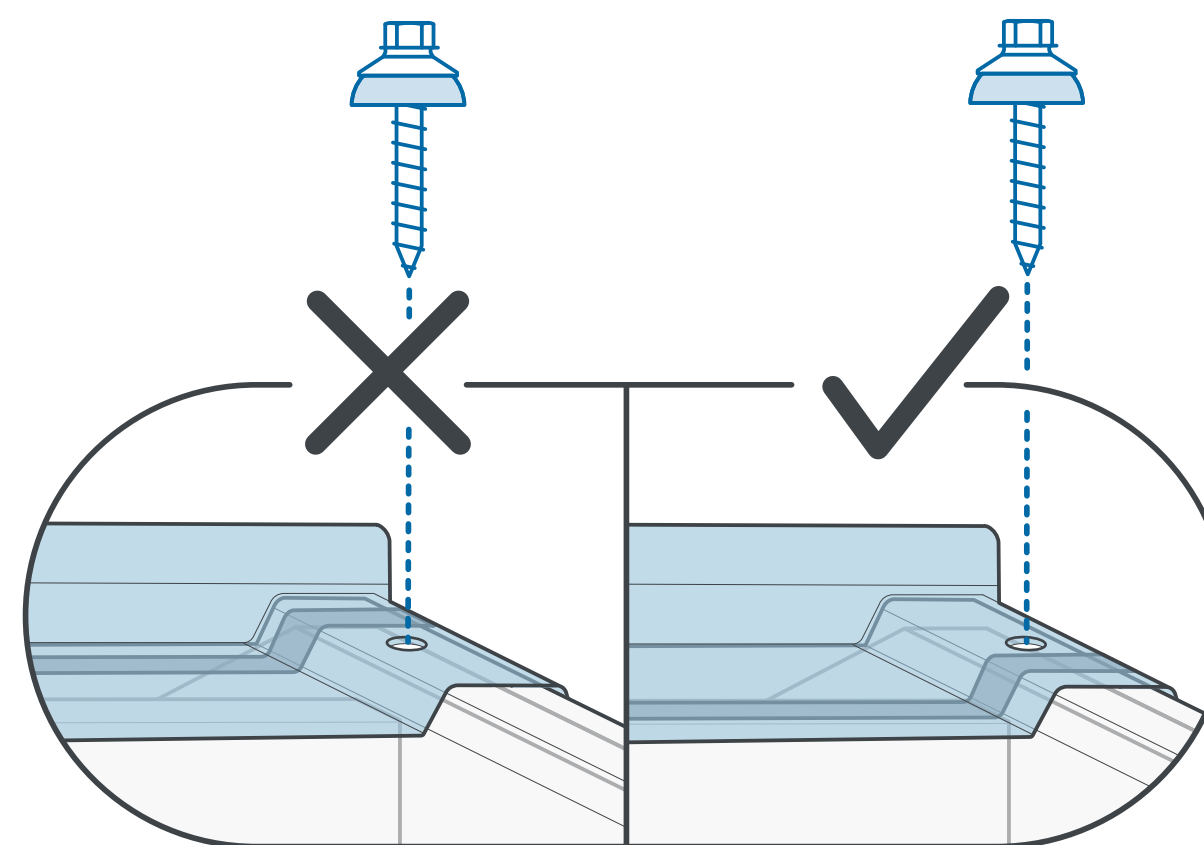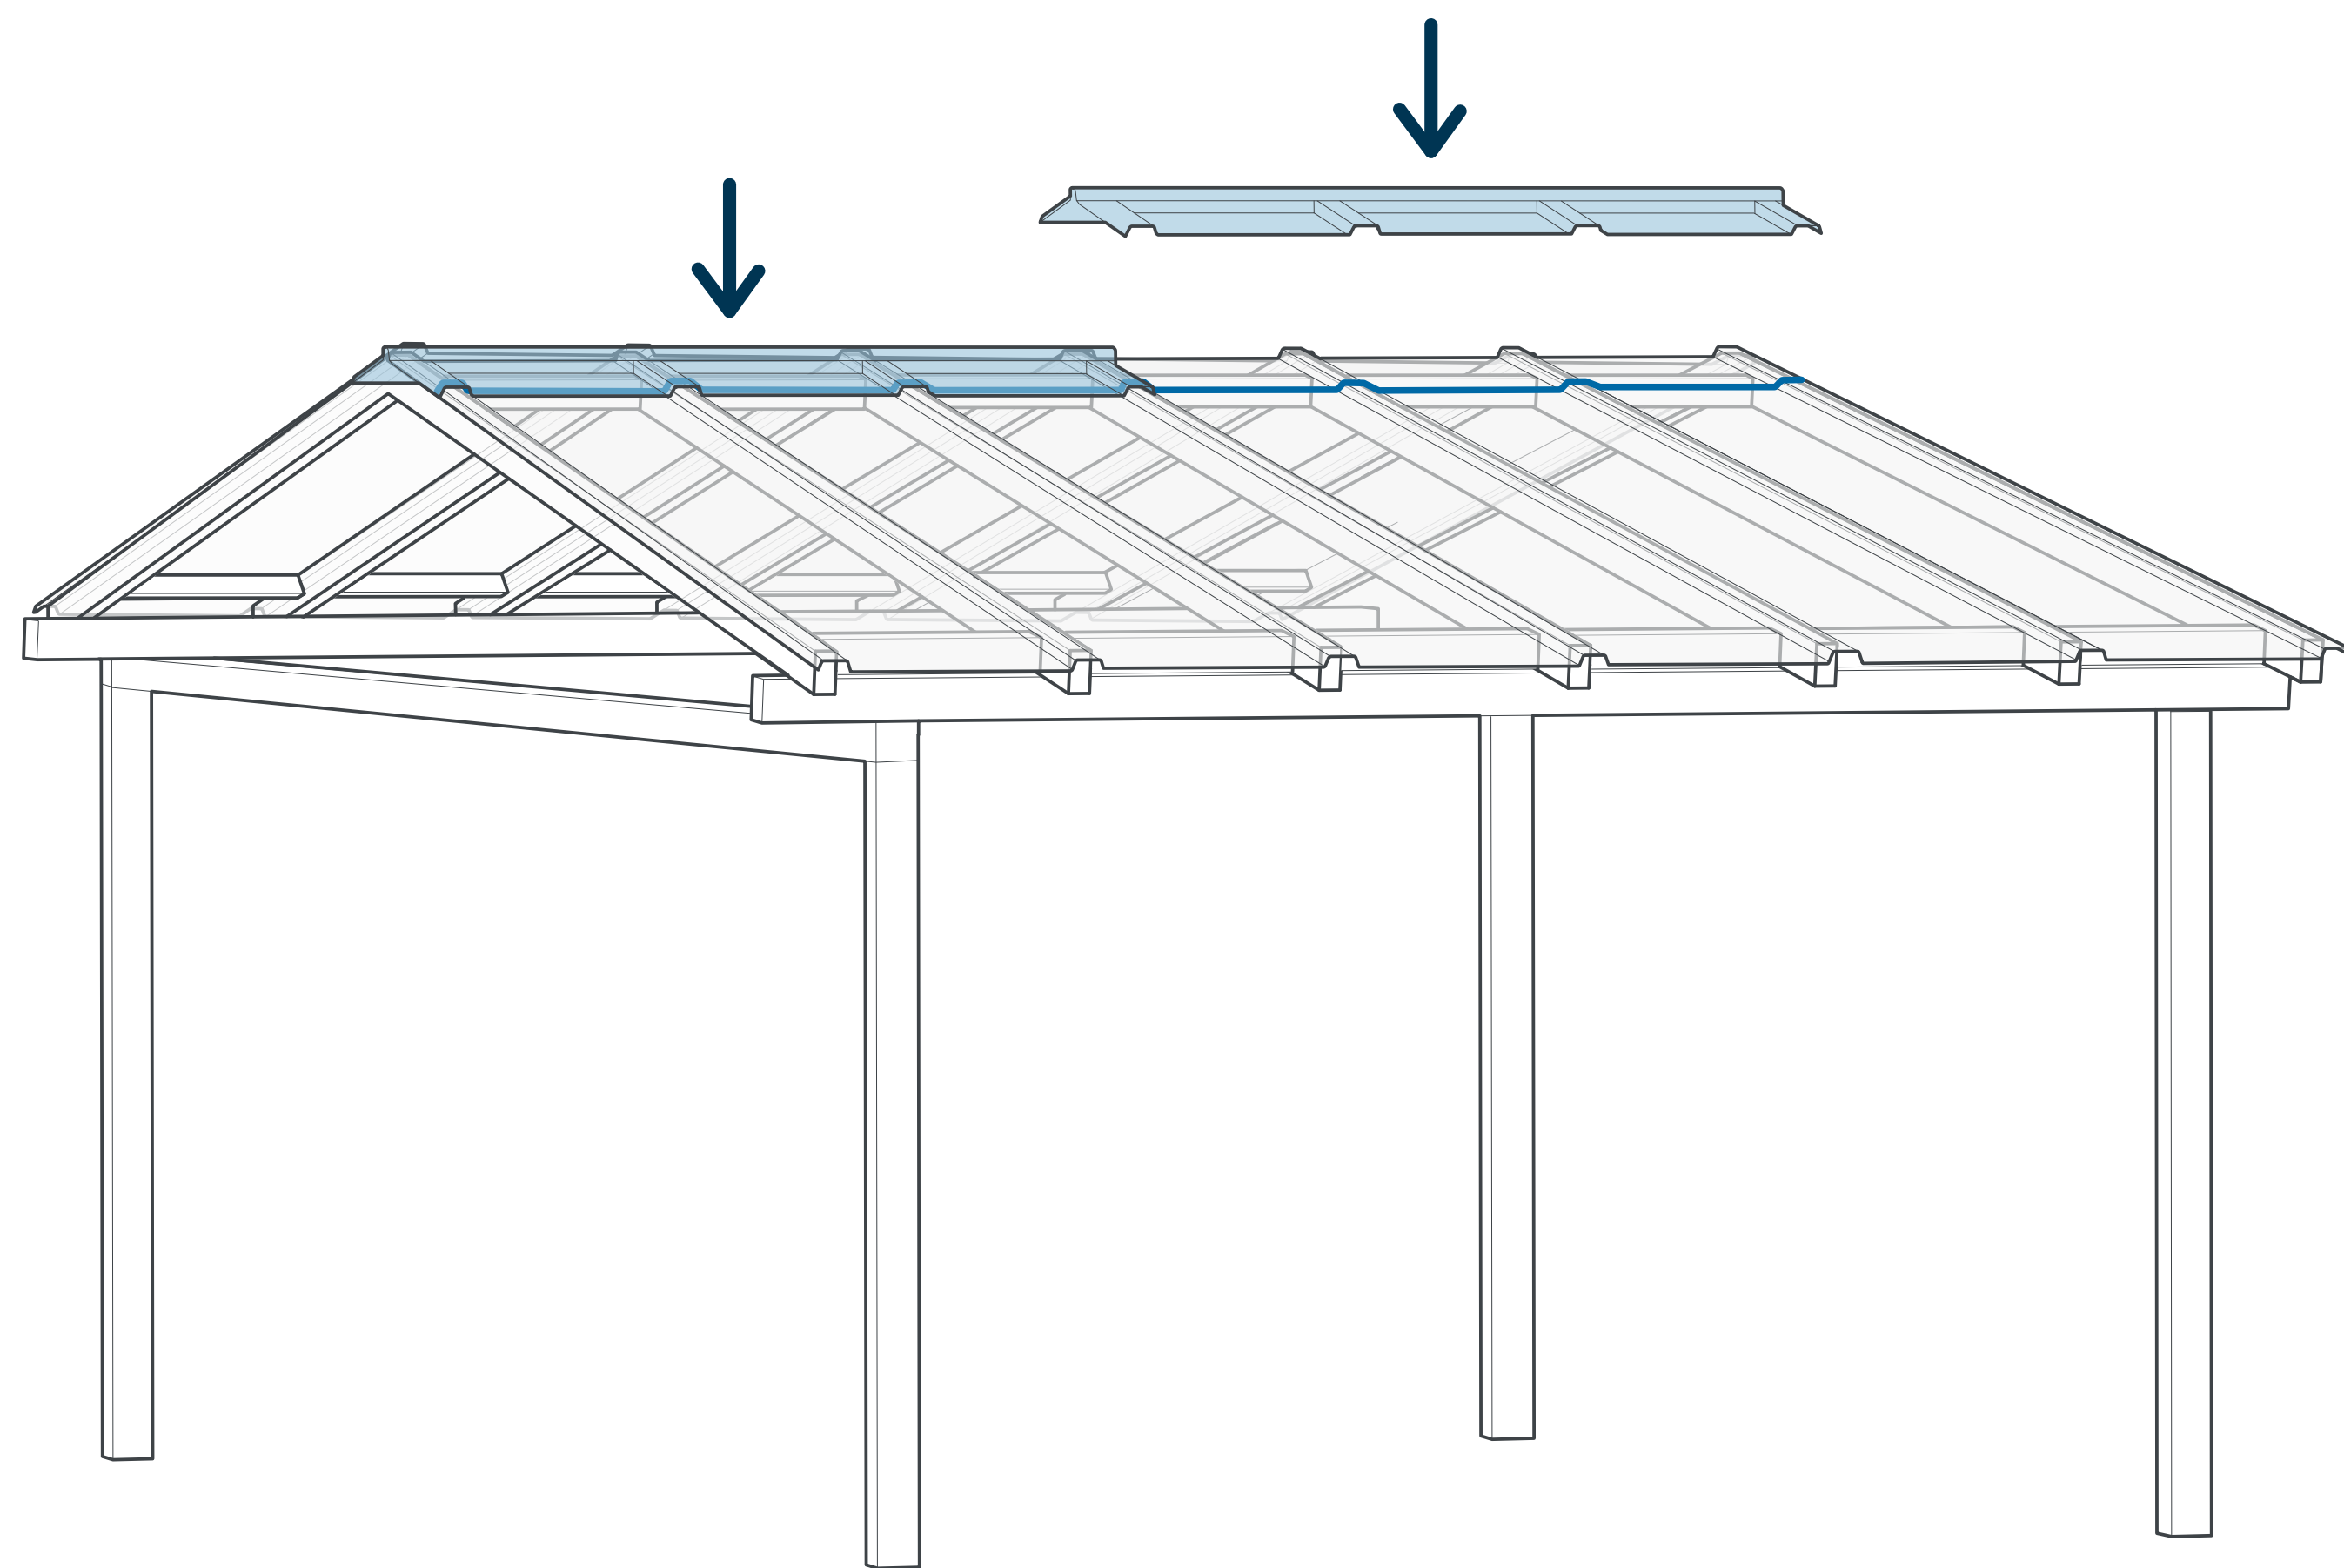





סרט איטום בוטילי
(פנאלסטיק)



רוכב קוודקוד





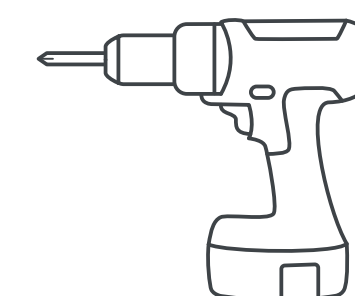
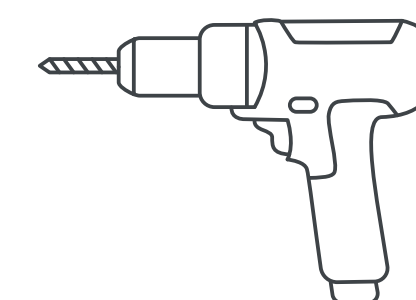
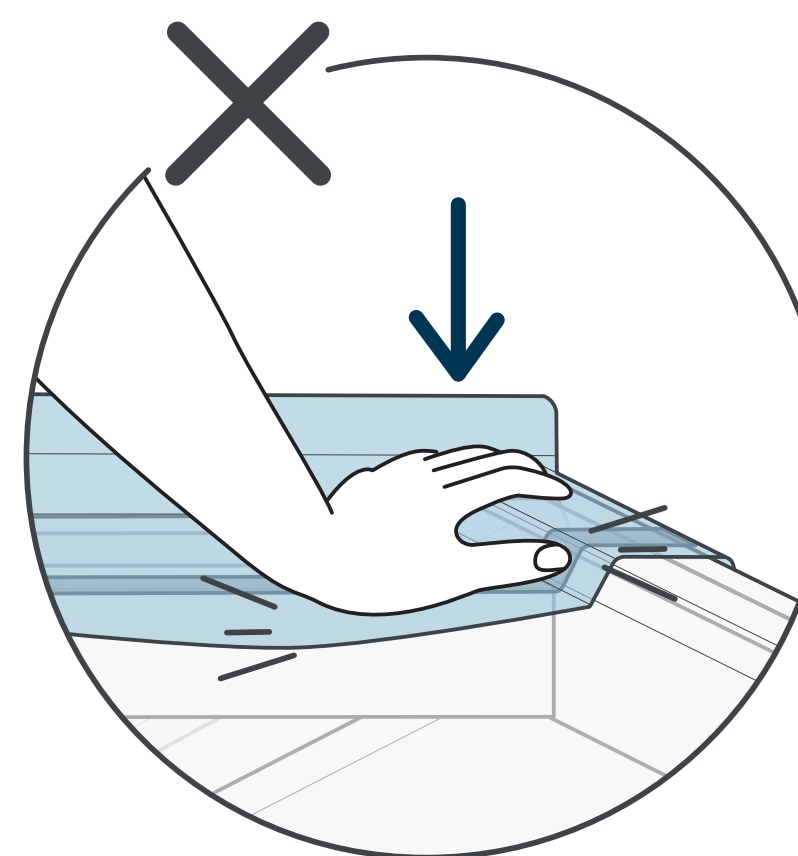


התקנת מרישים

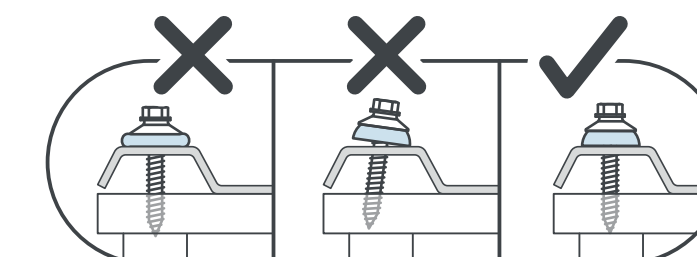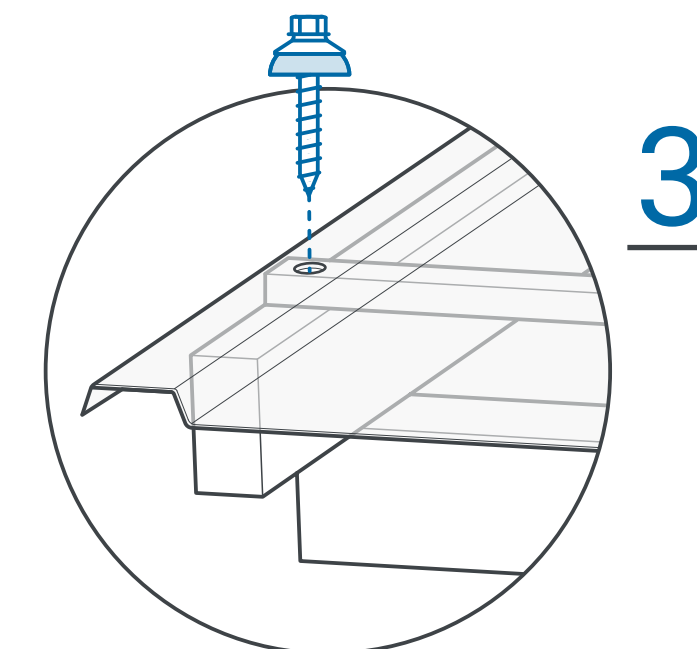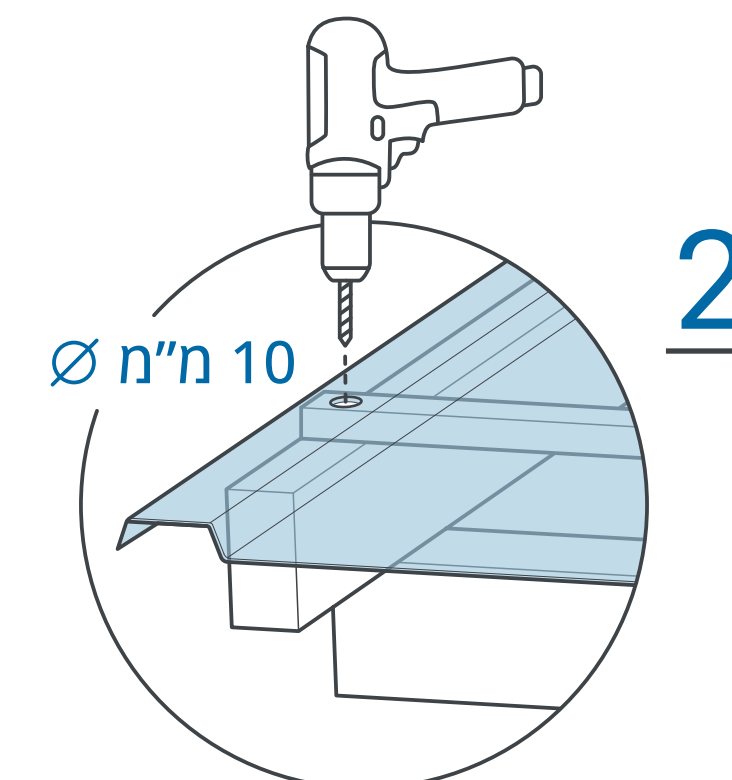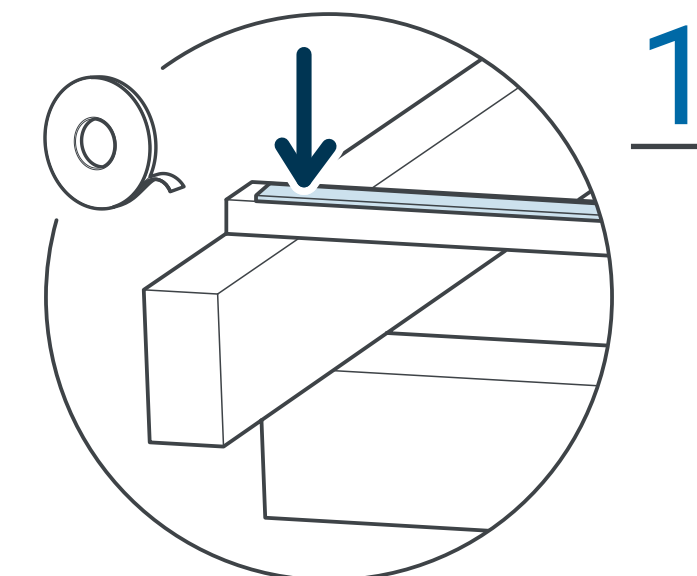

(נ"מ 50X6.5) 2" X 1/4"
עם אטם 25 נ"מ

נ"מ 1300-1000

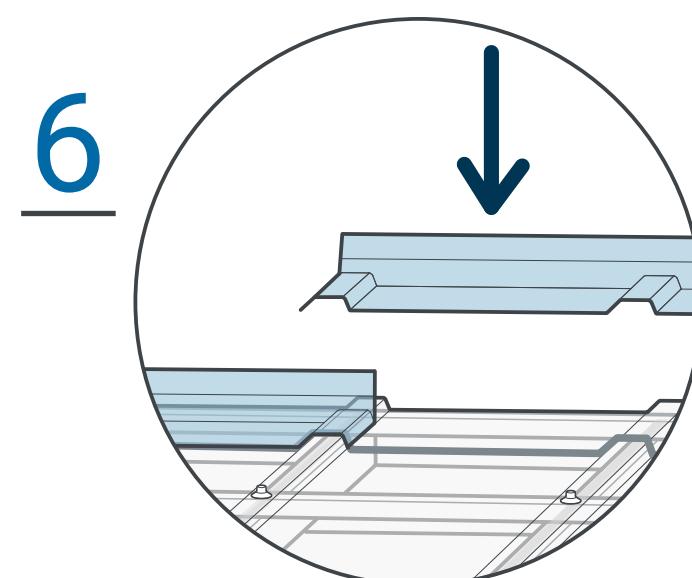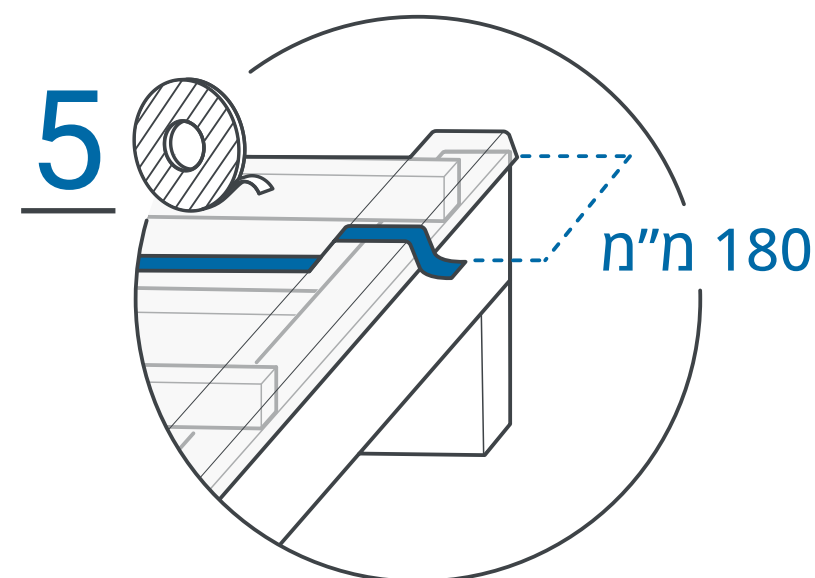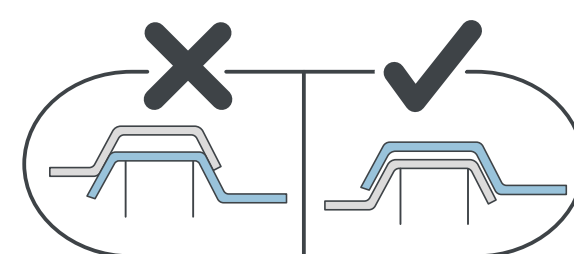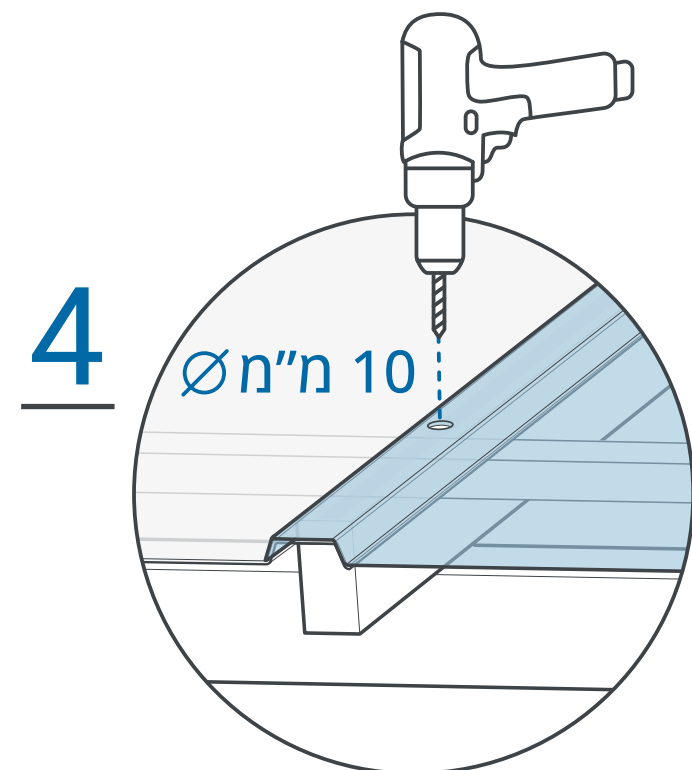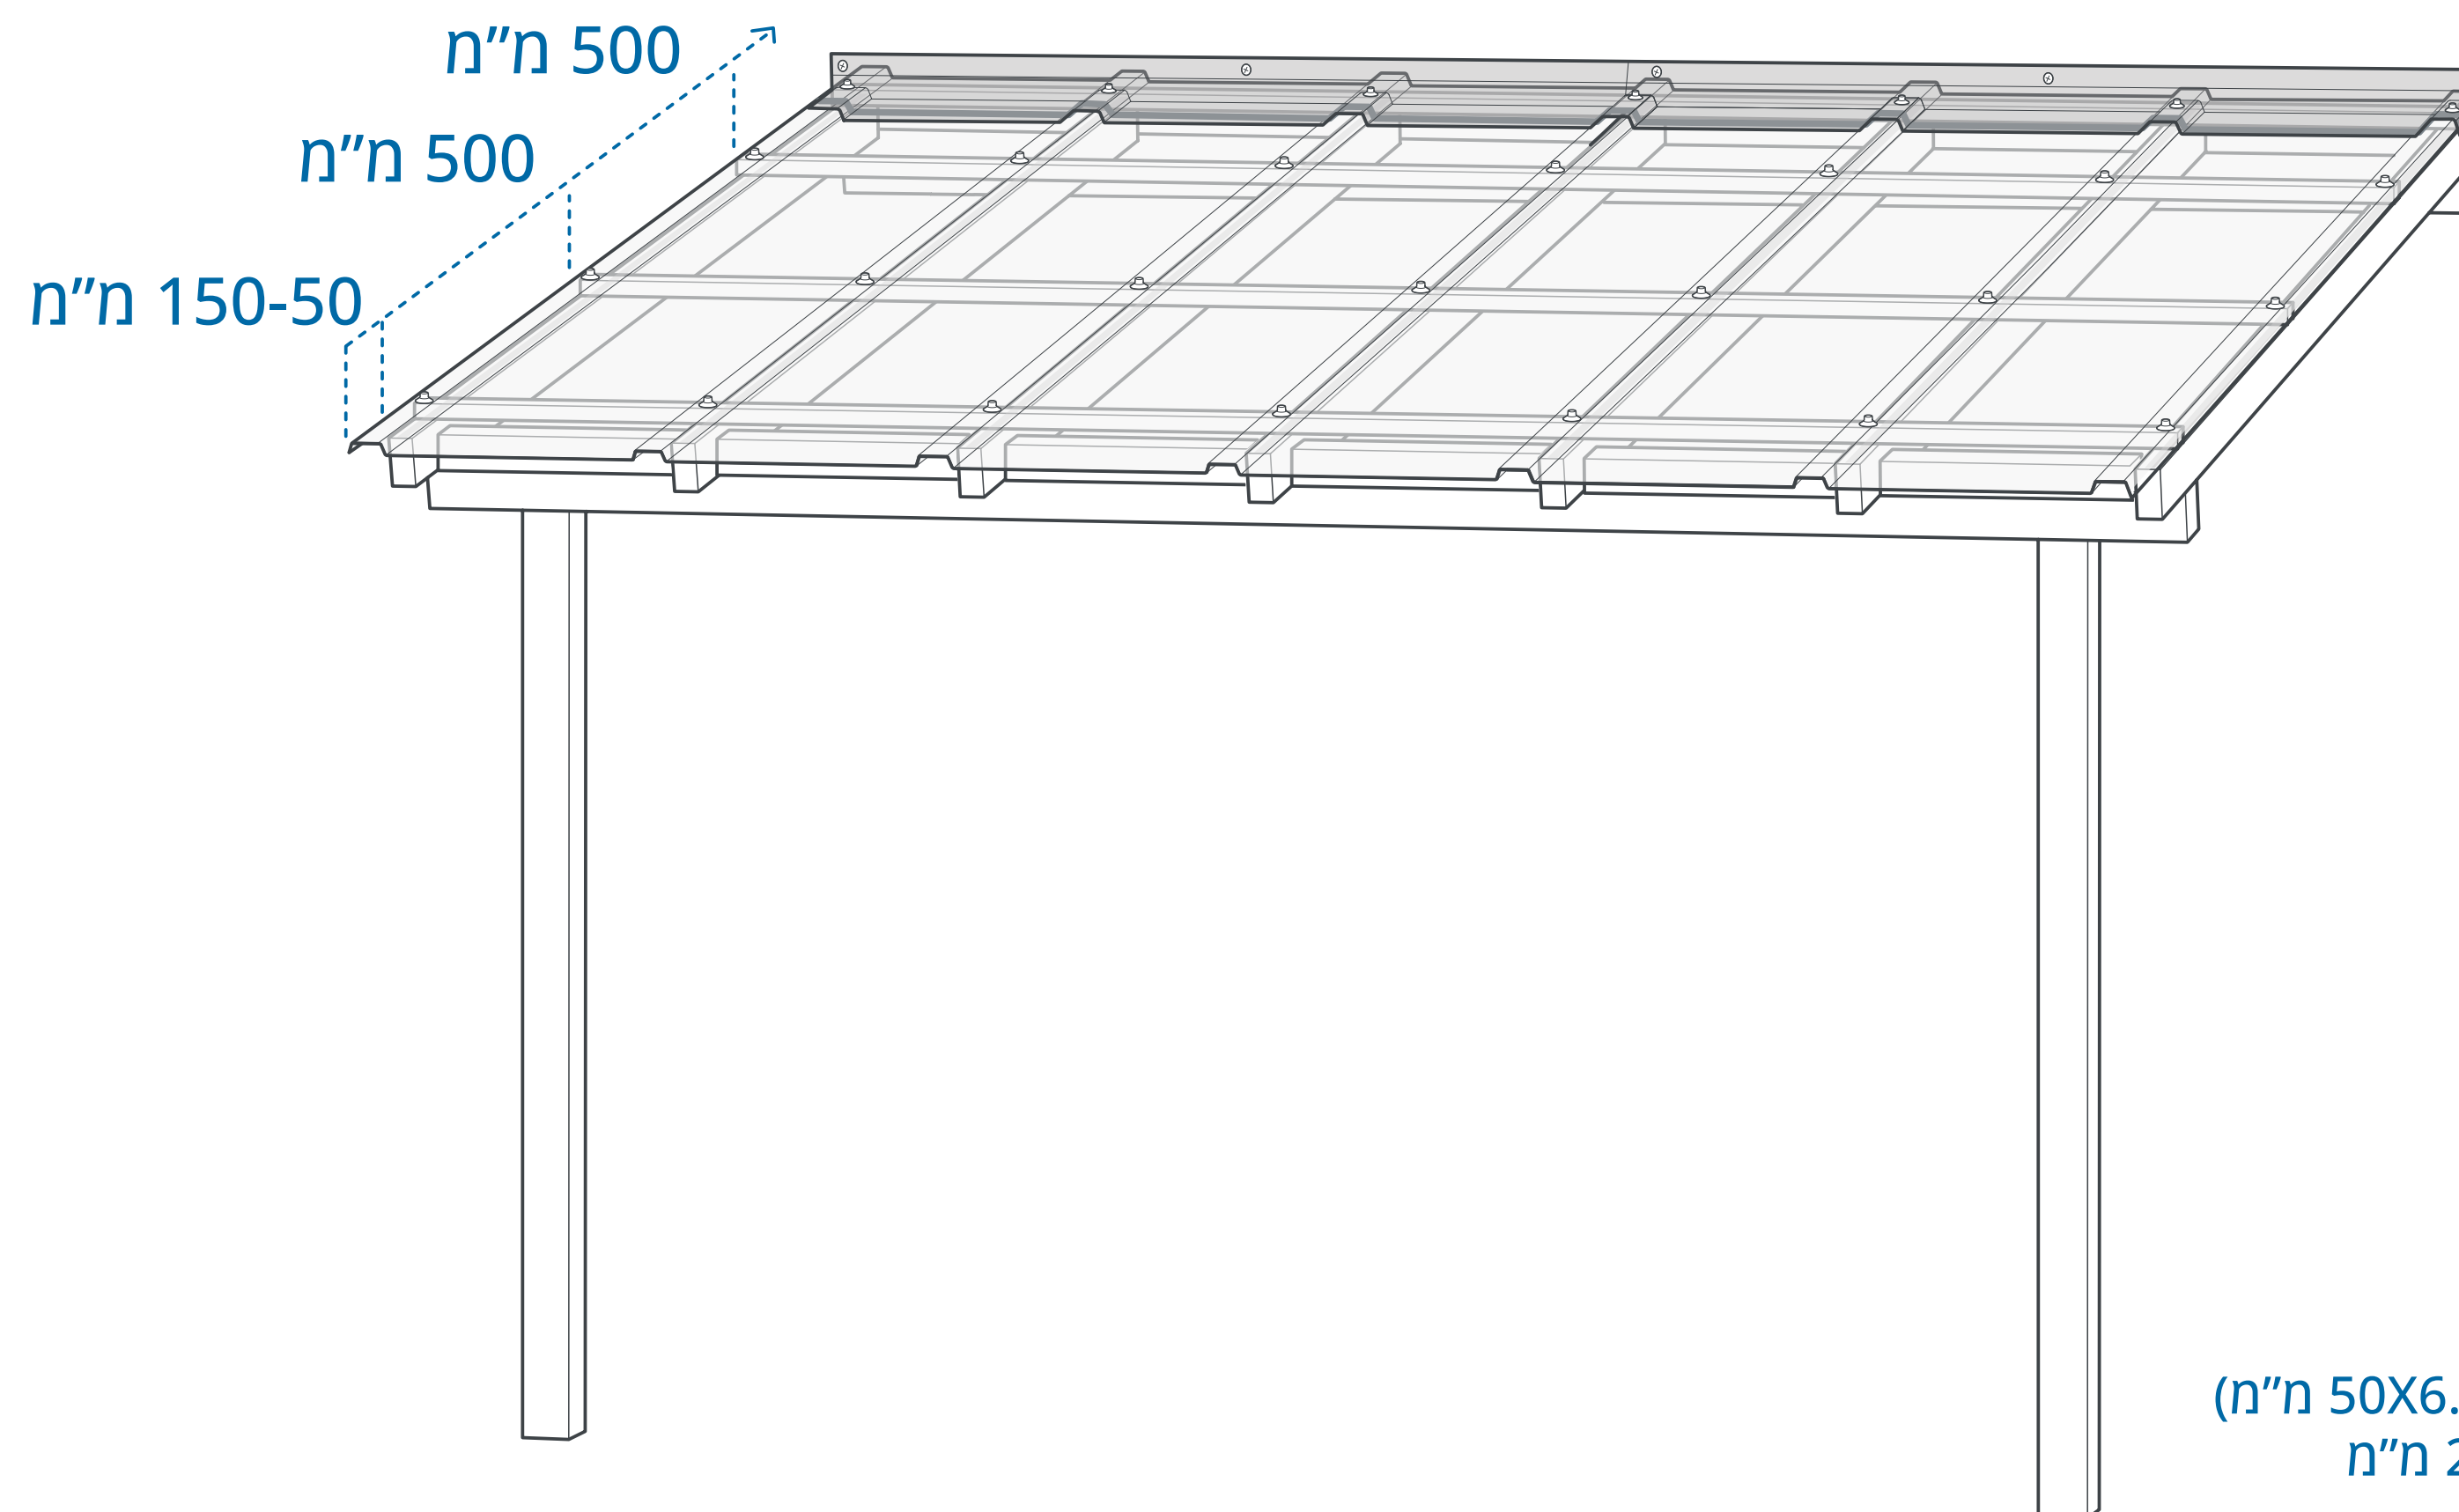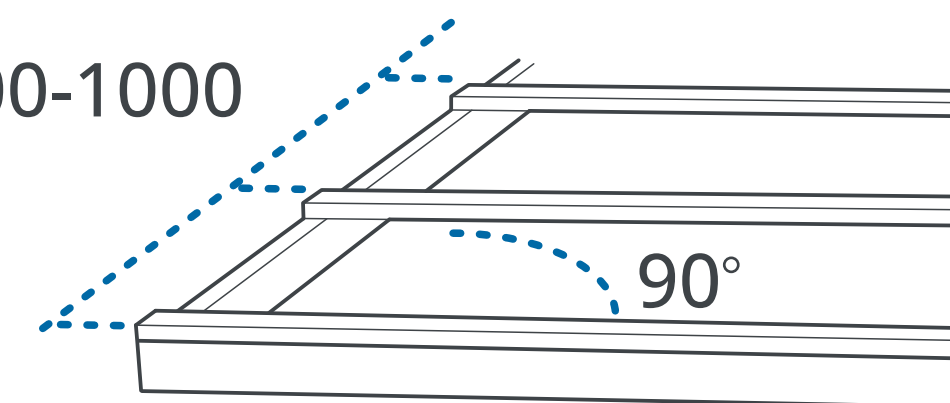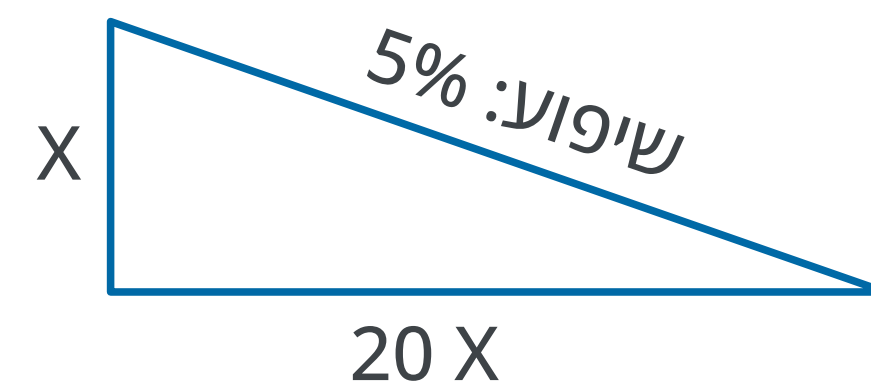



www.palram.com

In as much as Palram Industries has no control over the use to which others may put the material, it does not guarantee that the same results as those described herein will be obtained. Each user of the material should make his own tests to determine the material's suitability for his own particular use. Statements concerning possible or suggested uses of the materials described herein are not to be construed as constituting a license under any Palram Industries patent covering such use or as recommendations for use of such materials in the infringement of any patent. Palram Industries or its distributors cannot be held responsible for any losses incurred through incorrect installation of the material. In accordance with our company policy of continual product development you are advised to check with your local Palram Industries supplier to ensure that you have obtained the most up to date information.

©1997 Palram Industries Ltd. | EZ Glaze™ is a trademark of Palram Industries Ltd.



601645 - 07.2025